



PATENTKATALÓGUS



 
webshop.iharosauto.hu

Audi/Volkswagen/Seat/Skoda	3
BMW/Mini/Land Rover.	14
Chrysler/Jeep	21
Citroen/Peugeot.	27
Fiat/Alfa Romeo/Lancia/Iveco	31
Ford.	35
Honda	47
Hyundai/Kia	52
Isuzu	55
Jaguar	56
Mazda	57
Mercedes/Smart.	62
Mitsubishi.	69
Nissan	73
Opel/Daewoo/Chevrolet	80
Porsche	94
Renault/Dacia	95
Rover.	99
Saab	100
SSang Yong	101
Subaru	102
Suzuki	104
Toyota/Lexus.	108
Universal	119
Volvo	135



7028

Gyári számok: 385661-S, 385661S, 6003349, 6032363, B22037, N989022

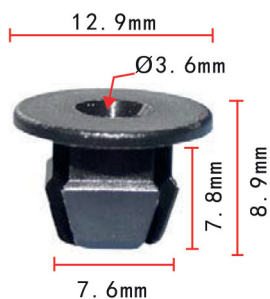

7081

Gyári számok: 179 813 881, 179813881, 3997391



 
7116

Gyári számok: 175 853 577 01C, 17585357701C, 20432975, 6500899, 6503800, 8048635




7118

Gyári számok: 14070914, 175 553 577 A, 175 853 577 A, 175553577A, 175853577A, 20433026, 4370132, B13753

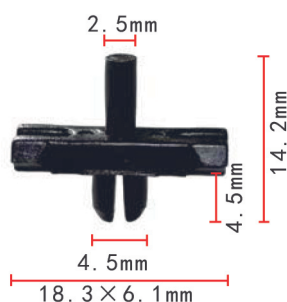


7135

 Gyári számok: 113 853 585 C, 113853585C

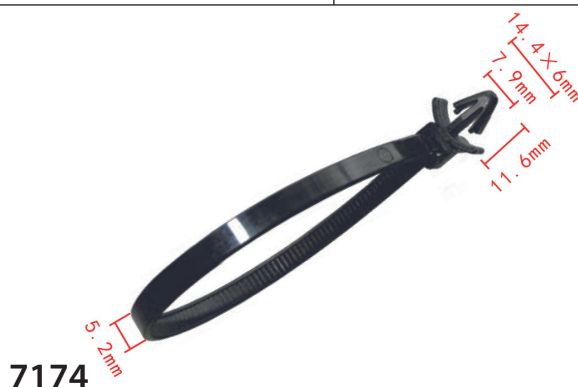


7174

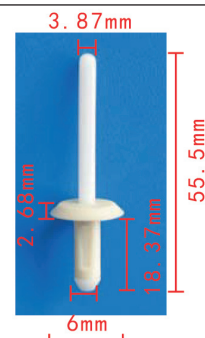 


7191

 Gyári számok: 14070914, 175 853 577 A, 175853577A, 20433026, 4370132

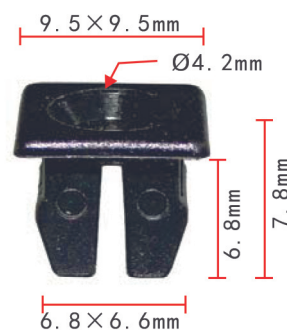


7216

 Gyári számok: 175 853 674, 175853674, 20475950

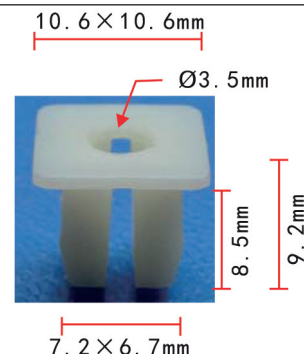


7231

 Gyári számok: 1370853, 179 813 883, 179813883, 6029501

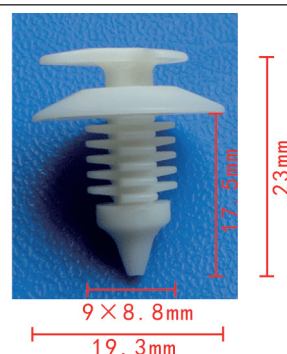


7237

 Gyári számok: 175 867 299, 175867299, 8934201681

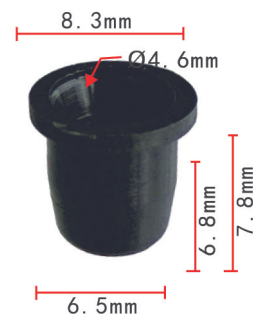


7238

 Gyári számok: 893420167

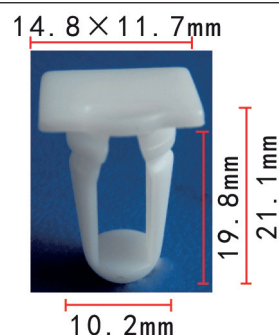

7269

 Gyári számok: 191 853 577, 191853577

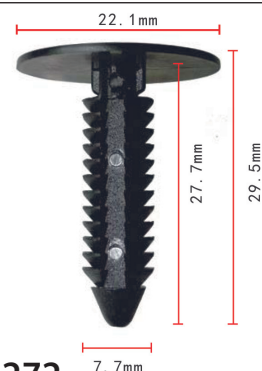

7272

Gyári számok: 22547243, 3C0 863 559, 3C0863559, 6501916, W706635-SSW, W706635SSW



 
7293

Gyári számok: 09409-08335, 1039463, 21030249, 4803228, 6503598, 770 104 92 71, 7701049271, 8E0 825 267, 8E0825267, N807389-S, N807389S




7367

Gyári számok: 51 41 1 973 500, 51411973500, 823 867 299, 823867299

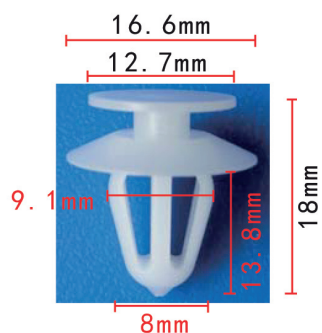


7371

 Gyári számok: 23 45 957,2345957,
90 321 122,90321122

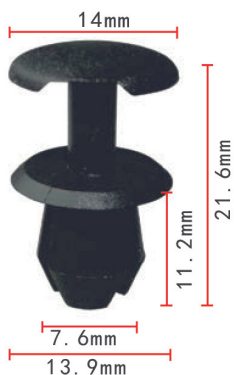


7372

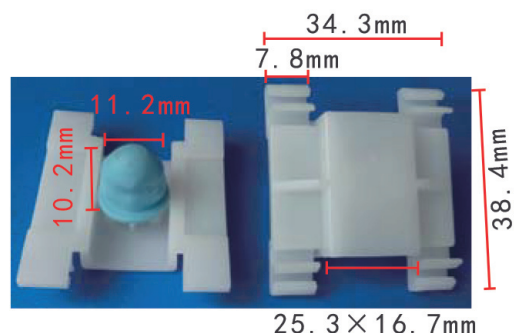 


7373

 Gyári számok: 1H0 853 585,1H0853585

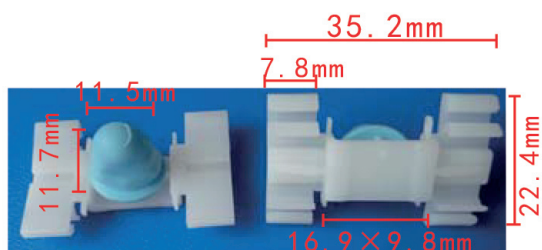


7374

 Gyári számok: 51 13 1 960 054,51131960054,8L3853825

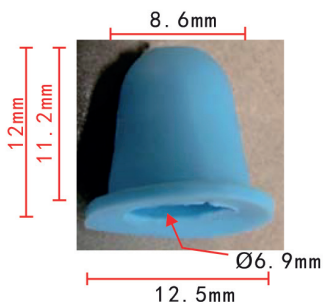

7382

 Gyári számok: 1H0 853 586,
1H0853586,51 13 1 960 127,
51 13 8 124 389,51131960127,
51138124389,71103

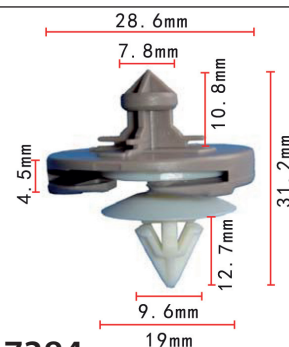

7384

Gyári számok: 1H0 868 243 B,
1H0 868 243B,1H0868243B



 
7386

Gyári számok: 000 990 37 92,
0009903792,1104881,90356928,
A 000 990 37 92,A0009903792,
N 100 323 01,N10032301




7392

Gyári számok: N 908 338 01,
N 90833801,N90833801

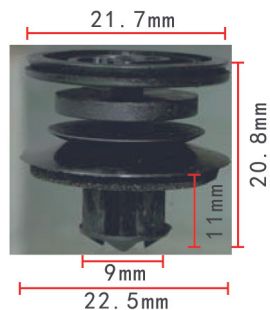


7398

 Gyári számok: 3B0 868 243,
3B0868243,6N3868561

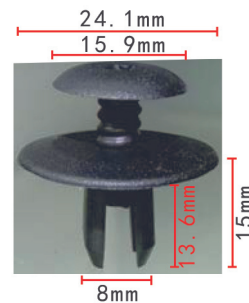

7399

 Gyári számok: 1915964,
1H0867199A,50438,
51 48 1 915 964,51481915964

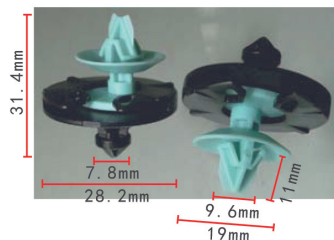


7400

Gyári számok: 1H0 868 243,
1H0868243,50106




7401

 Gyári számok: 357853575,
6979C6,6991H4,95667895

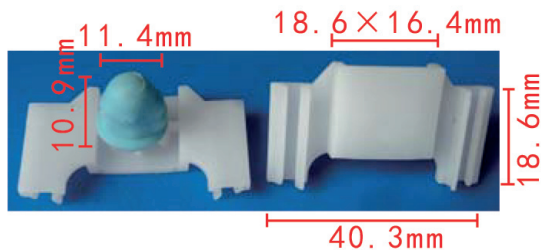


7402

 Gyári számok: 1H0 853 585 A,1H0 853 585A,1H0853585A

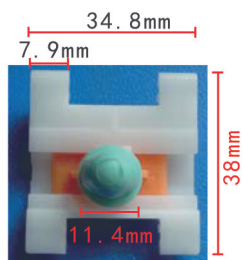

7403

 Gyári számok: 3A0 853 575,
3A0853575

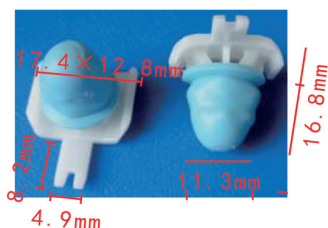


7404

Gyári számok: 3B0 852 575,
3B0 853 575,3B0852575,
3B0853575




7405

 Gyári számok: 3A0 853 575 A,
3A0 853 575A,3A0853575A

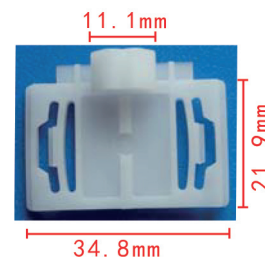


7406

 Gyári számok: 4A0 853 825 C,
4A0 853 825C,4A0853825C

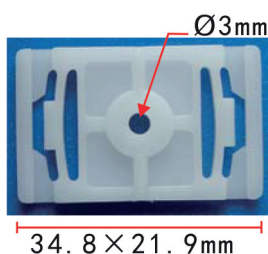


7407

 Gyári számok: 4A0 853 825 A,
4A0 853 825A,4A0853825A

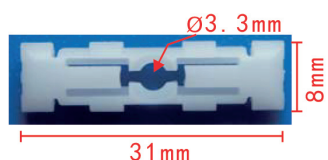

7408

 Gyári számok: 191 853 733 A,
191853733A,6U0 853 733,
6U0853733

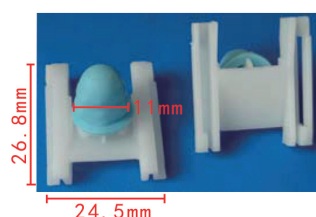

7409

Gyári számok: 3B0853576



 
7411

Gyári számok: 6K0 868 243 C,
6K0 868 243C,6K0868243C



7414

Gyári számok: 1 57 979,
1065204,157979,1H0 837 719,
1H0837719,90579619

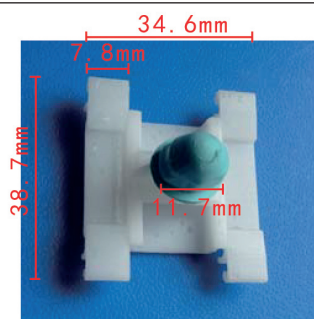

7415

Gyári számok: 1H0 853 585 B,
1H0853585B



7416

Gyári számok: 357 853 585,
357 853 586,357853585,
357853586,701 853 585,
701853585



 
7417

Gyári számok: 1H0 819 055 C 01C,
1H0819055C,1H0819055C01C




7418

Gyári számok: 1H0 819 055 B 01C,
1H0819055B,1H0819055B01C

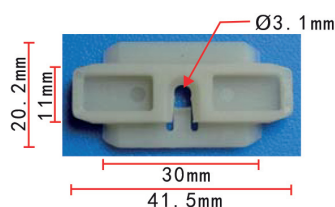


7419

 Gyári számok: 443 853 909 A,
443853909A

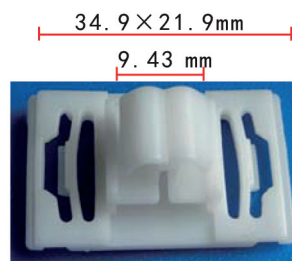

7420

 Gyári számok: 4A0 853 825,
4A0853825

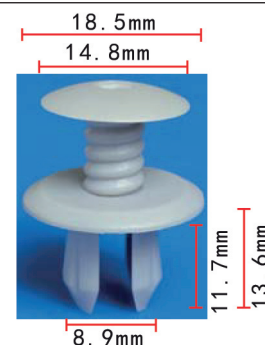

7421

Gyári számok: 701 867 299,
701 867 299 3U6,701 867 299 U71,
701867299



 
7425

Gyári számok: 171 201 969,
171201969




7429

Gyári számok: 191 853 577 A,
191853577 A,191853577A

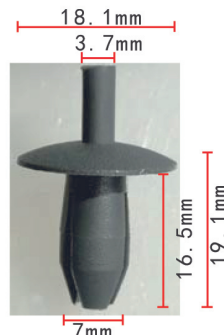

7430

 Gyári számok: 001 994 41 45,
0019944145,171885767,
A 001 994 41 45

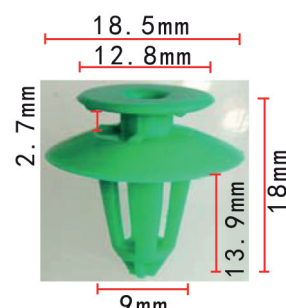

7431

Gyári számok: 011 988 76 78,
0119887678,1591426,2E1 827 649,
2E1827649,A 011 988 76 78,
A0119887678



 
7432

Gyári számok: 357 853 586 D,
357853586D,701 853 585,
701853585



7433

Gyári számok: 000 988 03 28,
000 988 05 28,1079129,2 207 713,
2207713,51 47 1 904 317,
51471904317,6678518,6998849,
90082231,A 000 988 03 28,
A 000 988 05 28,N90201601,
N90201601H,W700671-S300,
W706023-S300

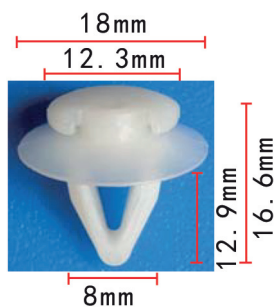


7434

Gyári számok: 171 807 249 A,
171807249A



7436

 Gyári számok: 165 827 592,
165827592

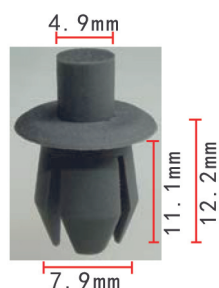

7437

Gyári számok: 1239900292,
7 200 671,N 0385501,N0385501



7439

Gyári számok: 001 988 29 81,
0019882981,6N0 809 966 A,
6N0809966A,A 001 988 29 81,
A0019882981



 
7440

Gyári számok: 191941142,
3B0 868 243,3B0868243,
6N0 809 966 A,6N3868561,
WHT 003 737,WHT003737




7441

Gyári számok: 191 941 142,
191941142,63 12 1 378 369,
63121378369

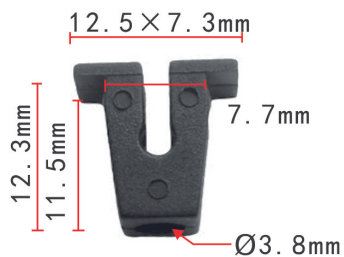

7442

 Gyári számok: 811 807 577 C,
811807577C,A 001 988 46 81,
A0019884681

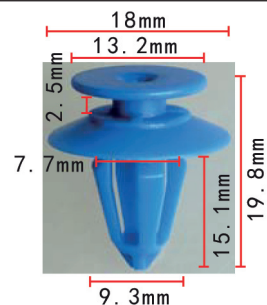


7447

Gyári számok: 7701053516,
7701057715,7L5 853 994,
7L5853994




7453

 Gyári számok: 357 853 586 D,
357853586

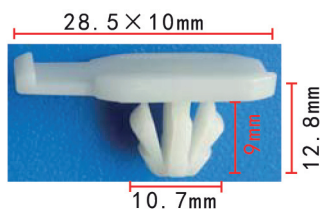

7459

 Gyári számok: 7L0 839 069,
7L0839069

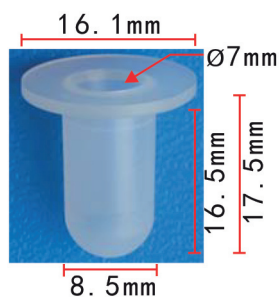

7464

Gyári számok: 0000698771,
109746420,51 44 7 780 135,
51447780135,698771,7701397195,
7703074022,82312646



7509

Gyári számok: 1 104 880,1 916 670,
1104880,161 867 299 01C,
16186729901C,1618672999,
51 47 1 916 670,6136889,90087290,
A000990299,E844052S,N 0385491,
N0385491,N0385494,N90112201,
N90112202,N91018901



 
7515

Gyári számok: N90821401




7530

Gyári számok: 7L6 868 243,
7L6868243,8679426,955 555 243 00,
95555524300

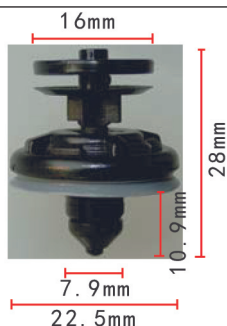

7531

 Gyári számok: 6Q0 868 243,
6Q0868243

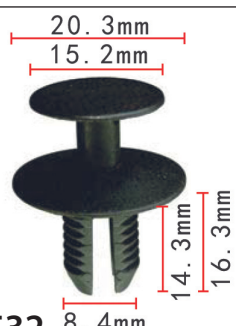


7532

Gyári számok: 201 990 02 92,
30820141,4D0 807 300 B,
4D0807300B,51 47 1 911 992,
51471911992,A 201 990 02 92,
A 201 990 02 92 90 51,M820141



7549

 Gyári számok: 10430,631 984 25 61,
6319842561,A 631 984 25 61,
A6319842561

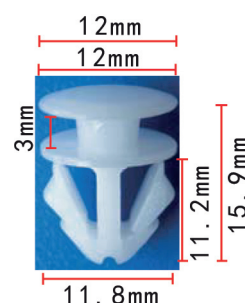

7551

Gyári számok: 12633,191 853 585 A,
191853585A

 


7553

Gyári számok: 1 40 642,1938884,
3509416,3A0 837 461,3A0837461,
51 32 1 938 884,51321938884,
9196667,ALR1051,C10110




7558

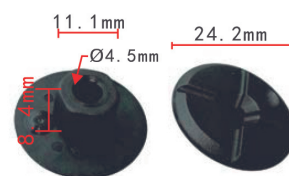


7565

 Gyári számok: 201 990 00 50,
2019900050,441955973B,
51 71 1 958025,51711958025,
712731,A2019900050,C10031

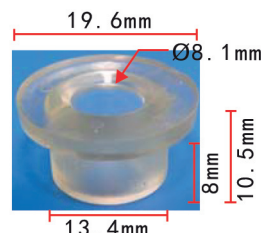

7572

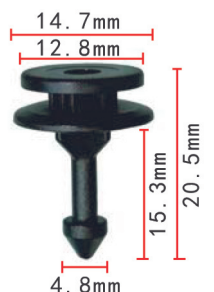 

7573



7574



7575

Gyári számok: 3B0 867 333,3B0867333

 


7576



7577

Gyári számok: C60604,N 905 653 01,
N 906 420 01,N90565301,
N90642001

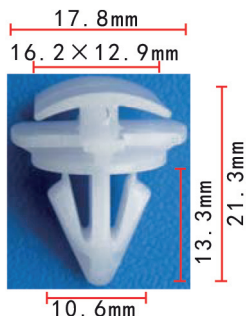

7578

Gyári számok: 3C0 853 585,
3C0853585,C60427

 


7579




7581

Gyári számok: 1H5 863 849,
1H5 863 849 A01C,1H5863849,50146Z,
8E0 863 727 A,8E0863727A

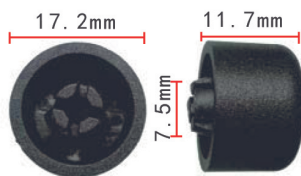

7582

 Gyári számok: 014 301 485,
014301485

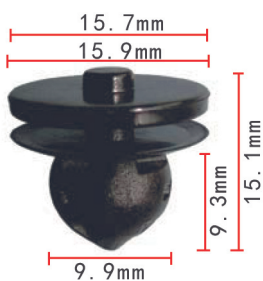

7583

 
Gyári számok: 6Q0 868 297,
6Q0868297



7585




7586

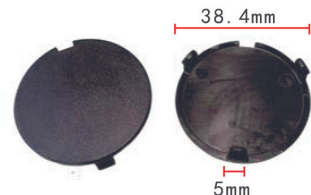

7587

 Gyári számok: 038 103 937,
038103937,C60042

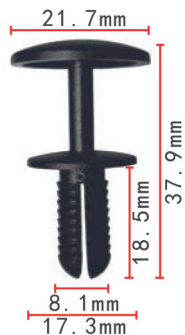

7588



 
7589



7590



7591

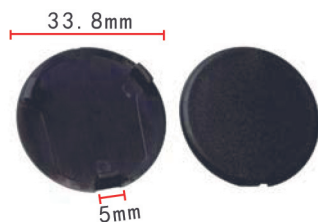

7592

Gyári számok: 028103 937,
028103937,C60550



 
7602

Gyári számok: 10903,
1H0 867 199 01C,1H0867199,
1H086719901C




7625

Gyári számok: 4A0 805 121 A,
4A0805121A,80101

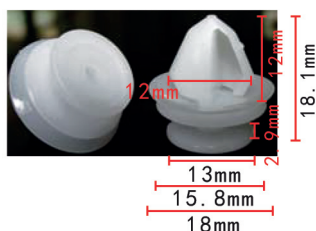


7626

 Gyári számok: 30648141,6991.S6,
6991S6,6991Z1,77 01 056
846,8337FC,8E9 867 299,C10091

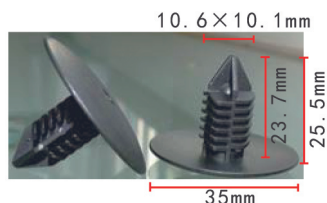


7630

 Gyári számok: 44 14 104,50129Z,
7703077435,91169652

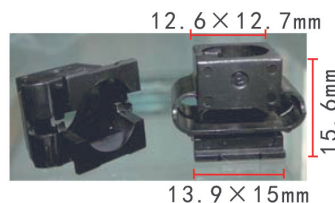


7632

 Gyári számok: 4A0 805 163,
4A0805163,C10131

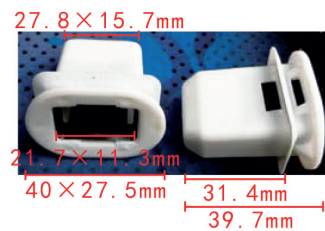


7635

 Gyári számok: 4L0 886 373,
4L0886373

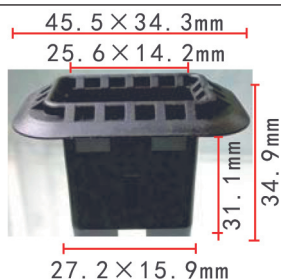

7636

 Gyári számok: 4B0 886 373,
4B0886373

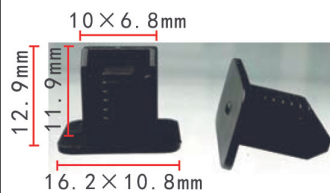


7637

Gyári számok: 10914,357 867 646,
357867646




7638

 Gyári számok: 330 853 858,
330853858

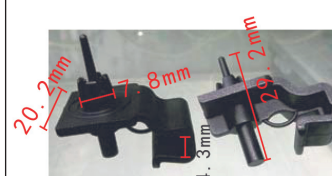

7639

 Gyári számok: 3A0 867 301 01C,
3A0867301

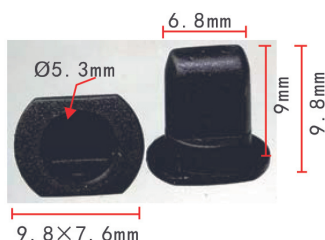

7640

Gyári számok: 16304,171 853 615 A,
171853615A,191 853 615 A,
191853615A

 


7641

Gyári számok: 51 49 8 123 835,
51498123835,6117693,N 905 417 01,
N90541701




7642

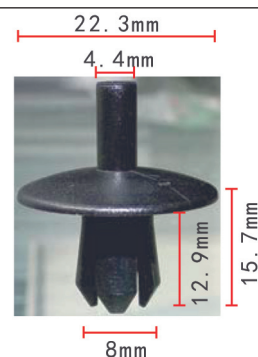


7646

 Gyári számok: 77 03 072 502,
7703072502,N90 229 301,
N90229301

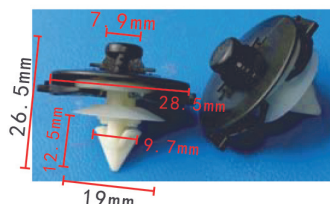


7647

 Gyári számok: 6N0 868 243 A,
6N0868243A,C10113

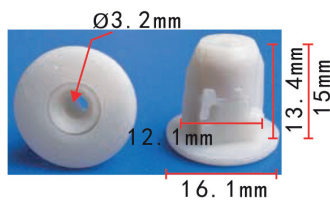

7650

 Gyári számok: 07 14 7 201 307,
07147201307,C30178,N 105 168 01,
N10516801

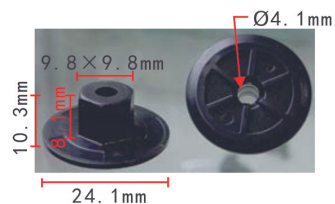

7653

Gyári számok: 441955973B,
51 71 1 958 025,51711958025,
7127.31,712731,A 201 990 00 50,
A2019900050,C10031



 
7658

Gyári számok: 4D0 807 300,
4D0807300,A81365




7664

Gyári számok: C60378

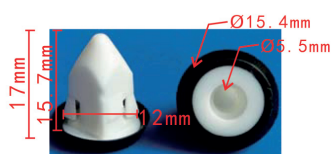

7665

 Gyári számok: 07 14 7 201 307,
07147201307,51 12 7 020 321,
51127020321,C30178,
N10 516 801,N10516801

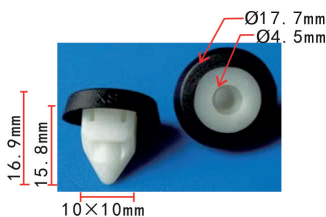


7666

Gyári számok: C60409,N 106 213 01,
N10621301




7667

 Gyári számok: 1K6 837 200 B,
1K6837200B

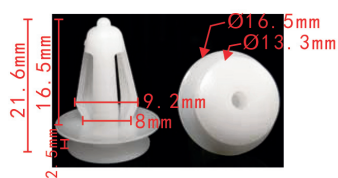

7672

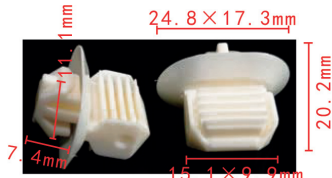 


7675

Gyári számok: 6N0 867 276,
6N0867276,C30116




 7676

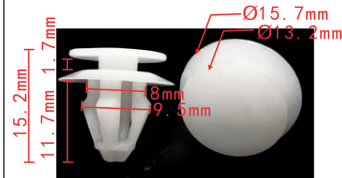


7682

 Gyári számok: 5J0853139A,
8E0 867 276,8E0867276,C10157

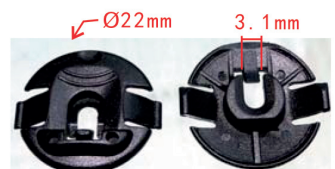


7683

 Gyári számok: 4F0 825 429 A,
4F0825429A,C70142

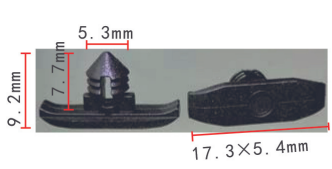

7684

 Gyári számok: 10909,1H0 823 717,
1H0823717

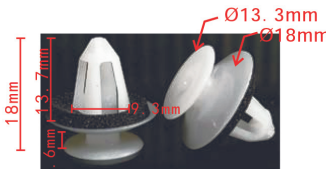


7687

Gyári számok: 011 988 76 78,
0119887678,1591426,2E0 867 059,
2E0867059,6030441,A 006 988 43 78,
A 011 988 76 78,A0069884378,
A0119887678,A82027,E865220-S,
M283083,MU010571



7688

 Gyári számok: C70300,N 905 369 01,
N90536901

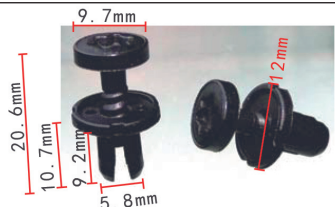

7689

Gyári számok: 6555.LE,6555LE,
7703072236,7L6 868 307,
7L6868307,8Z0 857 784,
8Z0857784,A 000 991 66 40,
A0009916640,A60953



 
7694

Gyári számok: 1 404 926,1 719 242,
1719242,77 03 072 172,90 058 826,
90 262 367,90058826,A12710,
N 0385012,N0385012




7695

Gyári számok: 3C0 853 934,
3C0853934,C70176

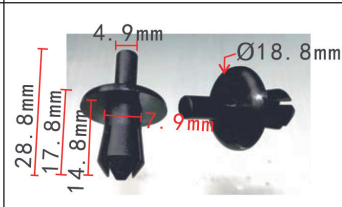

7706

 Gyári számok: 000 990 29 92,
001 990 16 92,1104882,161867299,
199 016 92 92,51 47 8 170 166,
51751426,90450482,9133417,
94530507,A 000 990 29 92,
A 001 990 16 92,C70310

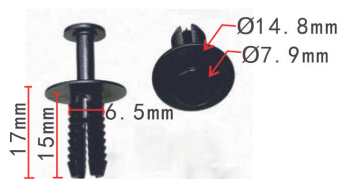


7712

Gyári számok: 000 990 54 92,
0009905492,14 00 804,1400804,
51 11 1 964 186,51111908077,
51111964186,90414659,
A0009905492,C10009,N90359101




7718

 Gyári számok: 191 853 586 D,
191853586D,51 71 1 932 996,
51711932996,C50871

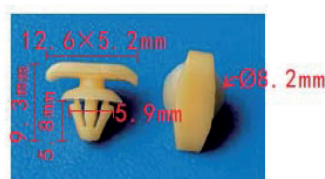

7720

 Gyári számok: 1Z0 837 732 A,
1Z0837732A,C60452

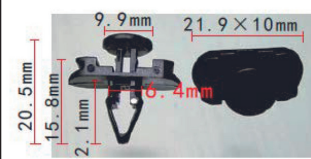


7722

Gyári számok: 1K0 837 199 B,
1K0837199B,C60448




7727

 Gyári számok: 8K0 821 213 A,
8K0821213A

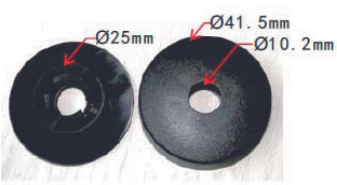


7728

 Gyári számok: 3C0 864 521 9B9,
3C08645219B9

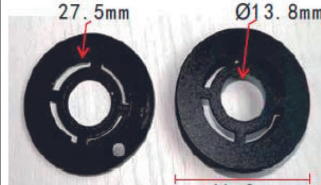

7729

 Gyári számok: 3C0 864 523 9B9,
3C08645239B9

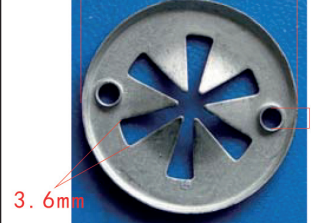


7733

Gyári számok: 1388634,6 715 468,
6715468,70143Z,N90 335 004,
N90 335 006,N90335004,
N90335006,W700641-S301,
W700641-S442,W700641S301,
W700641S442




7734

 Gyári számok: C60705,
N90 335 005,N90 796 501,
N90 796 502,N90796502

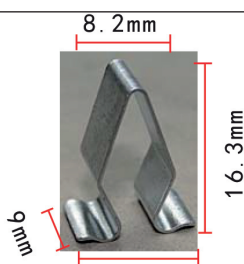


7736

 Gyári számok: 000 984 07 60,
0009840760,3B9 867 289,
3B9867289,4A0 867 276 A,
4A0 867 276 B,4A0867276A,
4A0867276B,8L4 867 276,
8L4867276,A0009840760,C60526

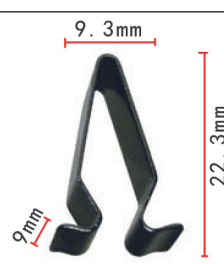


7737

 Gyári számok: 1J6 867 276,
1J6867276,4A0 867 276 A,
4A0867276A,4B0 867 276 A,
4B0867276A,4D0 867 276 D,
4D0867276D,8L4 867 276,
8L4867276,C30482

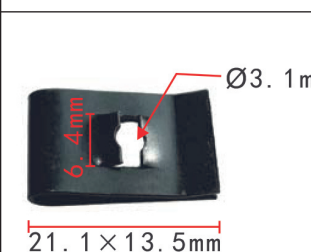

7738

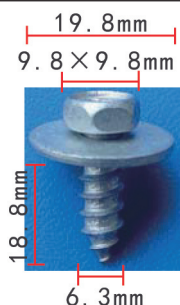 

7740

 
Gyári számok: 90159-60383,
9015960383,C60610,N90542603



7742




7755

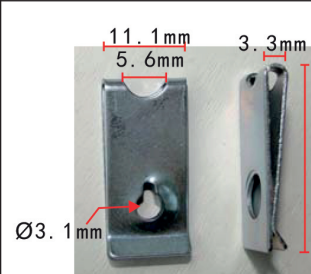


7757

 
Gyári számok: 14 50 657,1450657,
16034,211837223,N 01 543 01,
N0154301

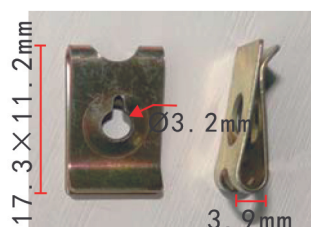

7758

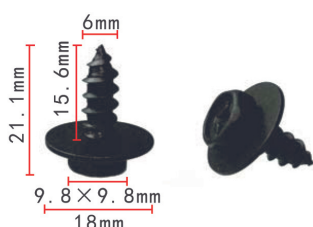 


7762

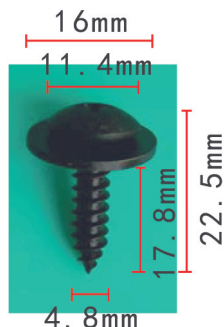 

7763

 Gyári számok: 90114-SE0-000,
90114SE0000,C60472

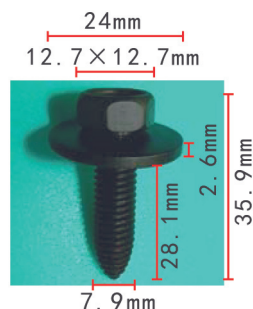


7764

Gyári számok: C60617




7765

 Gyári számok: 11093773,1388632,
1449533,2020106,C60460,
N 103 546 02,N10354602,
W700501-S303,W700501S303,
W708591-S424,W708591S424

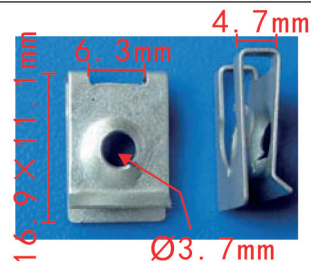

7766

 Gyári számok: 07 12 9 904 150,
07129904150,C70173,N 015 437 4,
N0154374

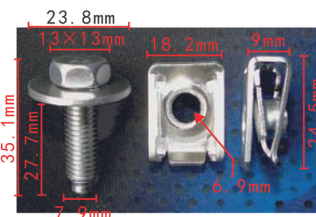


7767




7769

 Gyári számok: 1 462 015,1462015,
C70153,W703505-S442,
W703505S442

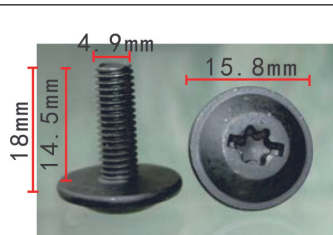


7770

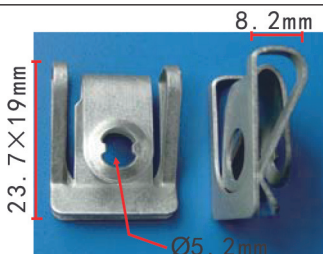 

7771

 Gyári számok: 07 14 6 981 767,
07146981767,51 71 8 212 164,
51718212164,7146981767,
8K0 805 922 A,8K0805922A,
C60630

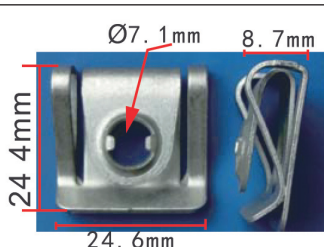

7772

Gyári számok: 8D0 805 960,
8D0805960,C10133

 


7774



7789

Gyári számok: 53259-20030,
5325920030,C60549

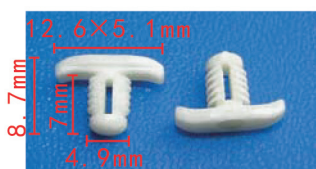


7818

Gyári számok: 1Z0 837 732,
1Z0837732



7819

 Gyári számok: 5J0 867 276,
5J0867276,C60438

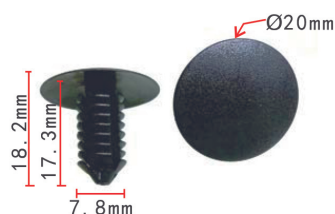

7821

Gyári számok: N 909 113 01,
N90911301



7822

Gyári számok: 251 823 717,
251823717,A14720



 
7824

Gyári számok: 2E1 857 784,
2E1857784,6J0 853 379,
6J0853379,A 000 991 39 40,
A0009913940,C60762



7826

Gyári számok: N90974701

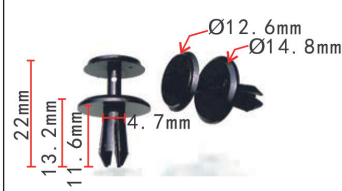


7827

Gyári számok: 0019901392,
A 001 990 13 92,A0019901392,
A82009,N 107 009 01,N10700901




7828

 Gyári számok: 8K0 868 307,
8K0868307,C70332

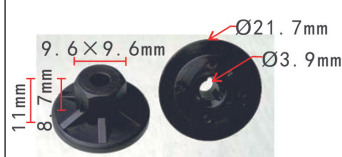

7829

 Gyári számok: C70327,N 907 579 01,
N90757901

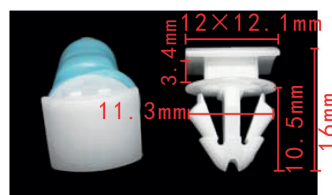


7842

Gyári számok: 8R0 853 909 A,
8R0853909A




7846

 Gyári számok: 8R0 853 909 A,
8R0853909A

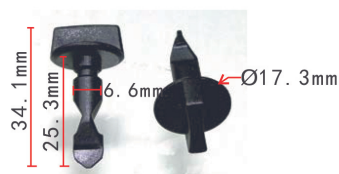


7865

 Gyári számok: 6Q0 807 643,
6Q0807643,C70124

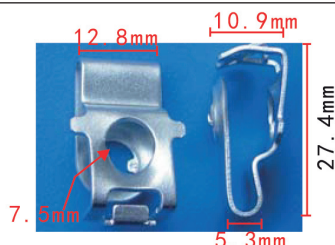


7869

 Gyári számok: 4F0 805 163,
4F0805163,8K0 805 163 A,
8K0805163A,C60701

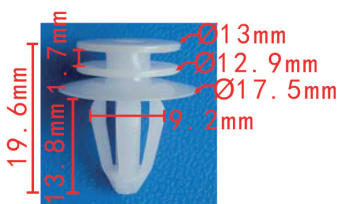


7873

 Gyári számok: 007 988 99 78,
6Y0867260,A0079889978,C60639

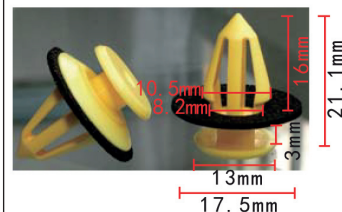

7881

 Gyári számok: 1008068,
7M0 867 299 K,7M0867299K,
C30847

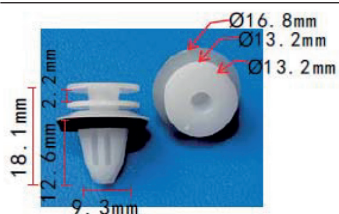


7895

Gyári számok: 000 991 01 98,
4M0 827 947,4M0827947,
A0009910198,C60716




7920

 Gyári számok: 3C0 853 586,
3C0853586,C60453

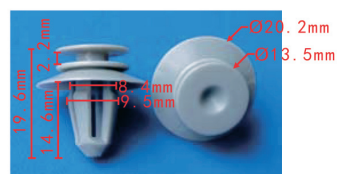

7923

 Gyári számok: 2D1 867 059,
2D1867059,A 008 988 09 78,
A0089880978

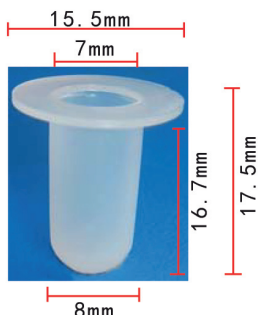


7018

Gyári számok: 51 31 1 802 258,
51311802258



7036

 Gyári számok: 07 14 6 971 349,
07146971349,1304727,15773445,
20452072,20664092,4638136,
B22046,N804570-S,N804570S

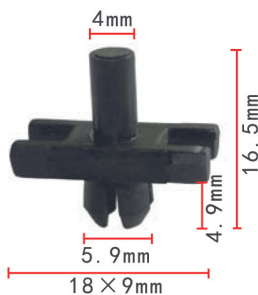

7134

Gyári számok: 51 13 1 804 205,
51131804205



7141

Gyári számok: 1944537,
51 11 1 944 537,
51111944537,52 20 1 964 201



7142

Gyári számok: 51 11 1 964 186,
51111964186



 
7153

Gyári számok: 51 71 7 002 953,
51 77 7 171 004,51717002953,
51777171004



7182

Gyári számok: 14 00 806,
1400806,51 11 8 174 185,
51118174185,90508809

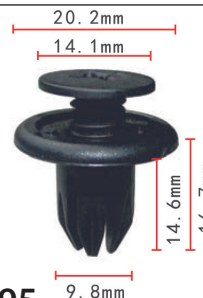


7295

Gyári számok: 01553-01285,
07 13 0 702 966,07130702966,
4803742,57728AC060,
78875.08000,7887508000,
91503-SP0-003,91503SP0003,
91503SP0003,94530623



7304

 Gyári számok: 10121502,
1314934,3900185,
6033082,6033840

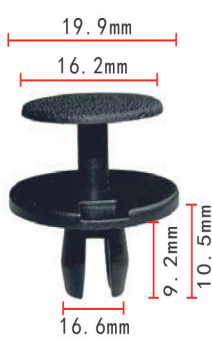


7340

Gyári számok: 1938725,
51 48 1 938 725,
51481938725




7367

 Gyári számok: 51 41 1 973 500,
51411973500,
823 867 299,823867299

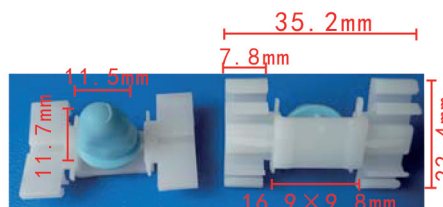

7374

 Gyári számok: 51 13 1 960 054,51131960054,
8L3853825

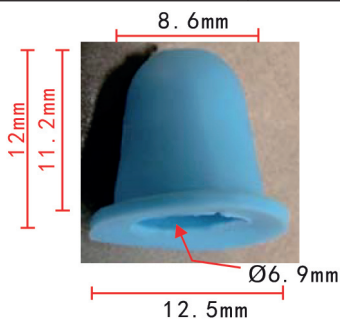


7382

Gyári számok: 1H0 853 586,1H0853586,
51 13 1 960 127,51 13 8 124 389,
51131960127,51138124389,71103




 7387

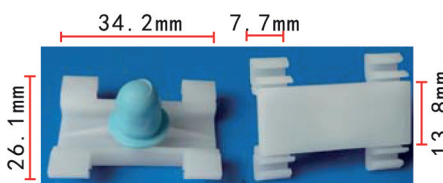


7397

 Gyári számok: 1 72 017,172017,51 13 8 166 675,
51138166675,71717421,90590995

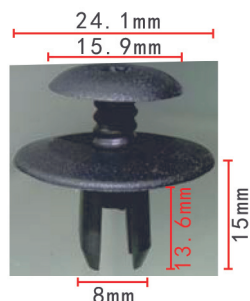

7399

 Gyári számok: 1915964,1H0867199A,
50438,51 48 1 915 964,
51481915964

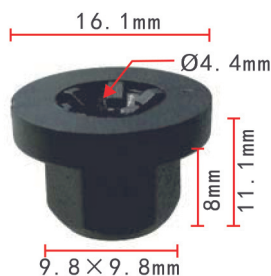


7422

Gyári számok: 003 990 02 51,
0039900251,16 13 1 176 747,
16131176747



7423

 Gyári számok: 51 47 1 840 960,
51471840960

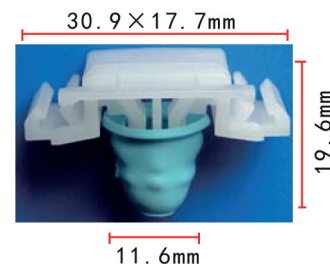

7428

Gyári számok: 51 13 2 251 394,
51132251394



 
7433

Gyári számok: 000 988 03 28,
000 988 05 28,1079129,2 207 713,
2207713,51 47 1 904 317,
51471904317,6678518,6998849,
90082231,A 000 988 03 28,
A 000 988 05 28,N90201601,
N90201601H,W700671-S300,
W706023-S300



7441

Gyári számok: 191 941 142,
191941142,63 12 1 378 369,
63121378369

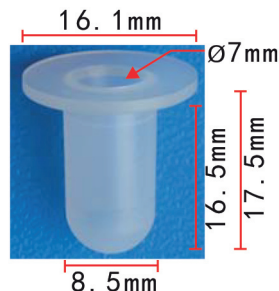


7464

Gyári számok: 0000698771,
109746420,51 44 7 780 135,
51447780135,698771,
7701397195,7703074022,
82312646




7465

 Gyári számok: 51 41 0 151 699,
51 41 8 172 050,51410151699,
51418172050,8172050

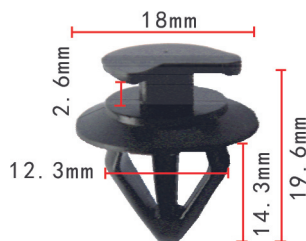


7473

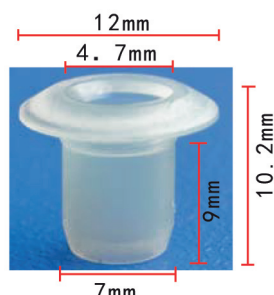 


7522

 Gyári számok: 51 14 1 902 279,
51141902279

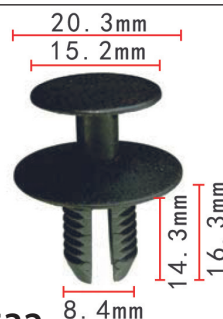

7532

 Gyári számok: 201 990 02 92,
30820141,4D0 807 300 B,
4D0807300B,51 47 1 911 992,
51471911992,A 201 990 02 92,
A 201 990 02 92 90 51,M820141

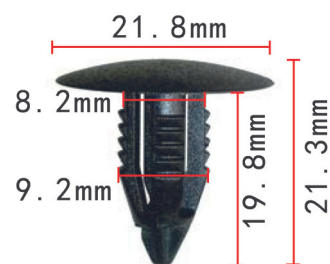


7535

Gyári számok: 1018434,
51 48 8 181 420,51488181420,
6725950




7553

 Gyári számok: 1 40 642,
1938884,3509416,3A0 837 461,
3A0837461,51 32 1 938 884,
51321938884,9196667,ALR1051,
C10110

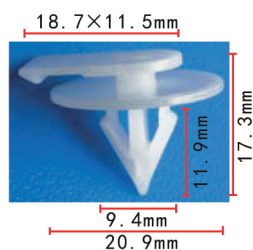


7559

 Gyári számok: 07137073915

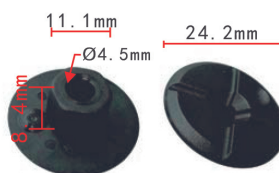


7565

 Gyári számok: 201 990 00 50,
2019900050,441955973B,
51 71 1 958 025,51711958025,
712731,A2019900050,C10031

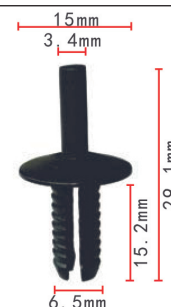


7569

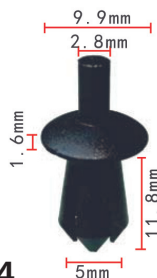 


7584

 Gyári számok: 000 990 34 92,
0009903492,140 994 00 48,
1L0 853 934,51 16 1 881 149,
51161881149,51722681,6972.10,
77 03 072 116,7903072170,
A 000 990 34 92,A 140 994 00 48,
A0009903492,N 10259301

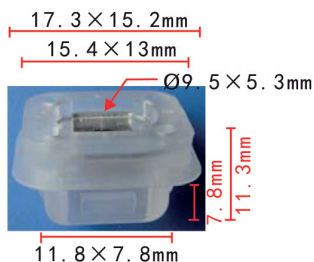

7593

 Gyári számok: 07 14 9 158 194,
07149158194,51 41 8 215 806,
51418215806,C60547

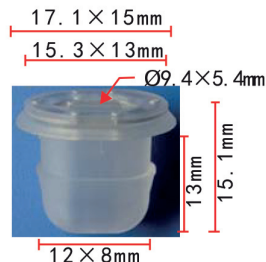


7594

Gyári számok: 51 45 8 161 557,
51458161557,C60546




7595

 Gyári számok: 07 14 9 144 232,
07149144232,51 41 0 154 420,
51 41 7 001 629,51 45 0 304 703,
51 45 8 165 260,51410154420,
51417001629,51450304703,5145
8165260,C60545

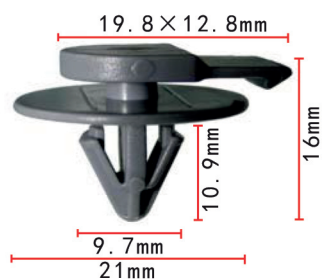


7596

 Gyári számok: 07 13 2 757 821,
07132757821

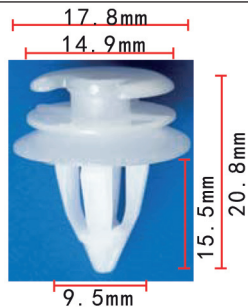


7598

 Gyári számok: 51 41 8 172 050,
51411973500,51418172050,
8172050

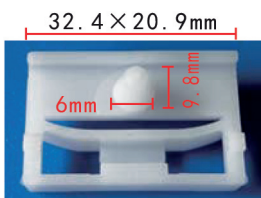


7599

 Gyári számok: 51 71 8 184 574,
51718184574,C30110

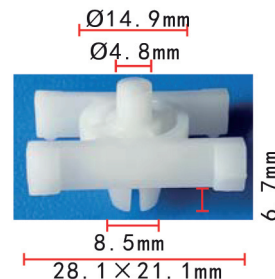


7600

 Gyári számok: 12222,51 13 1 829 904,
51131829904

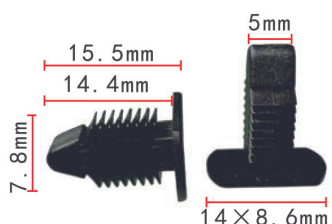


7603

 Gyári számok: 51 71 1 496 621,
51711496621

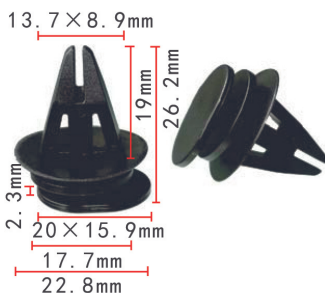


7607

 Gyári számok: 07 13 1 480 419,
07131480419,51 71 7 127 742,
51717127742,C60601

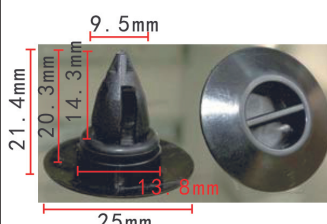


7610

 Gyári számok: 51 77 7 171 003,
51777171003,C60757

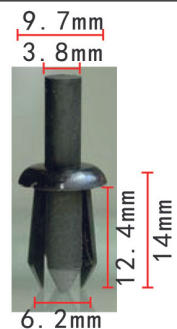


7611

 Gyári számok: 51 46 7 002 606,
51467002606,C70434

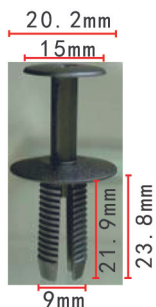


7612

 Gyári számok: 51 12 7 004 445,
51127004445,C70177

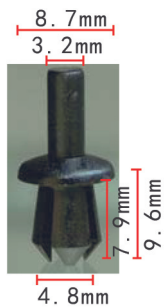


7613

 Gyári számok: 51 47 8 166 992,
51478166992

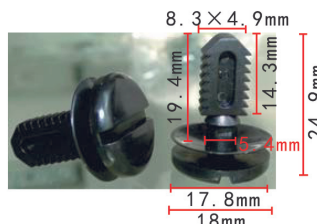

7614

 Gyári számok: 51 47 1 945 266,
51471945266,C60648

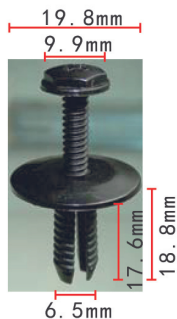


7615

Gyári számok: 51 71 0 391 077,
51 71 8 259 788,51710391077,
51718259788,C70301



7616

 Gyári számok: 51 41 8 224 768,
51 43 7 001 491, 51418224768,
51437001491

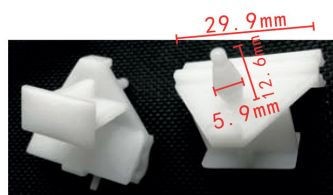


7617

Gyári számok: 51 11 7 160 451,
51117160451




7618

 Gyári számok: 51 77 7 171 002,
51777171002, C60698

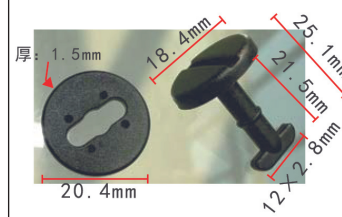


7628

 Gyári számok: 51 47 8 116 564,
51 47 8 243 734, 51 47 9 416 390,
51478116564, 51478243734,
51479416390, C50354

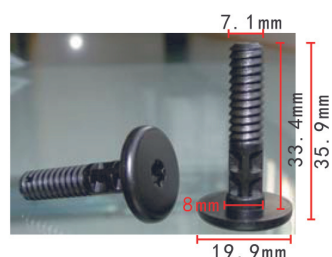


7631

 Gyári számok: 07 14 7 122 913,
07147122913, C60411

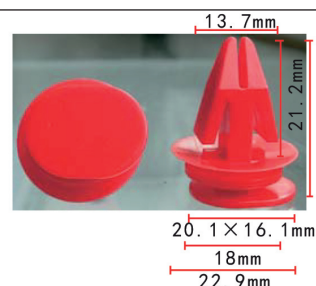

7633

 Gyári számok: 07 13 1 480 419,
07131480419, 51 71 7 127 742,
51717127742, C60601

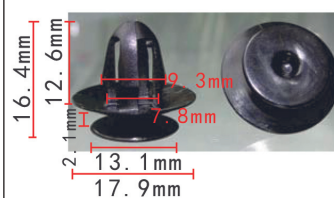


7641

Gyári számok: 51 49 8 123 835,
51498123835, 6117693, N 905 417 01,
N90541701




 7642

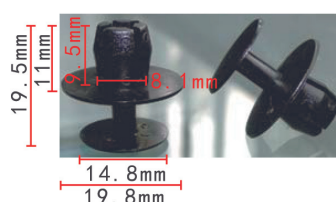


7644

 Gyári számok: 123 990 02 92,
51 48 1 938 725, 51481938725,
7813.24, 781324, A 123 990 02 92,
A1239900292, C30014

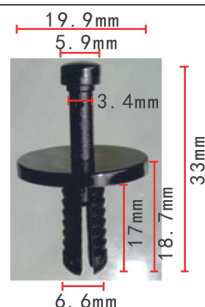

7649

 Gyári számok: 51 47 1 919 209,
51471919209, C70435

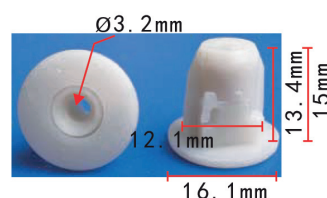


7650

Gyári számok: 07 14 7 201 307,
07147201307, C30178, N 105 168 01,
N10516801



7652

 Gyári számok: 07 14 7 122 912,
07147122912, C60410

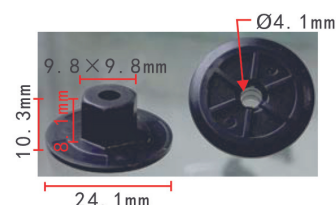


7653

Gyári számok: 441955973B,
51 71 1 958 025, 51711958025,
7127.31, 712731, A 201 990 00
50, A2019900050, C10031




7654

 Gyári számok: 51 47 7 117 532,
51477117532, C60449

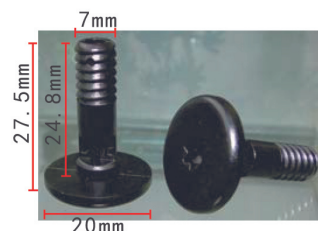

7655

 Gyári számok: 51 71 7 066 229,
51717066229, C60758

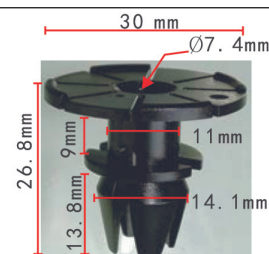


7656

Gyári számok: 51 71 7 066 226,
51717066226, C60759




7657

 Gyári számok: 6 696 122,6696122,C50873,
DKP5279L,W701194-S300,W701194S300

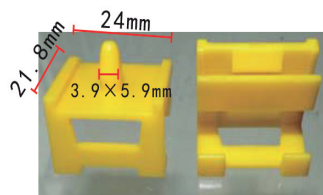


7662

 Gyári számok: 51 71 7 066 220,51717066220

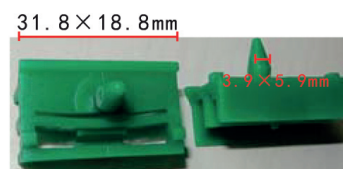


7663

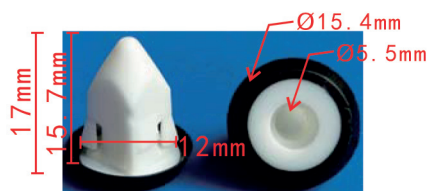 


7665

 Gyári számok: 07 14 7 201 307,07147201307,
51 12 7 020 321,51127020321,C30178,
N10 516 801,N10516801

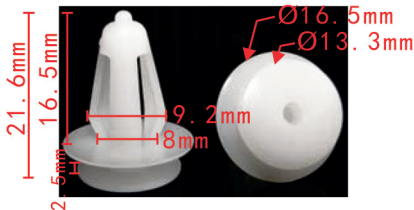


7672

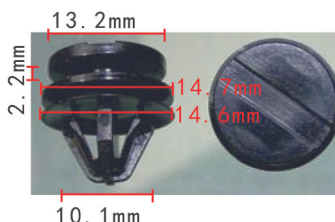 


7696

 Gyári számok: C70178,DYC500110

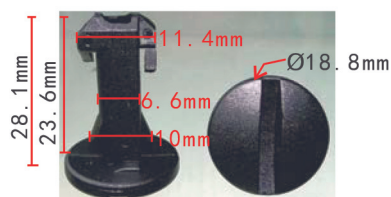


7697

 Gyári számok: LR012844

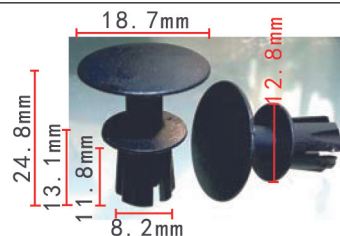


7698

 Gyári számok: C70179,DYQ500060,
RYQ500170

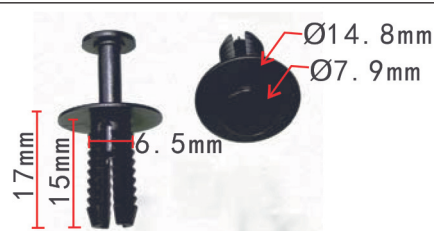

7712

 Gyári számok: 000 990 54 92,0009905492,
14 00 804,1400804,51 11 1 964 186,51111908077,
51111964186,90414659,A0009905492,C10009,
N90359101

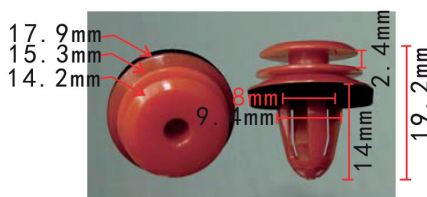


7713

Gyári számok: 07 14 6 962 771,
07146962771,C70333




7717

 Gyári számok: 07 14 6 976 114,07146976114,
7146976114,C70334

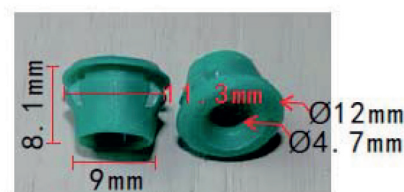

7718

 Gyári számok: 191 853 586 D,191853586D,
51 71 1 932 996,51711932996,C50871

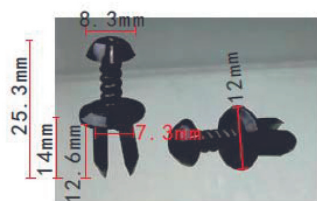

7721

Gyári számok: 51 16 0 141 100,
51 16 8 197 908,51160141100,
51168197908,C70427



7742



 
7743

Gyári számok: 90159-60496,
9015960496,C60611




7748


Gyári számok: 90159-60488,
9015960488,C60614

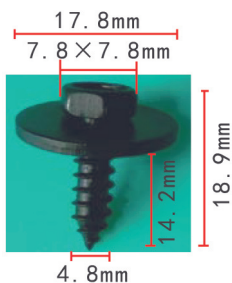

7753

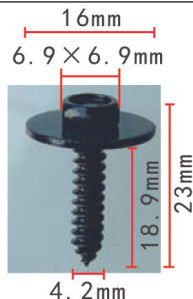 

7755

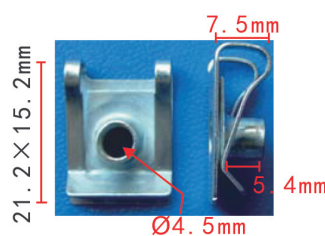 


7756


Gyári számok: 003 994 42 45,
0039944245,16100,46473571,
61 13 1 372 033,61131372033,
A 003 994 42 45,A0039944245



 7758

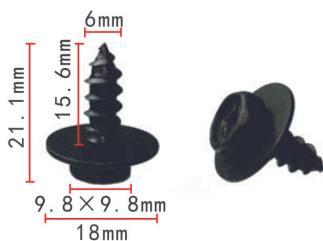


7762

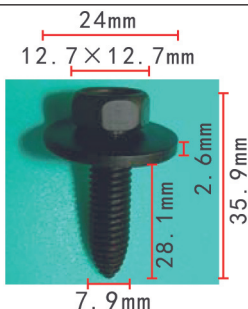 


7764

 Gyári számok: C60617

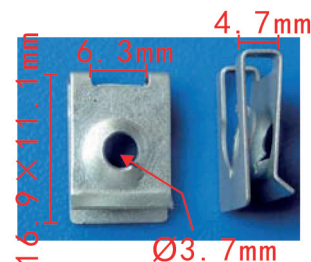

7766

 Gyári számok: 07 12 9 904 150,
07129904150,C70173,N 015 437 4,
N0154374

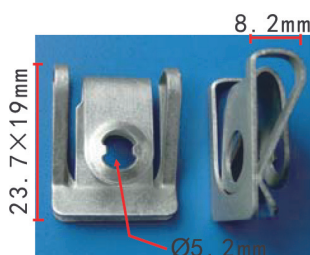


7771

Gyári számok: 07 14 6 981 767,
07146981767,51 71 8 212 164,
51718212164,7146981767,
8K0 805 922 A,8K0805922A,
C60630



 7799

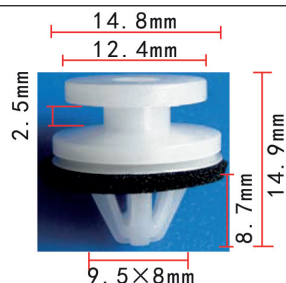


7804

Gyári számok: 07130702516,
44 14 720,44 30 858,4414720,
4430858,5001855049,7701050734,
7703077368,82Z61-02005,
82Z6102005,93161475,
93176656,DYC101420




7815

 Gyári számok: 07 14 7 296 886,
07147296886

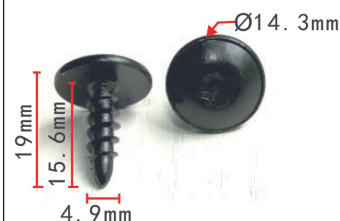


7826

 Gyári számok: N90974701

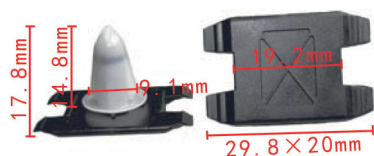


7850

 Gyári számok: 51 71 8 259 025,
51718259025,C60539

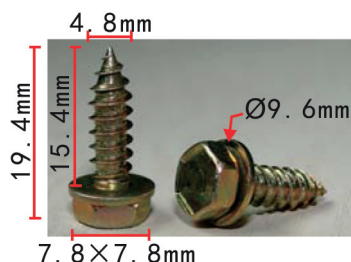

7868

 Gyári számok: 07 11 9 916 945,07119916945,
7119916945,C70336

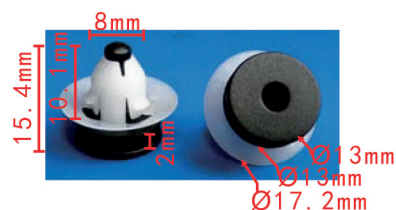


7871

Gyári számok: 007 988 99 78,0079889978,
07 13 1 503 417,07131503417,1 232 493,
1232493,30653441,8616645,9193585,A0079889978,
B23171,EYC106710,EYC500090,EYC500120,
EYC500170,EYC500280,W712417-S300,
W712417S300




7878

 Gyári számok: 1473596,7701049008,
7703077354,8200702219,C30142,
W710404S300,W710404S300

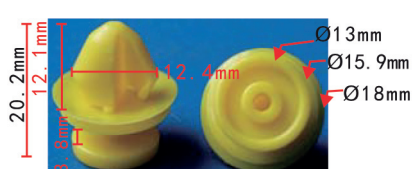

7879

 Gyári számok: 6991.S9,6991S9,C2D5807,
C60337

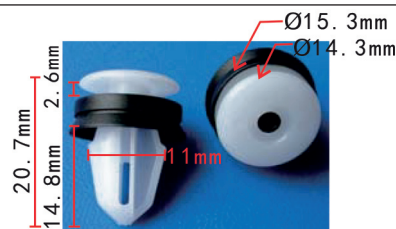

7892

Gyári számok: C70302,LR013135,W713610



7000

Gyári számok: 20064875,3078511,3977775,B21007



7002

Gyári számok: 02860454,04630747,06030441,06502381,06505403AA,06509015AA,11569768,1595864,15958694,1605396,388577S,389358S,4004569,4004919,53001698,53001699,6030441,6036007AA,85746-06000,8574606000,B11146,J4004569,J4004919,W705589-S300,W705589S300



 
7003

Gyári számok: 0940907326,0940907350,10021,14093311,20732399,332364,3691590,389358,6031321,94530527,94530548




7006

Gyári számok: B12565,N801925-S,N801925S

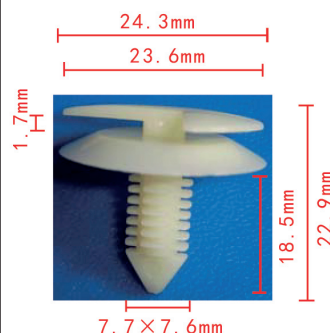

7009

 Gyári számok: 4005470,6003349,6032363,9685057,B22011,V98905101

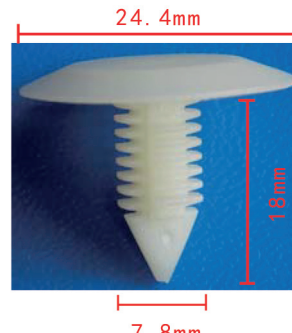


7013

Gyári számok: 2048248,6003423



7015

 Gyári számok: 472434,6031390,B22019

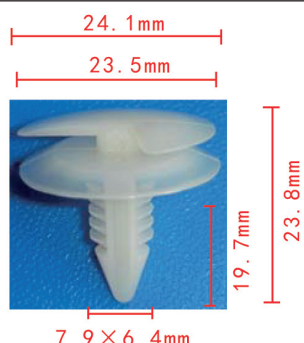

7016

Gyári számok: 20480475,B22020



7028

Gyári számok: 385661-S,385661S,6003349,6032363,B22037,N989022



7031

Gyári számok: 14019205,14019206,34201621



7033

Gyári számok: 20590899



7036

Gyári számok: 07 14 6 971 349,07146971349,1304727,15773445,20452072,20664092,4638136,B22046,N804570-S,N804570S



7037

Gyári számok: 20510029,34202672,N803362-S,N803362S



7040

Gyári számok: 4042711,9927-70-901,99277-0901,992770901



 
7041

Gyári számok: 3816659,8917320



7042

Gyári számok: 4005099,6033862, 796255

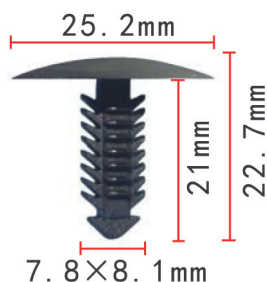


7059

Gyári számok: 388904-S,388904S, 4381395,6501086,B22101



7068

 Gyári számok: 10077283

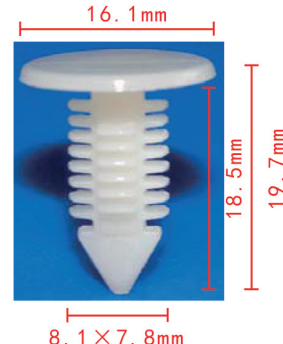

7082

Gyári számok: 25514221,6003587



7083

Gyári számok: 20032850,3861577, 387258-S,387258S



 
7090

Gyári számok: 20699808,6502328



7098

Gyári számok: 15545202,15607165, 15612948,15953247

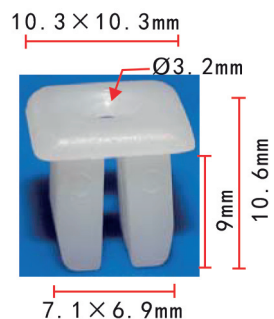

7105

Gyári számok: 6000943, 8934201263



7111

Gyári számok: 10134407,6501925



7112

Gyári számok: 3540858



7116

Gyári számok: 175 853 577 01C, 17585357701C,20432975,6500899, 6503800,8048635



 
7117

Gyári számok: 10184895,14063981, 6500911,6501559,B13750, N803043-S,N803043S,N803862-S



7118

Gyári számok: 14070914, 175 553 577 A,175 853 577 A, 175553577A,175853577A, 20433026,4370132,B13753

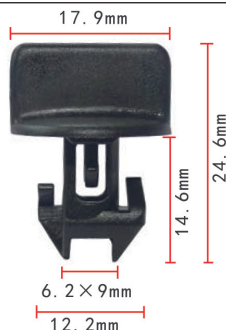

7124

Gyári számok: 25535963,N811772-S, N811772S



7145

Gyári számok: 90189-04008, 9018904008,90467-12096, 9046712096,M083120,MB083120



7147

Gyári számok: 30871878,MB020923, MU481187



7159

Gyári számok: 21094146,6501301



 
7160

Gyári számok: 10143422,34202599,
55196747AA,55196858AA,
8934-202-599,N805612-S100,
N805612S100



7175

Gyári számok: 90468-04030,
9046804030,9468-04030,
946804030

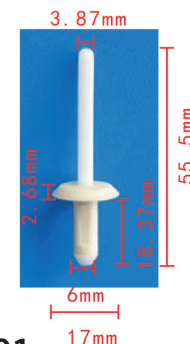

7191

Gyári számok: 14070914,
175 853 577 A,175853577A,
20433026,4370132



7197

Gyári számok: M271999,M403435,
MB271999,MB403435



7213

Gyári számok: 8934201235



 
7217

Gyári számok: 2998430




7218

Gyári számok: 332364,3691590,
389358,4004569,6031321,94530548

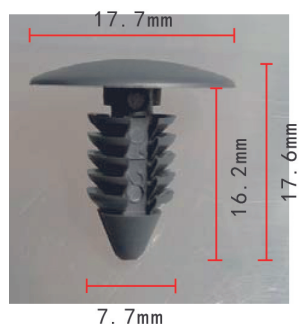


7219

 Gyári számok: 480534,6030538,
6270163

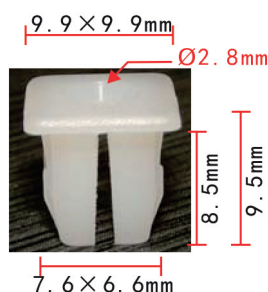

7229

 Gyári számok: 8934201262,
9669486

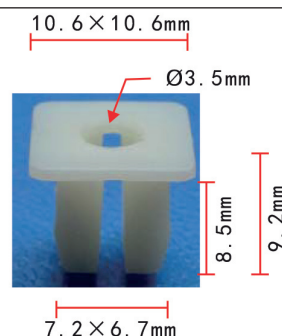


7231

Gyári számok: 1370853,179 813 883,
179813883,6029501



7238

 Gyári számok: 8934201767

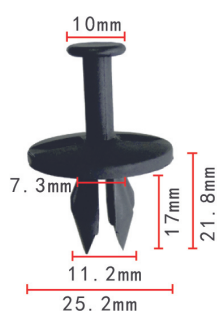

7242

Gyári számok: 14045480,6508746 AA,
6508746AA



7245

Gyári számok: 6501590,N803421-S,
N803421S



7249

Gyári számok: 15596280,6035274



 
7261

Gyári számok: 6502871,N803946-S,
N803946S,W706350-S300,
W710752SSC




7263

Gyári számok: 10195515,4696488, 6503163,N805026-S,N805026S

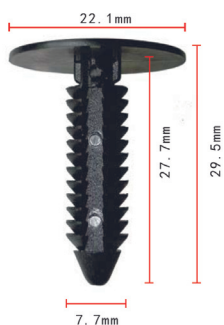


7272

 Gyári számok: 22547243,3C0863559, 3C0863559,6501916, W706635-SSW,W706635SSW

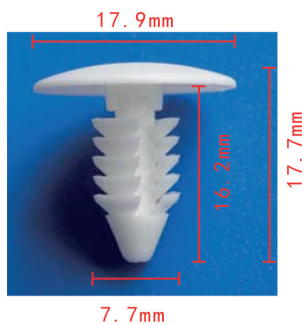

7273

 Gyári számok: 0940907326, 0940907350,14093311,20732399, 3691590,389358,4004569, 6031321,94530527,94530548

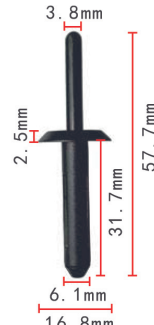

7289

Gyári számok: 4370138,6503860, N804675-S,N804675S



 
7291

Gyári számok: 22566221,6501577



7293

Gyári számok: 09409-08335, 1039463,21030249,4803228, 6503598,770 104 92 71, 7701049271,8E0 825 267, 8E0825267,N807389-S,N807389S

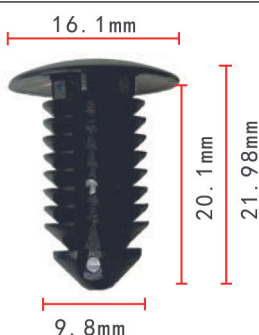

7300

Gyári számok: 6504043,N807721-S, N807721S



 
7304

Gyári számok: 10121502,1314934, 390018S,6033082,6033840



7308

Gyári számok: 6503106

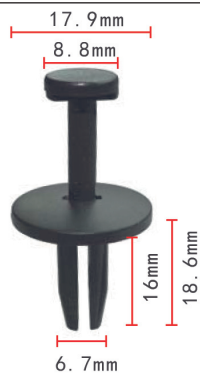

7310

Gyári számok: 6503454



7314

Gyári számok: 6502104



 
7326

Gyári számok: 6503401,6503819



7331

Gyári számok: 15149708,4805808, 6506008AA

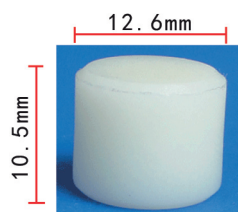

7333



 
7341

Gyári számok: 5GC71RC3AA, 5GF92RC3AA,N808791




7356

Gyári számok: 385330S,6003351, D30Z-16776-A,D30Z-16776A, D30Z16776A,N6003351

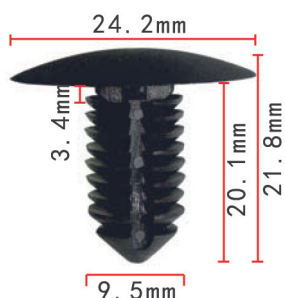

7359

 Gyári számok: 22189414,
6505667AA

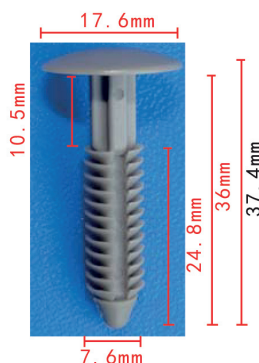

7383

Gyári számok: W705955-S300,
W705955S300



7450

Gyári számok: 000 990 78 92,
001 988 03 25,0019880325,
68009867AA,A0019880325

 


7494

Gyári számok: 388904S,
4381395,6501086



7503

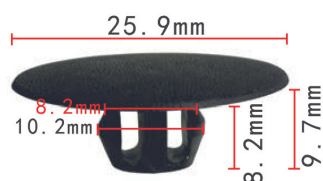

7504

Gyári számok: 30871878,
MB020923,MU481187



 
7538

Gyári számok: 25705182




7605

Gyári számok: 06508863 AA,
06508863AA,11589289,11589291,
48 11 301,4811301,4855809,
6508863AA,C70149,
W713610-S300,W713610S300

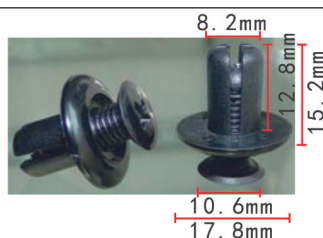


7620

 Gyári számok: 01553-0038U,
09409-09302,0G032-50037A,
0G032 50037A,0G03250037A,
60001,86590-28000,8659028000,
B092-51-833,MB-455-56143,
MB45556143,UB39-45-919,
W705845-S300

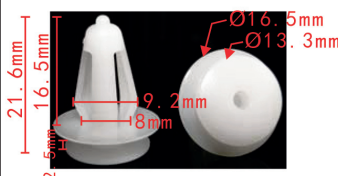


7672

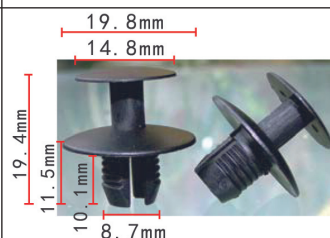 

7678

 Gyári számok: 230 990 01 92,
2309900192,6104900 AA,
6104900A,6104900AA,
A2309900192

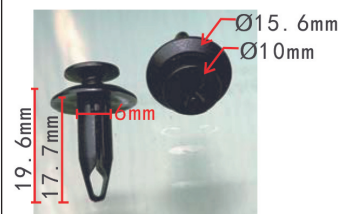


7692

Gyári számok: 1007932,58211Z,
96FG-16K262-AA,
W703915SSYYB6,YS4Z16K262AA



7710

 Gyári számok: 11589293,
18 16 589,1816589,4811301,
4855809,C60644,W712196-S300,
W712196S300

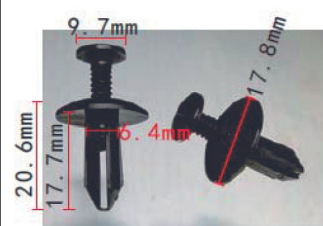


7725

Gyári számok: 4 943 984,
4943984,6508197AA,
C70340,W706092-S300,
W706092S300




7759

 Gyári számok: 00152492,06100041,
06500933,06504118,11503714,
52028851AA,52028851AB,
52028851AC,C60616

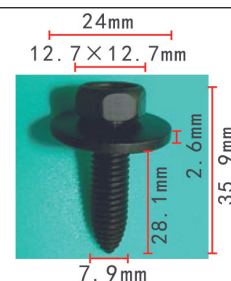


7764

 Gyári számok: C60617

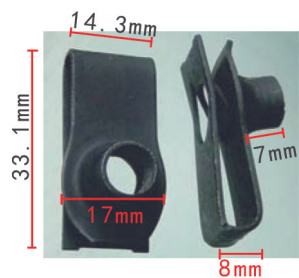

7768

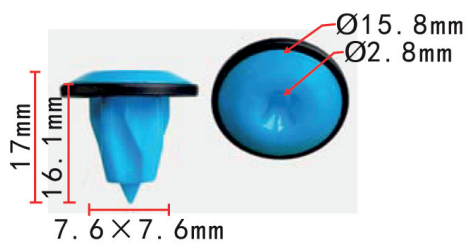 


7848

Gyári számok: 11061,46408953,68094674AA



7877

 Gyári számok: 5160260-AA,
5160260AA

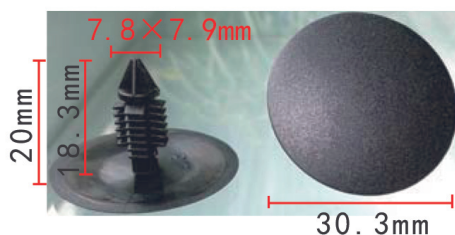

7880

Gyári számok: 6001546909,7703077090,C40135



 
7003

Gyári számok: 0940907326, 0940907350, 10021, 14093311, 20732399, 332364, 3691590, 389358, 6031321, 94530527, 94530548



7023

Gyári számok: 6822QP, 90189-06013, 90189-06047, 90189-06065, 9018906013, 9018906047, B21002, B455-56-145, B45556145, MR971765

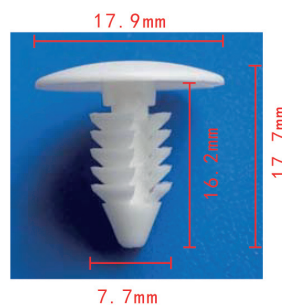


7273

Gyári számok: 0940907326, 0940907350, 14093311, 20732399, 3691590, 389358, 4004569, 6031321, 94530527, 94530548



7338

 Gyári számok: 09409-08327-000, MR200300

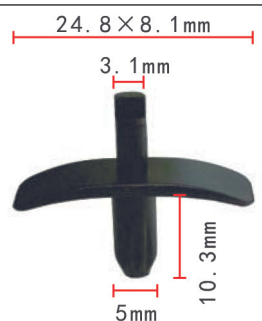

7345

Gyári számok: 1392902, 9133073-8, 9133073, 91330738



 
7369

Gyári számok: 0000856535, 33030526, 8565 35, 856535, 968865987703



7401

Gyári számok: 357853575, 6979C6, 6991H4, 95667895

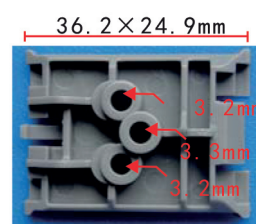


7452




7461

 Gyári számok: 0000743707, 743707

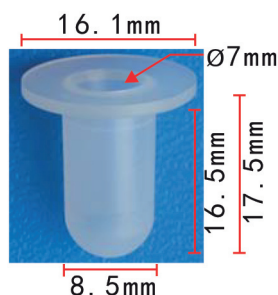


7464

 Gyári számok: 0000698771, 109746420, 51 44 7 780 135, 51447780135, 698771, 7701397195, 7703074022, 82312646

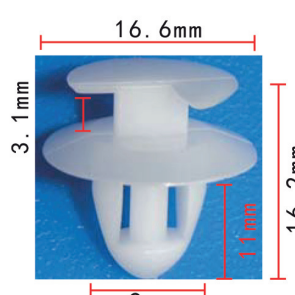


7475

 Gyári számok: 14188380, 7703077059

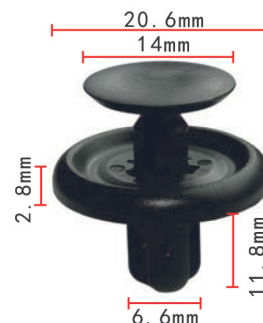

7478

 Gyári számok: 90467-07201, 9046707201

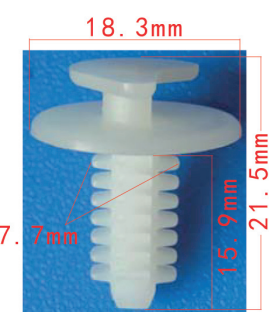

7499

Gyári számok: 00009399W4, 5755291, 82456516, 9399 W4, 9399W4



 
7509

Gyári számok: 1 104 880, 1 916 670, 1104880, 161 867 299 01C, 16186729901C, 1618672999, 51 47 1 916 670, 6136889, 90087290, A000990299, E8440525, N 0385491, N0385491, N0385494, N90112201, N90112202, N91018901




7534

Gyári számok: 00006992C6, 10147, 5757139, 60586984, 6992C6

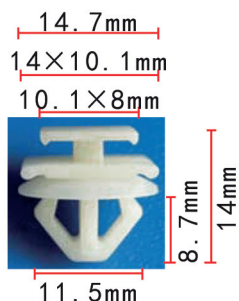


7541

 Gyári számok: 00006995X3, 6995X3

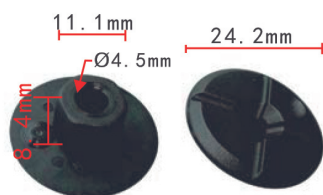


7565

 Gyári számok: 201 990 00 50, 2019900050, 441955973B, 51 71 1 958 025, 51711958025, 712731, A2019900050, C10031

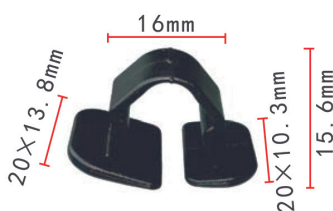


7581

 Gyári számok: 1H5 863 849, 1H5 863 849 A 01C, 1H5863849, 50146Z, 8E0 863 727 A, 8E0863727A

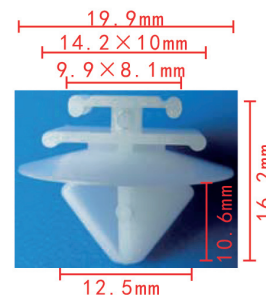

7601

 Gyári számok: 007 173 79 18, 0071737918, 12409, 71719954, 7701049270, 8565.40, 856540

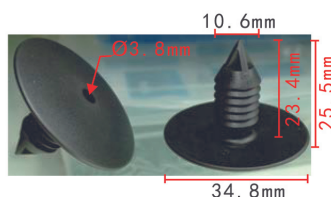

7608

Gyári számok: 50080216, 700 580, 7518.N8, 7518N8, 7703077225, A18000



 
7624

Gyári számok: 16 092 672 80, 16 227 495 80, 1609267280, 1622749580, 51834606, 8565 53, 8565.53, 856553, 96 489 756 80, 9648975680, C60151



7626

Gyári számok: 30648141, 6991.S6, 6991S6, 6991Z1, 77 01 056 846, 8337FC, 8E9 867 299, C10091

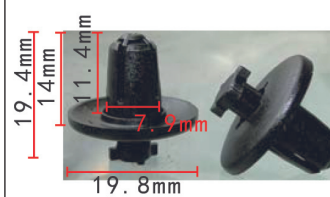


7627

Gyári számok: 7013.J0, 7013J0, 8211.WV, 8211WV, A20001




7629

 Gyári számok: 6997.83, 6997.T2, 699783, 6997T2, 6997TZ, C10090

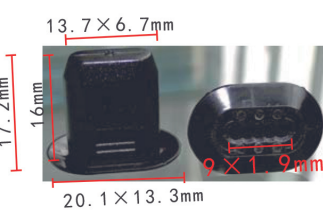


7643

 Gyári számok: 1608722380, 45 01 607, 4501607, 500389689, 6997.96, 699796, 7703081185, 9161907, 9621824880, C60104

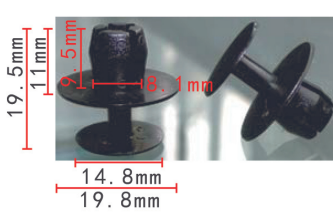


7644

 Gyári számok: 123 990 02 92, 51 48 1 938 725, 51481938725, 7813.24, 781324, A 123 990 02 92, A1239900292, C30014

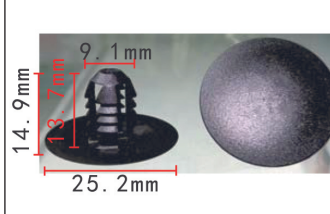


7648

 Gyári számok: 6 448 410, 6 678 518, 6448410, 6678518, 678518, A15749, W700671-S300, W700671S300

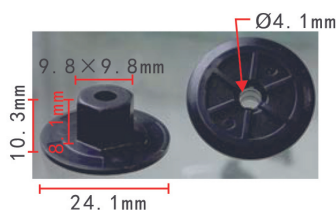


7653

 Gyári számok: 441955973B, 51 71 1 958 025, 51711958025, 7127.31, 712731, A 201 990 00 50, A2019900050, C10031

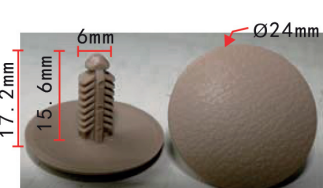

7670

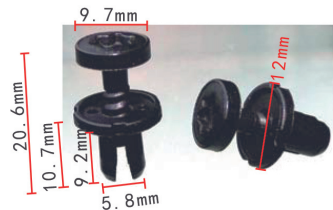 


7689

Gyári számok: 6555.LE, 6555LE, 7703072236, 7L6 868 307, 7L6868307, 8Z0 857 784, 8Z0857784, A 000 991 66 40, A0009916640, A60953




7702

 Gyári számok: 00006991X7, 6991.X7, 6991X7, 999 507 497 40, A17156

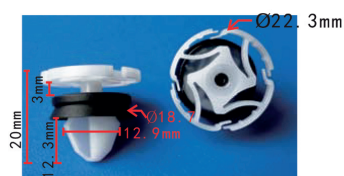


7703

 Gyári számok: 7703077476,9345.
ZN,9345ZN,C60332

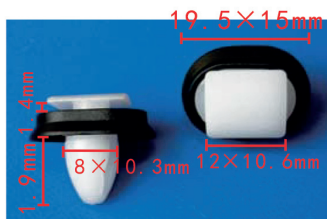


7704

 Gyári számok: 71728806,8565.43,
856543,C10093

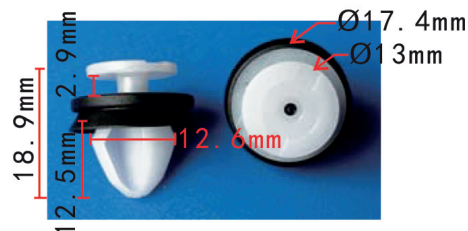


7705

 Gyári számok: 1 76 073,13317099,16 121 083 80,1612108380,176073,
4 860 409,44 01 080,44 22 820,4401080,4860409,5 179 084,5179084,
6991.Y8,6991Y8,77 03 077 468,77 03 077 469,7703077469,9341.PF,
9341PF,93453019,95508747,96 542 807 80,9654280780,C40790,
W713489-S300,W715789-S300

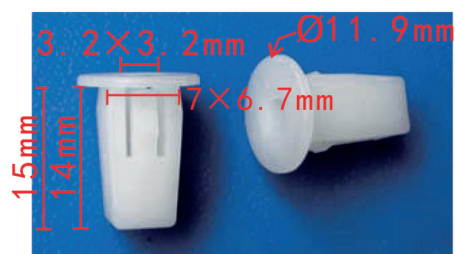

7717

 Gyári számok: 07 14 6 976 114,07146976114,7146976114,C70334

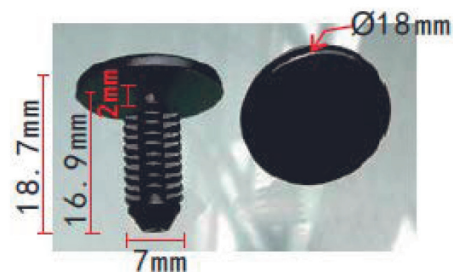


7723

Gyári számok: 10530,6992.95,699295,6999.R2



7730

 Gyári számok: 11361,6995.A3,
6995A3,7703077111

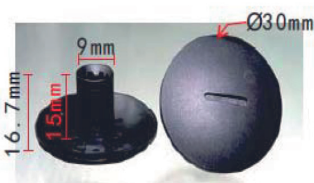


7732

Gyári számok: 10556,6 142 789,
6142789,6995X9,77 03 081 054,
77 03 081 127,77 03 081 227,
77 03 081 237,7703081054,
E8643115




7740

 Gyári számok: 90159-60383,
9015960383,C60610,N90542603

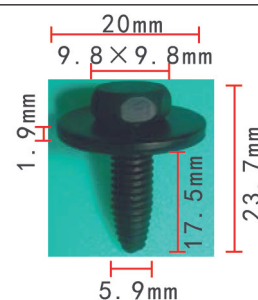

7750

 
Gyári számok: 7013.AK,7013.GA,
7013AK,7013GA,C60615

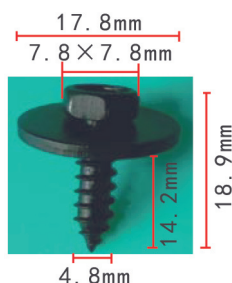


7753



 7754

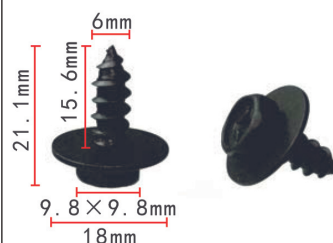


7762

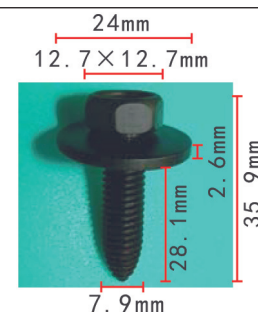 

7764

 Gyári számok: C60617

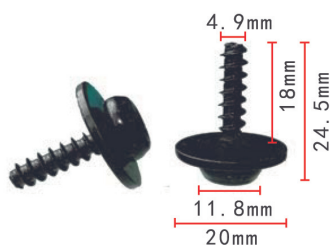


7765

Gyári számok: 11093773,1388632, 1449533,2020106,C60460, N 103 546 02,N10354602, W700501-S303,W700501S303, W708591-S424,W708591S424



7783

 Gyári számok: 6822.NK,6822NK, 90467-07166,90467-07201, 9046707166,9046707201,B22090, MU000262

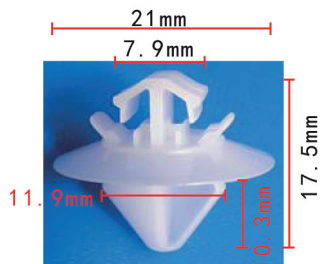


7796

Gyári számok: 71728805,856548, 856560,C40338



7808

 9025.J8,9025.W9,9025J8,9025W9, C60595

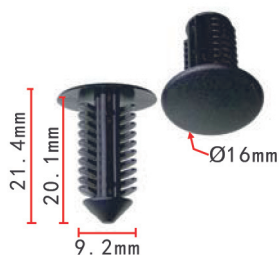


7813

Gyári számok: 6389840061, 6389841661,7703077153, 7703077356,A 638 984 00 61, A 638 984 16 61,C10024, SS070069A




7820

 Gyári számok: 8565.62,856562

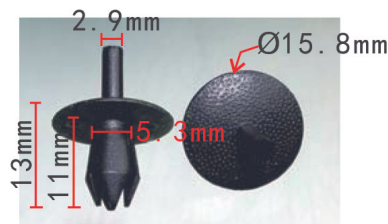

7823

 Gyári számok: 0009905592,1009164,23 17 703,2317703,3923475,500355 891,90116376,A 000 990 55 92,A0009905592,A13840,N 102 195 01, N 102 195 02,N10219501,N10219502,W703904-S300,W703904S300

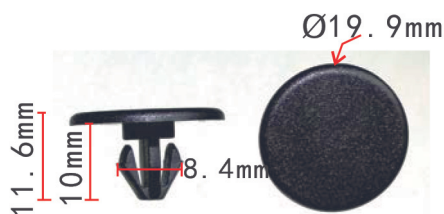


7825

Gyári számok: 6995.V6,6995V6,C40841




7832

 Gyári számok: 6990E0,6997.86,699786,7701044547,96 197 690 80, 9619769080,A82031,C10088

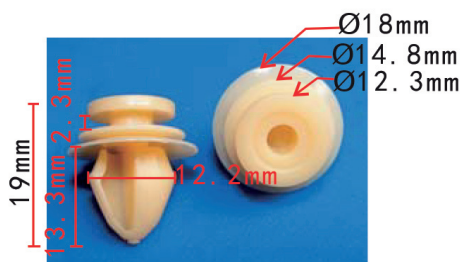


7863

 Gyári számok: 6001549265,6991.56,699156

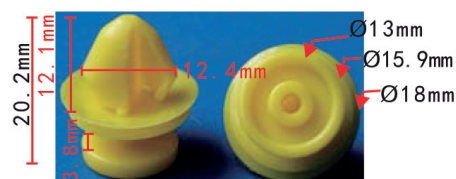

7879

 Gyári számok: 6991.S9,6991S9,C2D5807,C60337

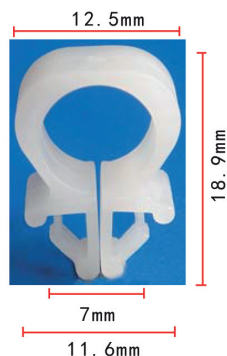


7040

Gyári számok: 4042711,
9927-70-901,99277-0901,
992770901




7125

 Gyári számok: 14591487,
17887787,4 292 906,4292906

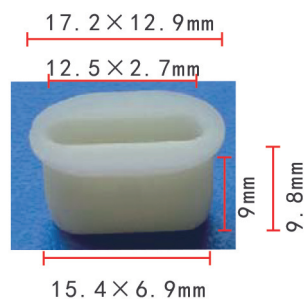


7241

 Gyári számok: 14032291,7622606,
7754387

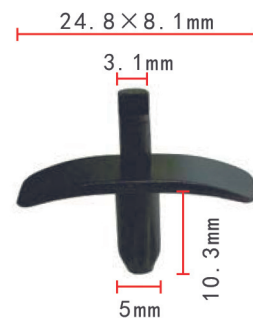

7345

 Gyári számok: 1392902,
9133073-8,9133073,91330738

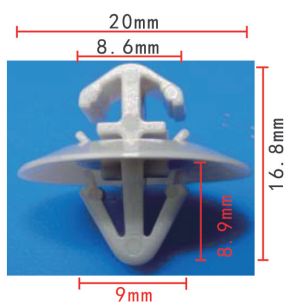

7376

Gyári számok: 44 12 053,4412053,
45 01 568,4501568,500326896,
7701470779,7703077421,
78839-00QAB,7883900QAB,
9161868



7378

Gyári számok: 504056662,
82421028



7379

Gyári számok: 14593487,
82450771



7380

 
Gyári számok: 504056662,
82421028



7381




7387

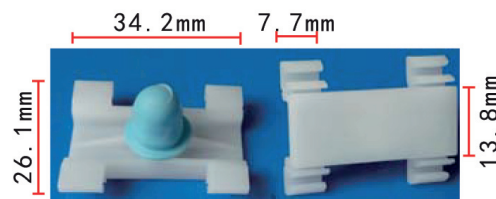


7397

 Gyári számok: 1 72 017,172017,51 13 8 166 675,51138166675,71717421,
90590995

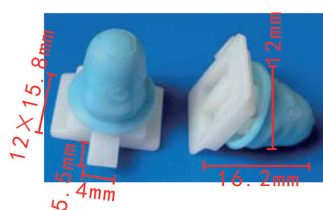


7405

 Gyári számok: 3A0 853 575 A,
3A0 853 575A,3A0853575A

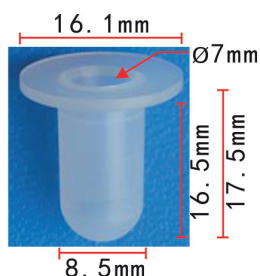

7464

 Gyári számok: 0000698771,
109746420,51 44 7 780 135,
51447780135,698771,
7701397195,7703074022,
82312646

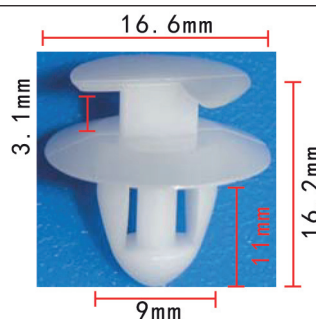

7475

Gyári számok: 14188380,
7703077059



7499

Gyári számok: 00009399W4,
5755291,82456516,9399 W4,
9399W4



7505

Gyári számok: 09409-08326,
09409-08332,5482087,
6777158010,71741886,
90467-10201,909130018



7534

Gyári számok: 00006992C6,10147,
5757139,60586984,6992C6



 
7539

Gyári számok: 10078,14592287




7543

Gyári számok: 10320,60503610

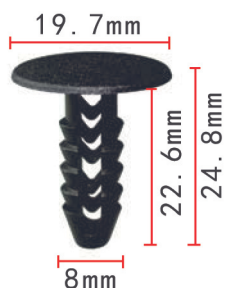


7545

 Gyári számok: 10053,14592087

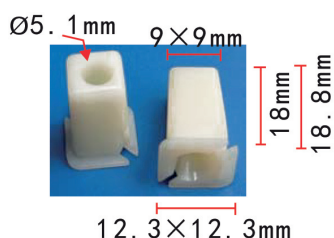

7546

 Gyári számok: 14222581,15028

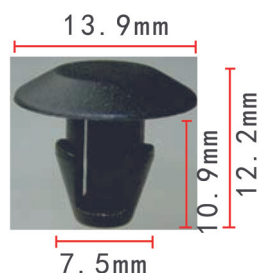


7547

Gyári számok: 10093,7 6778 65,
7677865



7548

 Gyári számok: 10041,14591784

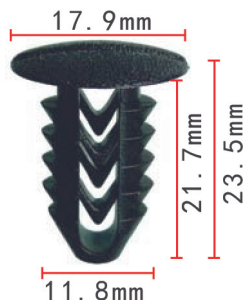

7550



7554



7558



7571

Gyári számok: 09409-07332-000,
09409-07332,71 741 883,
71 768 111,71741883,73155SS0004,
9046707164,959AK07332,B23143
,MR220501



 
7581

Gyári számok: 1H5 863 849,
1H5 863 849 A 01C,1H5863849,
50146Z,8E0 863 727 A,
8E0863727A




7584

Gyári számok: 000 990 34 92,
0009903492,140 994 00 48,
1L0 853 934,51 16 1 881 149,
51161881149,51722681,6972.10,
77 03 072 116,7903072170,
A 000 990 34 92,A 140 994 00 48,
A0009903492,N 10259301

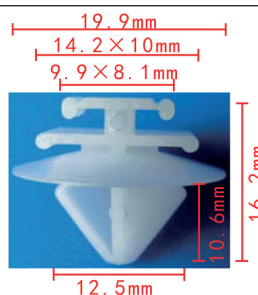

7601

 Gyári számok: 007 173 79 18,
0071737918,12409,71719954,
7701049270,8565.40,856540

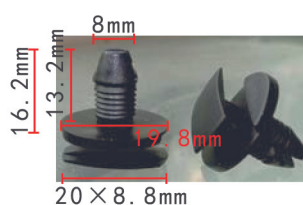

7624

Gyári számok: 16 092 672 80,
16 227 495 80,1609267280,
1622749580,51834606,8565 53,
8565.53,856553,96 489 756 80,
9648975680,C60151

 


7629

Gyári számok: 6997.83,6997.T2,
699783,6997T2,6997TZ,C10090




7642

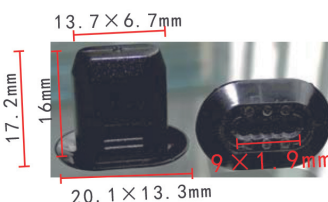


7643

 Gyári számok: 1608722380,
45 01 607,4501607,500389689,
6997.96,699796,7703081185,
9161907,9621824880,C60104

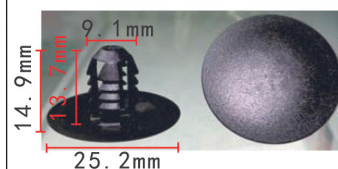


7648

 
Gyári számok: 6 448 410,6 678 518,
6448410,6678518,678518,A15749,
W700671-S300,W700671S300

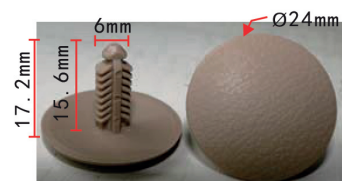


7670

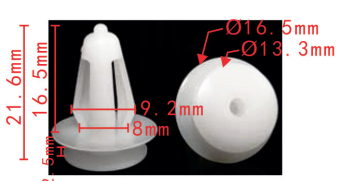 

7672

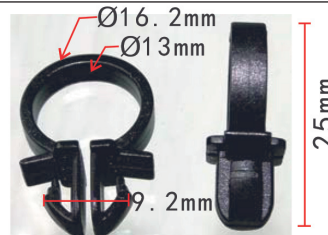 


7676

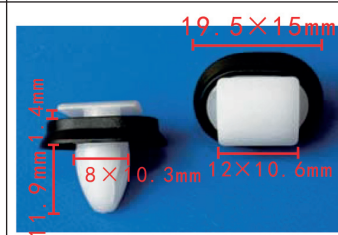 


7704

 Gyári számok: 71728806,8565.43,
856543,C10093

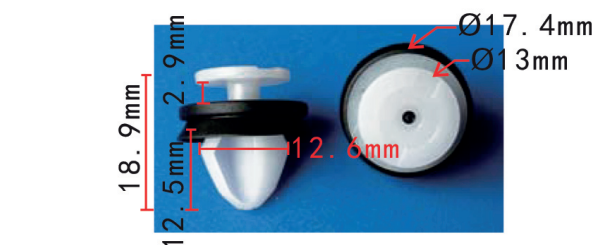

7705

 Gyári számok: 1 76 073,13317099,16 121 083 80,1612108380,176073,
4 860 409,44 01 080,44 22 820,4401080,4860409,5 179 084,5179084,
6991.Y8,6991Y8,77 03 077 468,77 03 077 469,7703077469,9341.PF,
9341PF,93453019,95508747,96 542 807 80,9654280780,C40790,
W713489-S300,W715789-S300

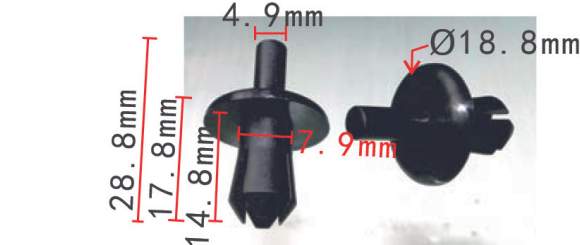

7706

 
Gyári számok: 000 990 29 92,001 990 16 92,1104882,161867299,
199 016 92 92,51 47 8 170 166,51751426,90450482,9133417,94530507,
A 000 990 29 92,A 001 990 16 92,C70310



7742




7744

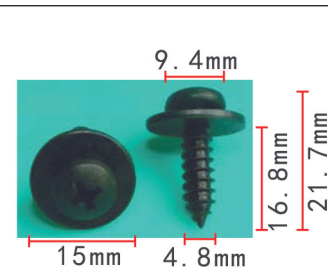


7749

 Gyári számok: 15532209,C60361

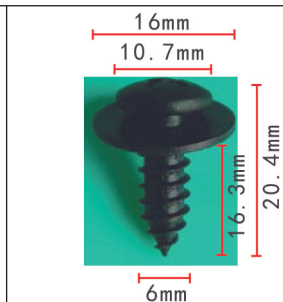


7754

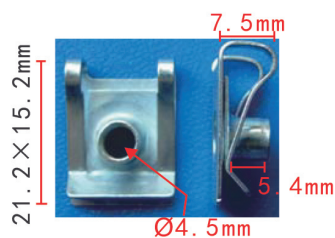 

7756

 Gyári számok: 003 994 42 45,
0039944245,16100,46473571,
61 13 1 372 033,61131372033,
A 003 994 42 45,A0039944245

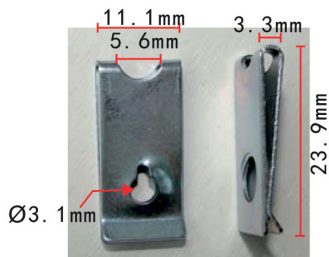


7757


Gyári számok: 14 50 657,1450657,
16034,211837223,N 01 543 01,
N0154301



 7758

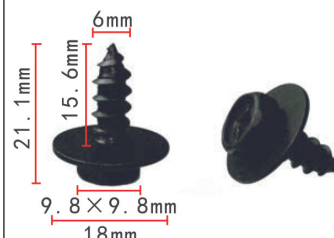

7762

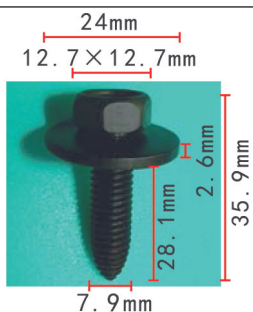 


7764

Gyári számok: C60617




7794

 Gyári számok: 05480772,
09409-15302,0940915302,
5480772,71741894,C30363

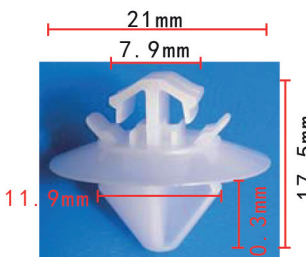


7796

 Gyári számok: 71728805,856548,
856560,C40338

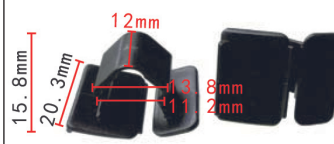


7807

 Gyári számok: 11 62 014,46804433,
95511141,C60373

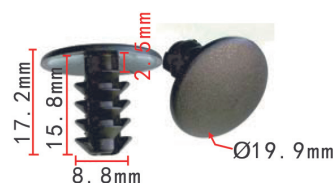


7809

 Gyári számok: 68095492AA,
718115080,C60665

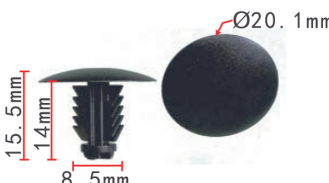


7810

 Gyári számok: 10180,1RZ74JXWAA,
735266957

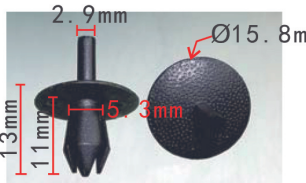

7823

 Gyári számok: 0009905592,
1009164,23 17 703,2317703,
3923475,500355891,
90116376,A 000 990 55 92,
A0009905592,A13840,
N 102 195 01,N 102 195 02,
N10219501,N10219502,
W703904-S300,W703904S300

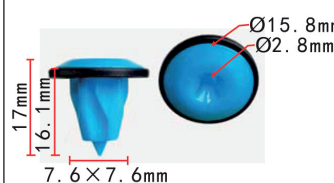

7848

Gyári számok: 11061,46408953,
68094674AA



7864

Gyári számok: 0046306526,11002,
14188282,46306526,60507749



7002

Gyári számok: 02860454,04630747,06030441,06502381,06505403AA,06509015AA,11569768,1595864,15958694,1605396,3885775,389358S,4004569,4004919,53001698,53001699,6030441,6036007AA,85746-06000,8574606000,B11146,J4004569,J4004919,W705589-S300,W705589S300



7003

Gyári számok: 0940907326,0940907350,10021,14093311,20732399,332364,3691590,389358,6031321,94530527,94530548



 
7005

Gyári számok: N804448



7006

Gyári számok: B12565,N801925-S,N801925S

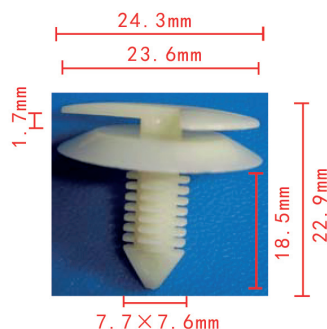

7009

Gyári számok: 4005470,6003349,6032363,9685057,B22011,V98905101



7028

Gyári számok: 385661-S,385661S,6003349,6032363,B22037,N989022



7033

Gyári számok: 20590899



7036

Gyári számok: 07 14 6 971 349,07146971349,1304727,1577344S,20452072,20664092,4638136,B22046,N804570-S,N804570S



 
7037

Gyári számok: 20510029,34202672,N803362-S,N803362S




7040

Gyári számok: 4042711,9927-70-901,99277-0901,992770901

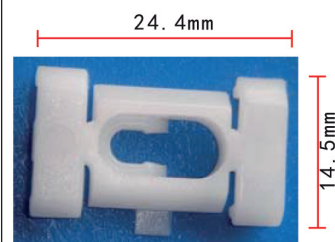

7051

 Gyári számok: 15633873,20175051

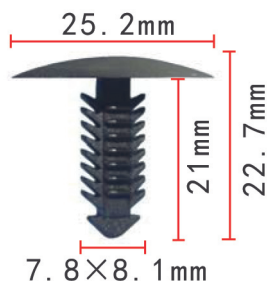

7059

Gyári számok: 388904-S,388904S,4381395,6501086,B22101



7062

Gyári számok: W701380-SSW,W701380SSW



 
7064

Gyári számok: 379830-S,379830S



7066

Gyári számok: 01553-00515,63844-01A00,6384401A00,63854-01A00,63854-01A00 NB,63878-01E10,B16858,MB406894,MB487004,MB866568,MNA0156145,NA01-56-145,NA0156145

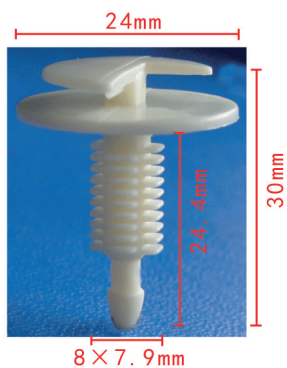

7076

Gyári számok: 387496-S,387496S



 
7082

Gyári számok: 25514221,6003587




7083

Gyári számok: 20032850,
3861577,387258-S,387258S

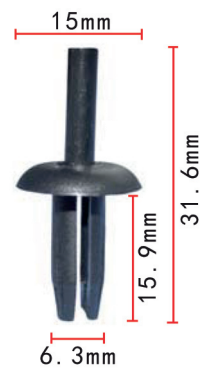

7084

 Gyári számok: 387843-S,387843S

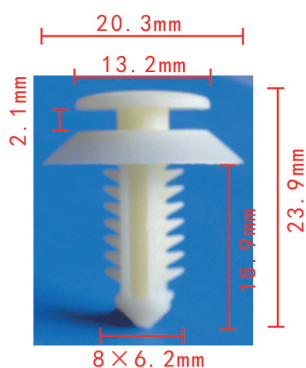

7088

Gyári számok: N802900,N805155-S,
N805155S



 
7095

N804583-S,N804583S



7098

Gyári számok: 15545202,15607165,
15612948,15953247

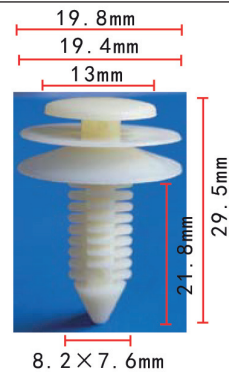

7100

Gyári számok: 389144-S,389144S



7103

Gyári számok: 383142-S,383142S,
90467-06054,9046706054



 
7107

Gyári számok: 388.930-S,388930-S,
388930S,B22186




7113

Gyári számok: 26399-40U00,
2639940U00,90467-11126,
90467-12042,9046711126,
9046712042,N807994-S,
N807994S

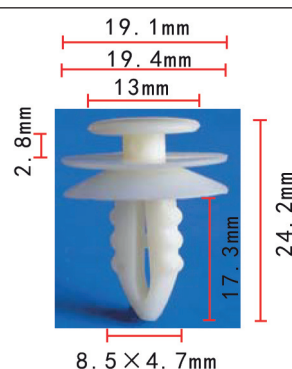


7115

 Gyári számok: 387477-S,387477S,
B22199

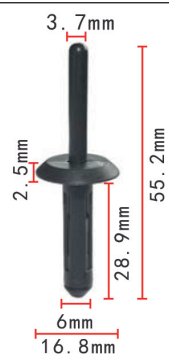

7117

 Gyári számok: 10184895,14063981,
6500911,6501559,B13750,
N803043-S,N803043S,N803862-S

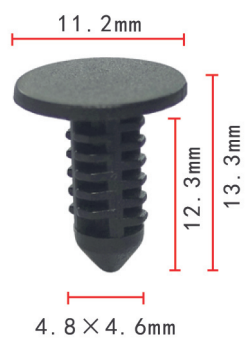

7119

Gyári számok: N803170-S,
N803170S



7120

Gyári számok: 1631564,N804379-S,
N804379S



 
7121

Gyári számok: N804349-S,
N804349S




7122

Gyári számok: 22718305,
6501067,90467-08104,
N802734-S,N802734S

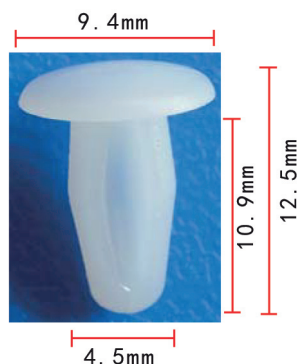


7123

 Gyári számok: C1A-6220807-A,
C1A6220807A

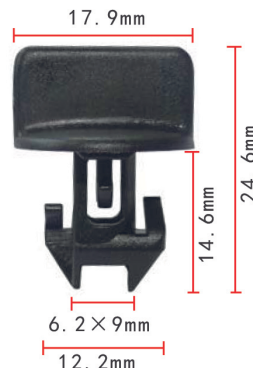


7124

 Gyári számok: 25535963,N811772-S,
N811772S

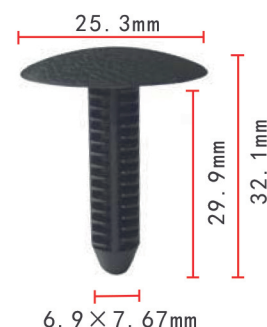

7158

 Gyári számok: E9S-6302354-ACW,
E9S6302354ACW

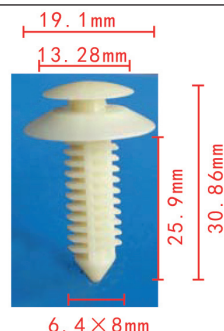


7160

Gyári számok: 10143422,
34202599,55196747AA,
55196858AA,8934-202-599,
N805612-S100,N805612S100




7167

 Gyári számok: C0AB-6423240-B,
C0AB6423240B

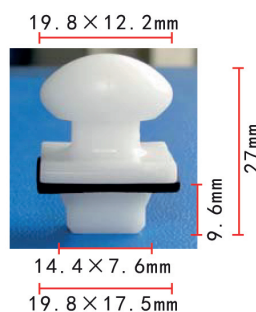


7186

 Gyári számok: E110-50-E13,
E11050E13,LC62-50-E11,
LC6250E11,W705849-S300,
W705849S300

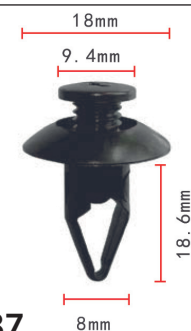


7187

 Gyári számok: 01553-00515,
63844-01A00,63854-01A00,
63854-01A00 NB,NA01-56-145,
NA0156145,W706713-S300,
W706713S300

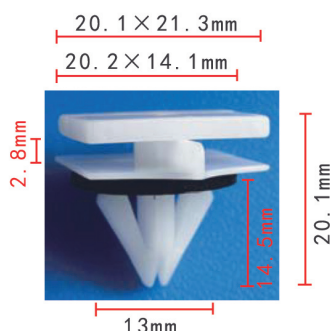


7188

 Gyári számok: 11518357

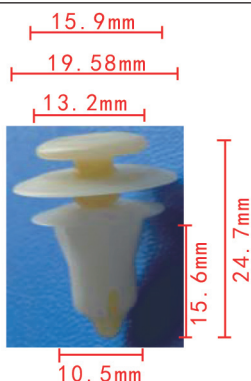


7192

 Gyári számok: W708621-S300,
W708621S300

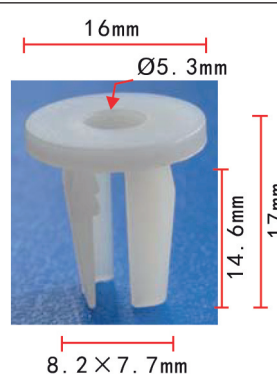

7208

 Gyári számok: W700566-S300,
W700566S300

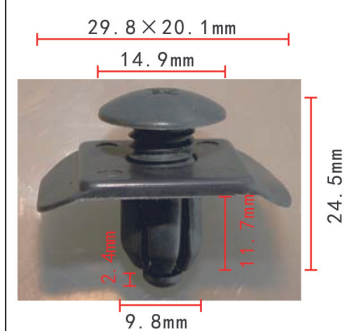


7212

Gyári számok: 81910TA100,
BF6750033,E7GZ-17A904-B,
E7GZ17A904B,MR114963



7218

 Gyári számok: 332364,3691590,
389358,4004569,6031321,
94530548

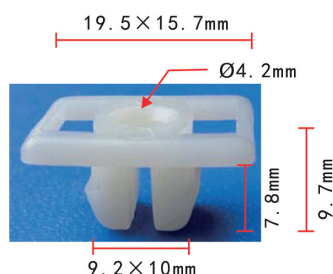

7221

Gyári számok: 380707-S,380707S



7222

Gyári számok: 20413107,388246-S,
388246S



 
7223

Gyári számok: 20413107,388246-S,
388246S



7224

Gyári számok: 387182-S, 387182S

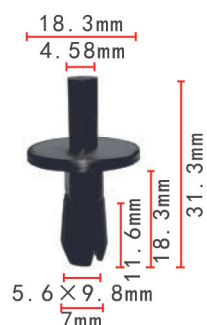

7225

Gyári számok: 387944-S, 387944S



 
7227

Gyári számok: N-800387-S, N800387S



7230

Gyári számok: 389443-S, 389443S

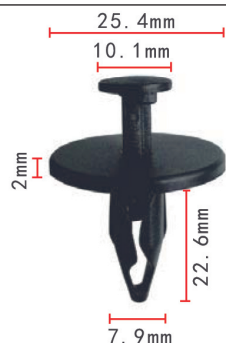

7239

Gyári számok: 2057024S, N-804614-S, N804614S



7244

Gyári számok: N803716-S, N803716S



 
7245

Gyári számok: 6501590, N803421-S, N803421S




7246

Gyári számok: 14093088, N802781-S, N802781S, W704340-S300, W704340S300

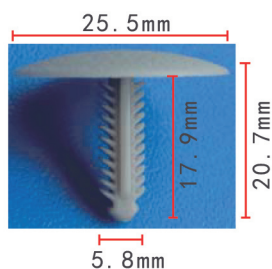


7247

 Gyári számok: N803170-S, N803170S

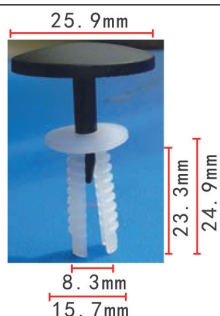


7256

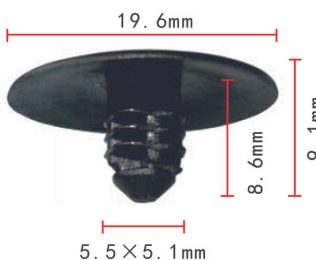 

7258

 Gyári számok: F22Z-16774-A, F22Z16774A, G030-68-885-38, G0306888538, GA2A-56694, GA2A56694

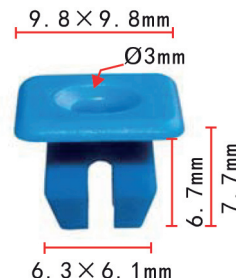


7259

Gyári számok: N802376-S, N802376S



7260

 Gyári számok: 10139822, 25680782, N808147-S, N808147S

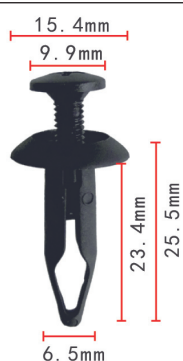

7261

Gyári számok: 6502871, N803946-S, N803946S, W706350-S300, W710752SSC



 
7262

Gyári számok: N804837-S, N804837S



7263

Gyári számok: 10195515, 4696488, 6503163, N805026-S, N805026S

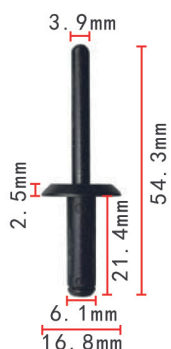


7270

Gyári számok: N804759-S,
N804759S




7271

 Gyári számok: N805231-S,
N805231S

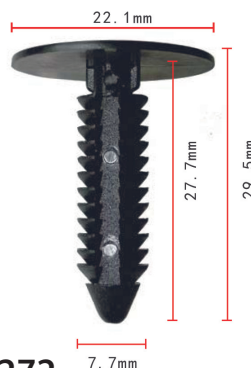

7272

 Gyári számok: 22547243,
3C0 863 559,3C0863559,6501916,
W706635-SSW,W706635SSW

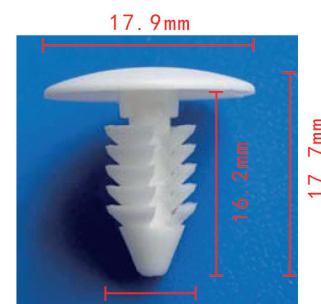

7273

Gyári számok: 0940907326,
0940907350,14093311,20732399,
3691590,389358,4004569,6031321,
94530527,94530548



7274

Gyári számok: N804674-S,
N804674S



 
7279

Gyári számok: N808048-S,
N808048S,W705532-S300,
W705532S300



7284

Gyári számok: N803613-S,
N803613S

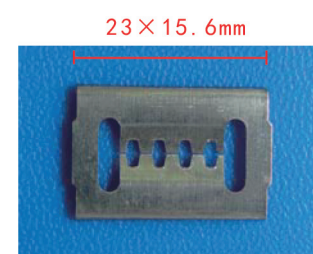


7286

Gyári számok: F32Z-17C756-S,
F32Z17C756S,GJ21-50-049,
GJ2150049



7287

 Gyári számok: E92Z-17C756C,
E92Z17C756C,GJ21-50-034,
GJ2150034

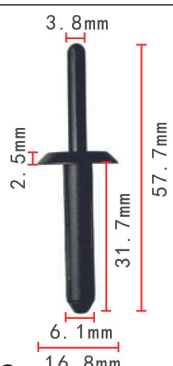

7289

Gyári számok: 4370138,6503860,
N804675-S,N804675S



 
7290

Gyári számok: 15681408,
N803709-S,N803709S




7293

Gyári számok: 09409-08335,
1039463,21030249,4803228,6503598,
770 104 92 71,7701049271,
8E0 825 267,8E0825267,N807389-S,
N807389S

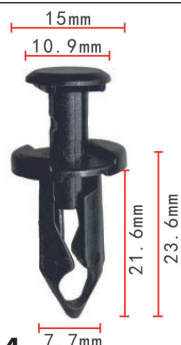

7294

 Gyári számok: 01553-0192U,
015530192U,11561878,
21075686,F3LY-14570-B,
F3LY-14570B,F3LY14570B

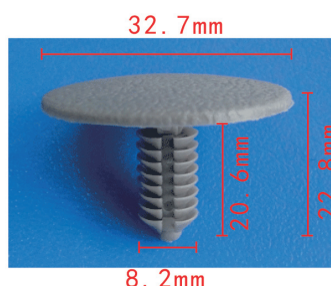


7297

Gyári számok: N805315




7299

 Gyári számok: 101-68-252-00,
1016825200,B101-68-252

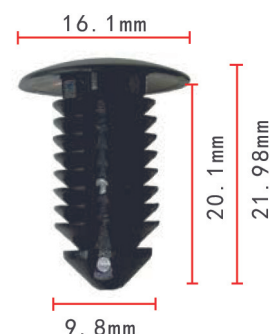

7300

 Gyári számok: 6504043,N807721-S,
N807721S

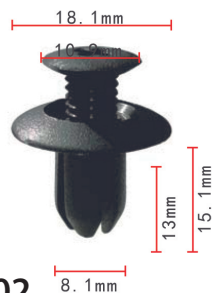

7302

Gyári számok: 092-51-833,
09251833,09409-09302,
B092-51-833,B09251833,
M-455-56143,M45556143,
MB-455-56143,MB45556143,
W705845-S300,W705845S300



7304

Gyári számok: 10121502,1314934,
390018S,6033082,6033840



7311

Gyári számok: 455-56-741,
45556741,B455-56-741,
F1CZ-16774-A,F1CZ-16774A,
F1CZ16774A



7312

Gyári számok: 01028521,1028521,
W701054-S300,W701054S300



7316

Gyári számok: N806322-S,
N806322S



 
7317

Gyári számok: N807578-S,
N807578S,N808332-S,N808332S



7318

Gyári számok: N807577-S,
N807577S,N808331-S,N808331S

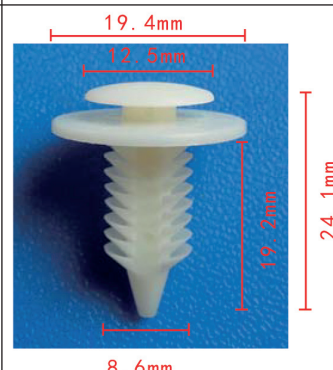

7322

Gyári számok: N805155-S,
N805155S



 
7326

Gyári számok: 6503401,6503819




7327

Gyári számok: 383297-S,
383297S,384051-S,384051S,
480534

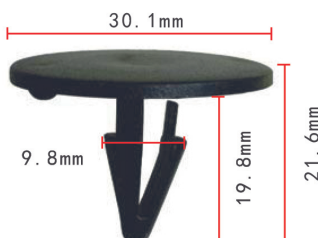

7332

 Gyári számok: 386553-S,386553S

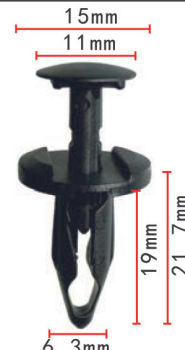


7334

Gyári számok: 21077123,3001337,
W705436-S300,W705436S300



7341

 Gyári számok: 5GC71RC3AA,
5GF92RC3AA,N808791

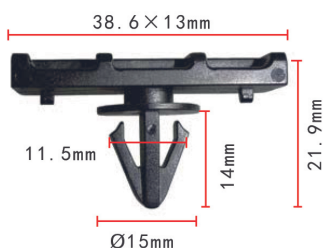

7344

Gyári számok: F6DZ-5410182-AA,
F6DZ5410182AA



7354

Gyári számok: E8FZ-5802354A,
E8FZ5802354A



 
7355

Gyári számok: F2UZ-1602354AAA,
F2UZ1602354AAA



7356

Gyári számok: 385330S,6003351,
D30Z-16776-A,D30Z-16776A,
D30Z16776A,N6003351

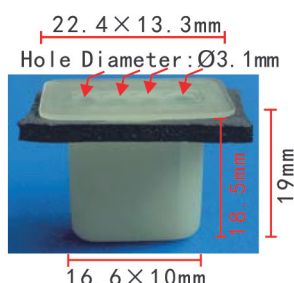


7357

Gyári számok: 25649667,
W705590-S300,W705590S300




7361

 Gyári számok: W708035-S300,
W708035S300

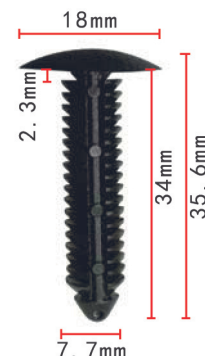


7363

 Gyári számok: W709002-SAA,
W709002SAA

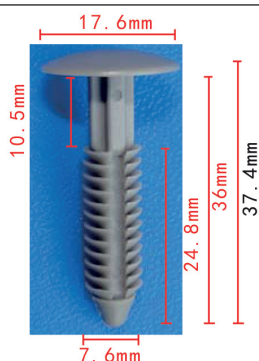


7383

 Gyári számok: W705955-S300,
W705955S300

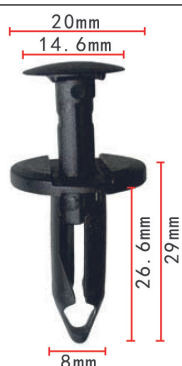

7389

 Gyári számok: 11518017,
W705955-S300,W708530S300

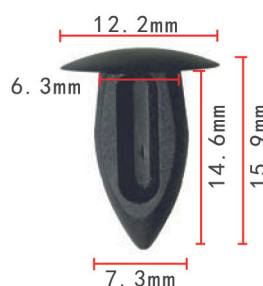

7390

Gyári számok: 375372-S,375372S



 
7391

Gyári számok: N802737-S,
N802737S



7414

Gyári számok: 1 57 979,1065204,
157979,1H0 837 719,1H0837719,
90579619

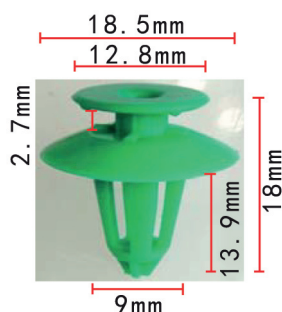


7431

Gyári számok: 011 988 76 78,
0119887678,1591426,
2E1 827 649,2E1827649,
A 011 988 76 78,A0119887678




7433

 Gyári számok: 000 988 03 28,000 988 05 28,1079129,2 207 713,
2207713,51 47 1 904 317,51471904317,6678518,6998849,90082231,
A 000 988 03 28,A 000 988 05 28,N90201601,N90201601H,
W700671-S300,W706023-S300

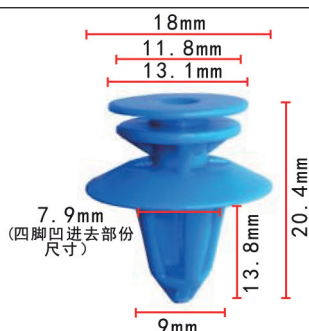


7448

 Gyári számok: 6 099 812,6099812

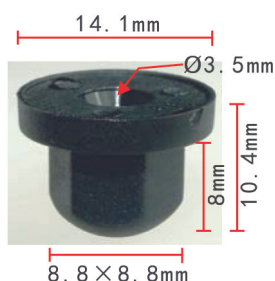


7449

 Gyári számok: 6 634 877,6634877

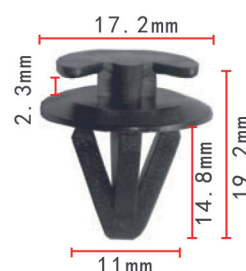


7465

 Gyári számok: 51 41 0 151 699,
51 41 8 172 050,51410151699,
51418172050,8172050

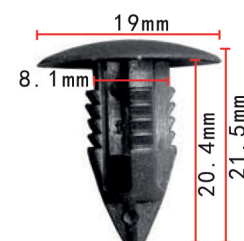

7469

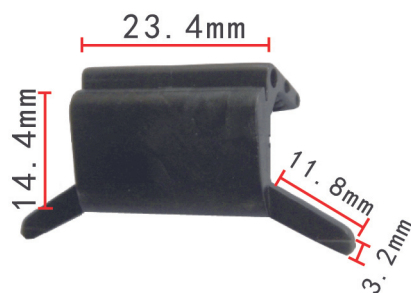 


7486

Gyári számok: 4L3Z-1510182-AA, 4L3Z1510182AA



7494

 Gyári számok: 388904S, 4381395, 6501086

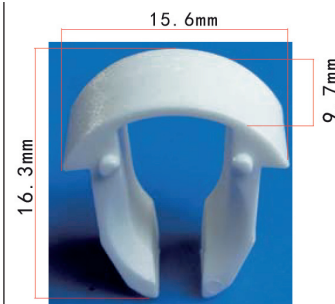

7495

Gyári számok: 4F12-9A317-AA, 4F129A317AA



 
7509

Gyári számok: 1 104 880, 1 916 670, 1104880, 161 867 299 01C, 16186729901C, 1618672999, 51 47 1 916 670, 6136889, 90087290, A000990299, E844052S, N 0385491, N0385491, N0385494, N90112201, N90112202, N91018901




7533

Gyári számok: 6725950, W704218

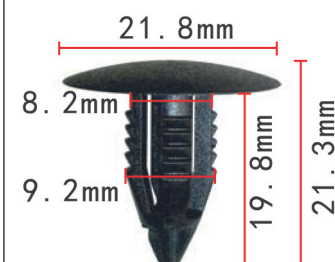

7535

 Gyári számok: 1018434, 51 48 8 181 420, 51488181420, 6725950

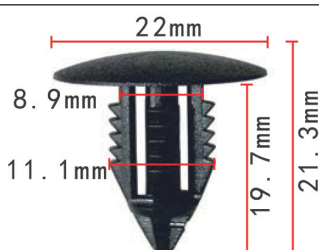

7536



7537

Gyári számok: W705956-S300, W705956S300



7557

Gyári számok: 6165102, A15266, E864335-S, E864335S



7567

Gyári számok: 3M8Z-1502316-A, 3M8Z1502316A, GJ6E-50-715A, GJ6E50715A



7580

 
Gyári számok: 1038008, 55127Z, W704309-S300, W704309S300




7585



7586

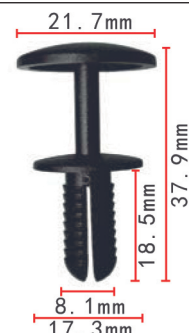


7588

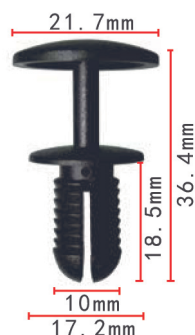 

7589



 7590

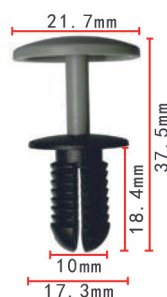


7591




7604

 Gyári számok: 11589291,
W713331-S300,W713331S300

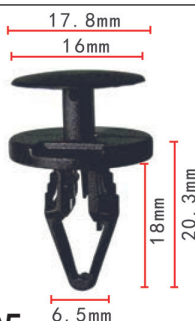


7605

 Gyári számok: 06508863 AA,
06508863AA,11589289,
11589291,48 11 301,4811301,
4855809,6508863AA,C70149,
W713610-S300,W713610S300

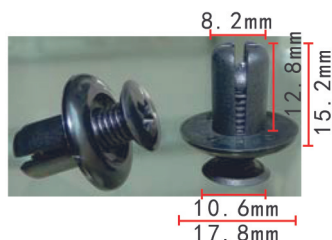

7620

 Gyári számok: 01553-0038U,
09409-09302,0G032-50037A,
0G032 50037A,0G03250037A,
60001,86590-28000,8659028000,
B092-51-833,MB-455-56143,
MB45556143,UB39-45-919,
W705845-S300

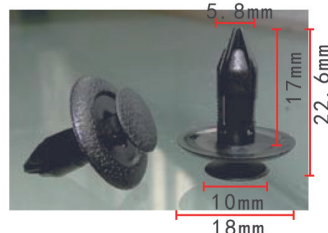


7621

Gyári számok: 3391007,
5R3Z-54310D12-AAA,
5R3Z54310D12AAA,80103,
B467-68-AC3,B46768AC325,
B46768AC328,GJ21-68885-B69



7645

 Gyári számok: 20380,629549,
6743363

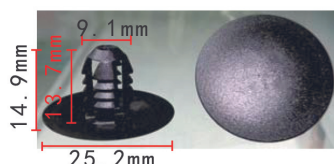


7648

Gyári számok: 6 448 410,6 678 518,
6448410,6678518,678518,A15749,
W700671-S300,W700671S300




7657

 Gyári számok: 6 696 122,6696122,
C50873,DKP5279L,
W701194-S300,W701194S300

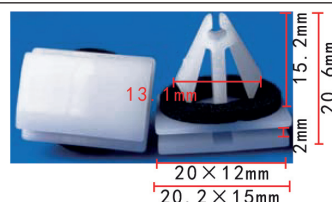


7660

 Gyári számok: 5 270 438,5270438,
W715201-S300,W715201S300,
W716352S300

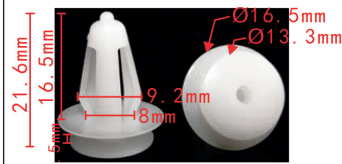

7672

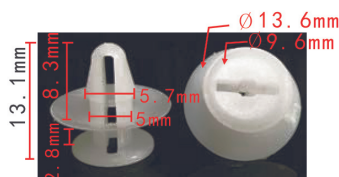 


7679

Gyári számok: 1 214 485,1214485,
B23168,W709011-S300,
W709011S300



7680

 Gyári számok: 1 257 376,1257374,
1257376,W709004-S300,
W709004-S300,W709004S300

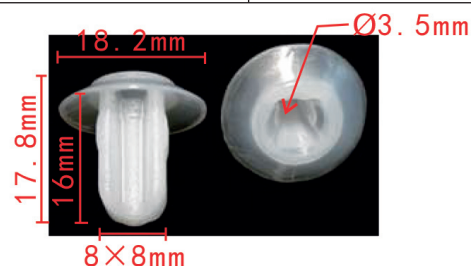

7681

Gyári számok: 1 060 318,1060318



 
7685

Gyári számok: 1 037 671, 1 041 543, 1 044 806, 1 214 489, 1037671, 1041543, 1044806, 1214489, W704165-S300, W704165S300, W709089-S300, W709089S300




7686

Gyári számok: 1692599, W790225-S900, W790225S900

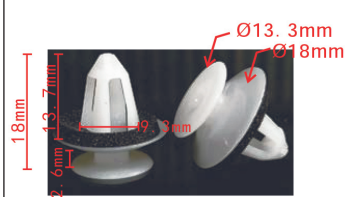


7687

 Gyári számok: 011 988 76 78, 0119887678, 1591426, 2E0 867 059, 2E0867059, 6030441, A 006 988 43 78, A 011 988 76 78, A0069884378, A0119887678, A82027, E865220-S, M283083, MU010571

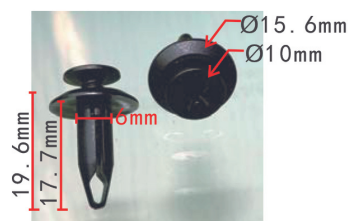


7692

 Gyári számok: 1007932, 58211Z, 96FG-16K262-AA, W703915SSYYB6, YS4Z16K262AA

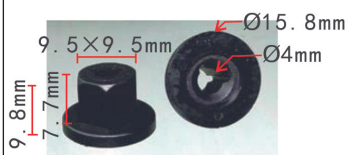


7701

 Gyári számok: 1 80 942, 1809.42, 180942, 8E0 825 265, 8E0825265, 90413589, C70376

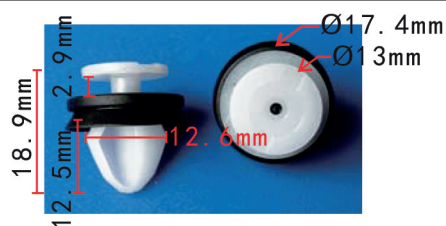

7705

 Gyári számok: 1 76 073, 13317099, 16 121 083 80, 1612108380, 176073, 4 860 409, 44 01 080, 44 22 820, 4401080, 4860409, 5 179 084, 5179084, 6991.Y8, 6991Y8, 77 03 077 468, 77 03 077 469, 7703077469, 9341.PF, 9341PF, 93453019, 95508747, 96 542 807 80, 9654280780, C40790, W713489-S300, W715789-S300

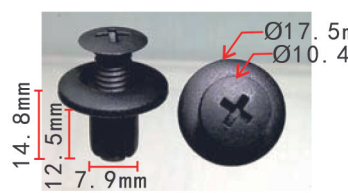


7708

Gyári számok: 0G0325007A, 86590-28000, 8659028000, B09251833, MB-455-56143, MB45556143



7710

 Gyári számok: 11589293, 18 16 589, 1816589, 4811301, 4855809, C60644, W712196-S300, W712196S300

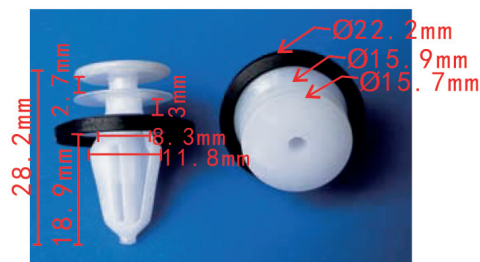


7711

Gyári számok: 4831516, C70304, W713297-S300, W713297S300




7714

 Gyári számok: W705848-S300, W705848S300

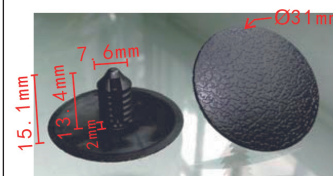

7715

 Gyári számok: 4 911 148, 4911148, C70338, W708633-S300, W708633S300

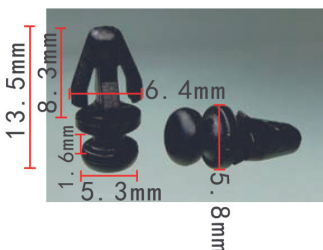

7716

Gyári számok: 1 042 065, 1042065, C60106, W702985-S300, W702985, W702985S300



7719

Gyári számok: 6 549 354, 6130543, 6549354, 90BG-17K657-AA, 90BG17K657-AA, 90BG17K657AA, C70339



 
7725

Gyári számok: 4 943 984,4943984,
6508197AA,C70340,
W706092-S300,W706092S300




7726

Gyári számok: 5 208 485,5208485,
C70183,W716510-S300,
W716510S300

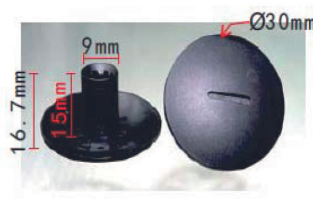


7732

 Gyári számok: 10556,6 142 789,
6142789,6995X9,77 03 081 054,
77 03 081 127,77 03 081 227,
77 03 081 237,7703081054,
E864311S

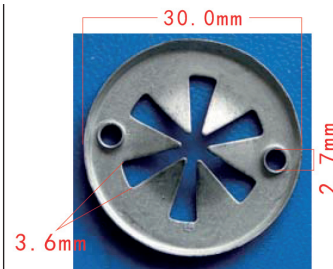


7733

 Gyári számok: 1388634,6 715 468,
6715468,70143Z,N90 335 004,
N90 335 006,N90335004,N90335006,
W700641-S301,W700641-S442,
W700641S301,W700641S442

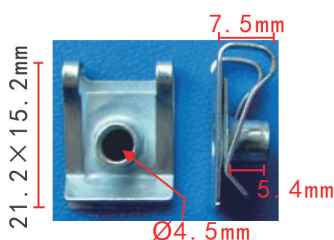

7756

 Gyári számok: 003 994 42 45,
0039944245,16100,46473571,
61 13 1 372 033,61131372033,
A 003 994 42 45,A0039944245

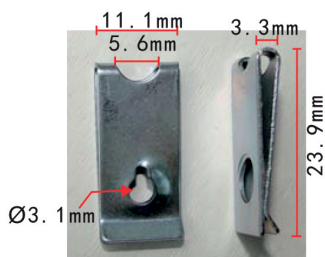

7757

 
Gyári számok: 14 50 657,
1450657,16034,211837223,
N 01 543 01,N0154301



7758




7761

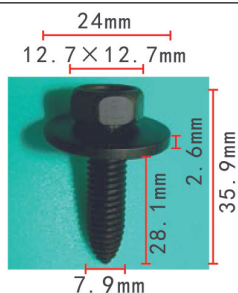

7764

 Gyári számok: C60617

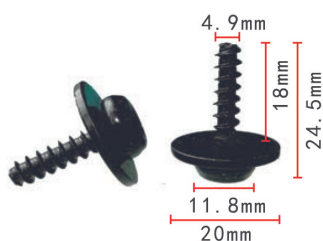

7765

Gyári számok: 11093773,1388632,
1449533,2020106,C60460,
N 103 546 02,N10354602,
W700501-S303,W700501S303,
W708591-S424,W708591S424



7768



7769

Gyári számok: 1 462 015,1462015,
C70153,W703505-S442,
W703505S442



 
7773

Gyári számok: 1069428,
W702889-S300,W702889S300,
W715835-S300,W715835S300




7775

Gyári számok: B21001,N806289-S,
N806289S

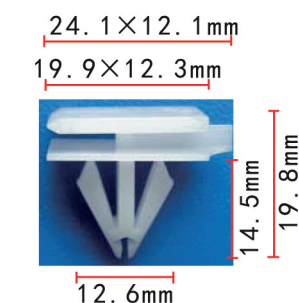


7803

 Gyári számok: 10323057

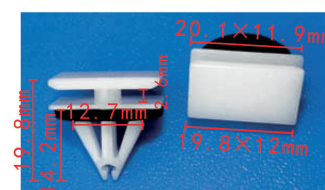


7812

 Gyári számok: 5 270 438,5270438,
W716352-S300,W716352S300

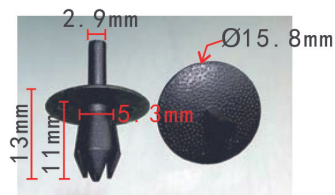


7823

 Gyári számok: 0009905592, 1009164,
23 17 703, 2317703, 3923475,
500355891, 90116376,
A 000 990 55 92, A0009905592,
A13840, N 102 195 01, N 102 195 02,
N10219501, N10219502,
W703904-S300, W703904S300

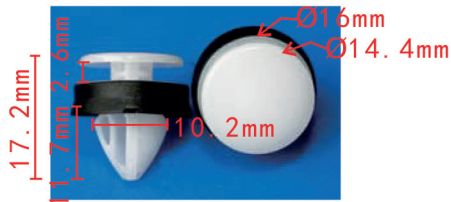


7830

 Gyári számok: 1571079, 5255437, C70342,
W716507-S300, W716507S300

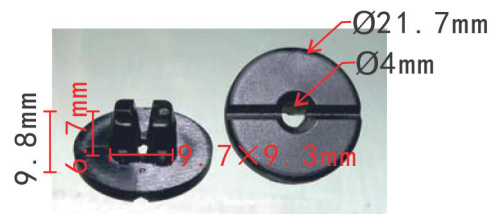


7831

 Gyári számok: 12 74 977, 1274977, 57280Z, 90506890

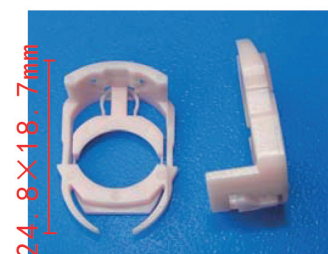

7833

 Gyári számok: 7L3Z-9S317-B,
7L3Z9S317B

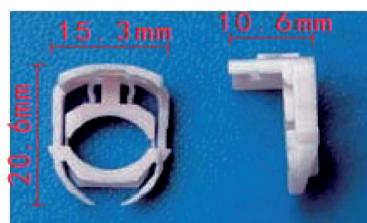


7834

Gyári számok: 7L3Z-9S317-A, 7L3Z9S317A



7866

 Gyári számok: 4852242, C70152, W713579-S300,
W713579S300

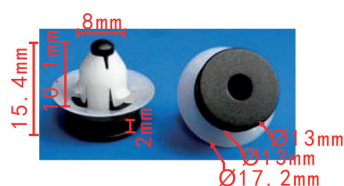


7871

Gyári számok: 007 988 99 78,
0079889978, 07 13 1 503 417,
07131503417, 1 232 493, 1232493,
30653441, 8616645, 9193585,
A0079889978, B23171, EYC106710,
EYC500090, EYC500120,
EYC500170, EYC500280,
W712417-S300, W712417S300




7878

 Gyári számok: 1473596, 7701049008, 7703077354,
8200702219, C30142, W710404-S300, W710404S300

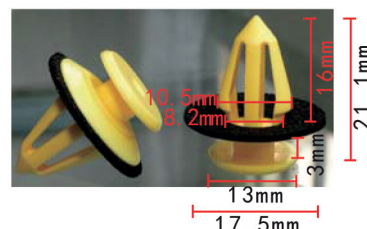

7881

 Gyári számok: 1008068, 7M0 867 299 K,
7M0867299K, C30847

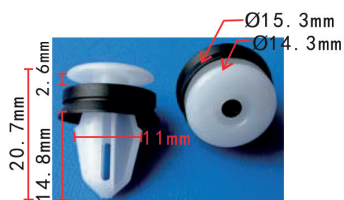


7892

Gyári számok: C70302, LR013135,
W713610



7922

 Gyári számok: 91501-S04-003,
91501S04003

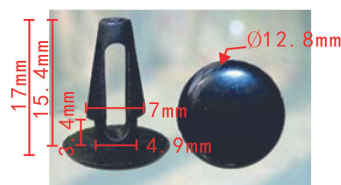


7007

Gyári számok: 01553-00172, 0155300172, 90467-07050, 9046707050, 90672-671-003, B14737, MB115492




7014

 Gyári számok: 09409-09303, 0940909303, 48 03 743, 4803743, 60003, 86157-37000, 8615737000, 91502-SP0-003, 91502SP0003, 94530624

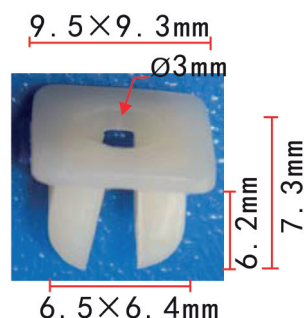


7019

 Gyári számok: 75521-611-000, 755226110000, 90189-05013, 90189-06010, 9018905013, 9018906010, 96706-B0700, 96706-P0105, 96706B0700, 96706P0105, 9991-00-412, 9991-00-601, 999100412, B14274

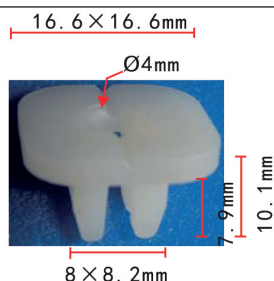

7024

 Gyári számok: 68425-H5000, 68425H5000, 90189-040118, 90189040118, 90662-671-003, 90662-671-0030, 90662671003, 906626710030, 9991-00-503, 999100503, B14313

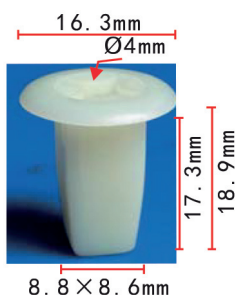

7026

Gyári számok: 01281-00023, 01281-00231, 01551-00481, 01651-00481, 0165100481, 74798-S9000, 74798S9000, 90189-06001, 90189-06042, 9018906042, 90661-SC7-003, 90661SC70030, 96706-P7900, 96706-U0100, B14695, H00150841, MS-480012, MS480012, MU480012



7034

Gyári számok: 0155305761, 09409-07305-5PK, 09409073185ES, 0K201-50-033, 20426301, 90467-06017-01, 90467-06017-B0, 90467-06017-B1, 90467-06017-C0, 90467-06017, 9046706017, 90657SA5003, 96050KA140, 9926-50-625, 992650625, B22044, MB345544



7035

Gyári számok: 63876-95596, 6387695596, 90467-08145, 9046708145, 90675-SB3-003, 90675S3003, 90675SB3003, B22045, F0156964, FB01-56-964, FB0156964, GB01-56-964, GB0156964



7047

Gyári számok: 91550-SH3-003, 91550SH3003, B22072



7050

Gyári számok: 90467-08155, 9046708155, 90505-SL0-003, 90505SL0003, 94852368, B22081, M888869, MB888869



7052

Gyári számok: 91501-S04-003, 91504-SF4-003, 91512-SM4-003, 91512-SX0-003, 91512SX0003, B19239, MR220501, MU000319



 
7053

Gyári számok: 01553-05313, 0155305313, 09409-06314-5PK, 09409-06314-T01, 09409063145PK, 0940906314T01, 59122PA010, 66824-01G00, 6682401G00, 90116-SP0-003, 90116S7S003Z, 90116S7S003ZA, 90116SP0003, 90467-07071-22, 904670707122, 920390068, B22085, MR462748



7055

Gyári számok: 01553-01203, 01553-03573, 0155301203, 0155303573, 90409-06319, 9040906319, 90467-06153, 9046706153, 90683-SA5-003, 90683SA5003, B22091

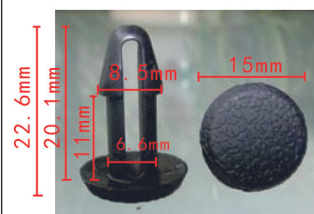

7058

Gyári számok: 90467-09065, 9046709065, 90670-692-0030, 906706920030, B22098



 
7071

Gyári számok: 76882-57A00, 7688257A00,B22121



7072

Gyári számok: 01553-0034U, 015530034U,91516-SK7-013, 91516SK7013,B22123

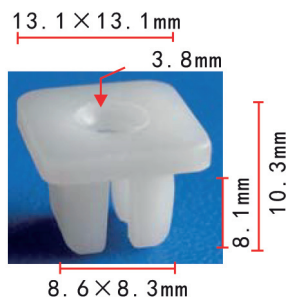


7075

Gyári számok: 75521-611-000, 755216110000,90189-05013, 90189-06010,9018906010, 96706-P0105,96706P0105, 999100601,B14274




7079

 Gyári számok: 09409-06319, 0940906319,10998-30880,1099830880, 5578552020,8 34 752,834752, 8942981190,90674-SA5-003,90684-SA5-003, 90684SA50030,90746-SG2-N00, 94298119,B14696,KK376-68865

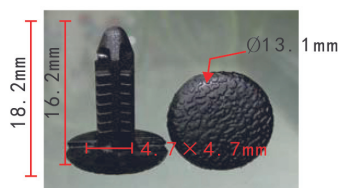

7089

 Gyári számok: 90467-05004-11, 90467-05004,90666-SA0-0030, 90666SA00030,B22153,MR221721

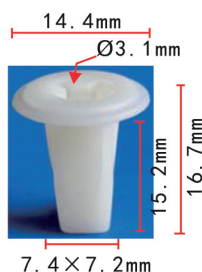

7091

Gyári számok: 90189-04013, 9018904013,90663-SB0-003, 90672-671-811,90672671811, 906726718110M1,90674-SB0-000, 90674S0000,97519-22000, 9751922000,B14268



7092

Gyári számok: 1395-68-676, 139568676,90675-SB0-003, 90675SB0003,9926-50-635, 992650635,B22158



 
7102

Gyári számok: 59130AA000, 90467-06017-B7,90467-06017, 90467-07072-22,90467-07072, 904670707222,90657-SA6-003, 90657SA60030,94198687,B14697, N304-13-356A,N30413356A



7108

Gyári számok: 89427-98070,8942798070,9046705021C0,90667-SA7-003, 90667-SA7-003ZB,90667SA70030,90667SA7003F7,90667SA7003YG, 90667SA7003YN,90667SA7003YW,90667SA7003Z,90667SA7003ZT,B16775

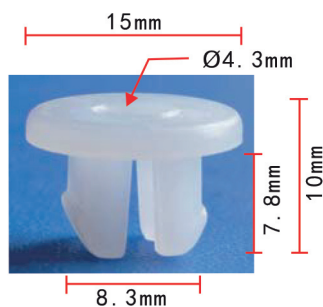

7172

Gyári számok: 380370, 62698-V7000,62698V7000, 90668-SA5-003,90668SA5003, MB690235,MS480003,MS480005



7177

Gyári számok: 91502-SZ5-003, 91502SZ5003



7195

Gyári számok: 01553-09241, 57728-AC-090,57728AC090, 91503-SZ5-003,91503SZ5003, 91503SZ5003,91509S47003



 
7197

Gyári számok: M271999, M403435,MB271999, MB403435




7206

Gyári számok: 78856-R4301, 78856R4301,90683-693-0000, 906836930000

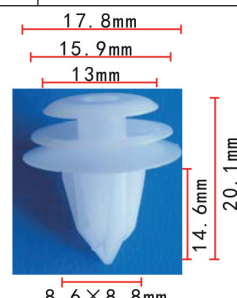


7211

 Gyári számok: 09409-10312,3568481A10,6777135010, 6822.LL,7181278F00,90467-10161,9046708179, 9046709203,9046710161,909130076,909130105, 909130115,91560S6A003,94858299,GE4T68865A, MR402275,MR550000,MR550882,MU000504,MU480150, MU481245,MU488002

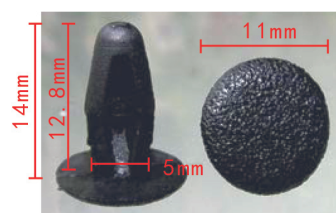


7250

 Gyári számok: 01553-00671,
01553-04083,0155304083,
66435-648-0000,664356480000,
66919-H1001,66919H1001

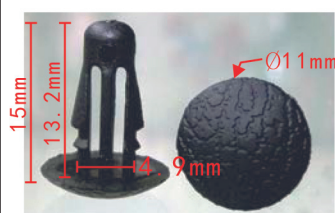

7253

 Gyári számok: 01553-00401,
0155300401,90504-S75-013,
90504S75013,909120025

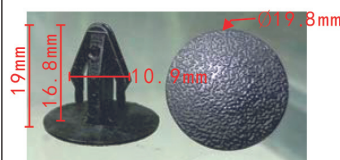

7254

Gyári számok: 01553-00051,
0155300051,8133-50-022,
90685-SA5-003,90685SA5003



7268



7276

Gyári számok: 67771-02030,
67771-22040,67771-26010,
67771-43010,6777102030,
6777122040,6777126010,
6777143010



7280

Gyári számok: 09409-10302-5PK,09409103025PK,76996-01P02,7699601P02,
85325-21000,90467-06020-3,90467-06020-5,90467-06020-A2,90467-06020-C0,
90467-07090-0,90467060203,90467060205,9046706020A2,9046706020C0,
90467070900,90666-693-000ZC,90667-SA0-0030,90667-SA0-003B3,
90667-SA0-003B4,90667SA00030,90667SA00033,91546-SM2-003ZJ,
95033FC030OE,M189333,M318810,M765662,M768471,M772940,M967678,
MB189333,MB318810,MB768471



7281

Gyári számok: 74842-659-0030,
748426590030,90467-12078,
9046712078



7288

Gyári számok: 1160854,89414-55150,8941455150,90467-06061-1,
90467060611,90665-S2-003ZF,90665-S2-003ZQ,90665-S2-003ZR,
90665-S2-003ZU,90665-S2-003ZY,90665S2003ZF,90665S2003ZQ,
90665S2003ZR,90665S2003ZU,90665S2003ZY,94145515,M772941



 
7293

Gyári számok: 09409-08335,
1039463,21030249,4803228,
6503598,770 104 92 71,
7701049271,8E0 825 267,
8E0825267,N807389-S,N807389S



7295

Gyári számok: 01553-01285,
07 13 0 702 966,07130702966,
4803742,57728AC060,
78875.08000,7887508000,
91503-SP0-003,91503SP0003,
91503SPO003,94530623

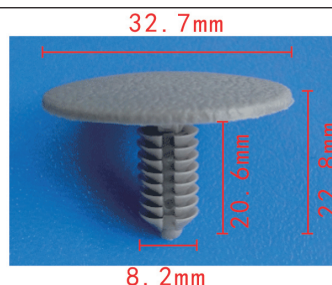

7297

Gyári számok: N805315



7313

Gyári számok: 90700-SJ4-000,
90700SJ4000



7323

Gyári számok: 01553-01353,01553-01503,01553-01753,01553-01763,01553-02133,
01553-03703,01553-04493,01553-06361,09409-08308-T01,0940908308T01,3533394,
57718PA020,90467-08180,90467-08182-C0,90467-08182-CQ,90467-08187,9046708180,
9046708182C0,9046708182CQ,9046708187,91505-SL0-003,91505-ST3-E01ZC,
91505-ST3-E01ZC,91505-ST7-003ZA,91505-ST7-003ZD,91505-ST7-003ZJ,91505SL0003,
91505ST3E01ZC,91505ST3E01ZC,91505ST7003ZA,91505ST7003ZD,91505ST7003ZJ,
M674791,M674792,M674793,MR167002,MR167003,MR167004,MR381913,MR381914,MR7204



7329

Gyári számok: 90505-SX0-003,
90505SX0003



7332

Gyári számok: 386553-S,386553S



7445

Gyári számok: 91505-S9A-003,
91505S9A003



 
7487

Gyári számok: 62660-48600-1,
62660-48600,62660486001,
90667-671-013ZA,90667671013ZA,
MC440901



7490

Gyári számok: 91503-S0K-A01,
91503S0KA01

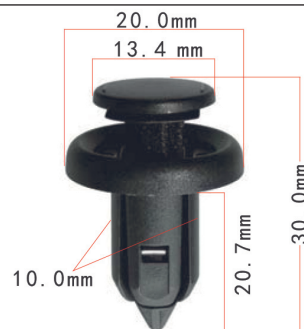

7497

Gyári számok: 91506-S9A-003,
91506S9A003

 


7566

Gyári számok: 91501-SEA-003,
91501-SNA-003,91501SEA003,
91501SNA003,C70154



7659

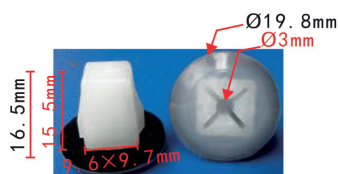

7671

Gyári számok: GJ6A-58-975,
GJ6A58975



7743

 
Gyári számok: 90159-60496,
9015960496,C60611



7744




7754

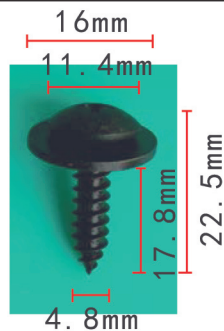

7763

 Gyári számok: 90114-SE0-000,
90114SE0000,C60472

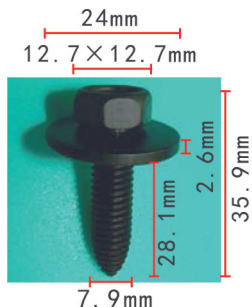

7764

Gyári számok: C60617



7775

Gyári számok: B21001,N806289-S,
N806289S



7781

Gyári számok: 91508-S50-003,
91508-SM4-003,91508S50003



7782

Gyári számok: 91508-SM4-003,
91508-SR3-000,91508SM4003,
91524-SE0-003,91524-SEO-003



7792

Gyári számok: 90189-05055,
9018905055,90664-S3-003,
90664S3003



 
7793

Gyári számok: 90670-SG0-003,
90670SG0003,91626-SH3-003,
91626SH3003



7797

Gyári számok: 09409-07333-000,
0940907333,3541113,
63848-01G00,63848-WA000,
6384801G00,91059-FC010,
91059FC010,91545-SE0-003,
91545-SE0-003W

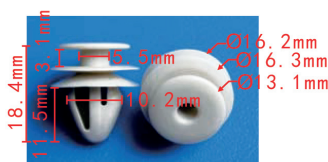

7806

Gyári számok: 09409-08301,
0940908301,7259A013,
82315-2P000,82315-38000,
823152P000,8231538000,
85849-3B000,858493B000,
909130034,91560-S9A-A01,
91560S9AA01,A175049



 
7855

Gyári számok: 91501-SEA-003,
91501-SNA-003,91501SEA003,
91501SNA003,C70154



7875

Gyári számok: 91501-SWA-003,
91501SWA003,C60511

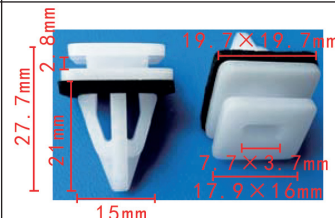


7883

Gyári számok: 91513-S7S-003,
91513S7S003



7884

 Gyári számok: 91501-TR0-003,
91501TR0003

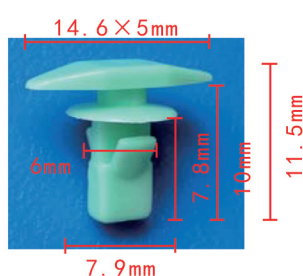

7887

Gyári számok: 91568-SR2-003,
91568SR2003,MR170639



7888

Gyári számok: 67867-12150,
6786712150,90651-S4N-003,
90651S4N003,909120023,
909120028,MR380850,MU481283



7889

Gyári számok: 90682-SEA-003,
90682SEA003



7922

Gyári számok: 91501-S04-003,
91501S04003



7002

Gyári számok: 02860454,04630747,06030441,06502381,06505403AA,06509015AA,11569768,1595864,15958694,1605396,3885775,3893585,4004569,4004919,53001698,53001699,6030441,6036007AA,85746-06000,8574606000,B11146,J4004569,J4004919,W705589-S300,W705589S300



7014

Gyári számok: 09409-09303,0940909303,48 03 743,4803743,60003,86157-37000,8615737000,91502-SP0-003,91502SP0003,94530624



7066

Gyári számok: 01553-00515,63844-01A00,6384401A00,63854-01A00,63854-01A00 NB,63878-01E10,B16858,MB406894,MB487004,MB866568,MNA0156145,NA01-56-145,NA0156145



 
7079

Gyári számok: 09409-06319,0940906319,10998-30880,1099830880,5578552020,8 34 752,834752,8942981190,90674-SA5-003,90684-SA5-003,90684SA50030,90746-SG2-N00,94298119,B14696,KK376-68865




7080

Gyári számok: 01553-01393,0155301393,86593-34000,8659334000,B22136,BF82-50-233,F8250233,MBF675003

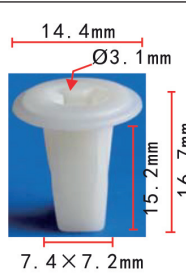


7091

 Gyári számok: 90189-04013,9018904013,90663-SB0-003,90672-671-811,90672671811,906726718110M1,90674-SB0-000,90674S0000,97519-22000,9751922000,B14268

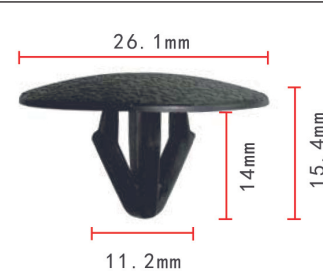


7194

 Gyári számok: 81126-37010,8112637010

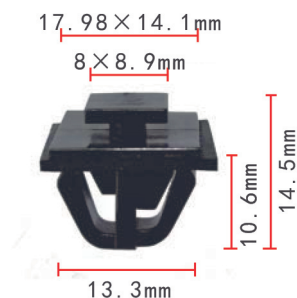


7198

 Gyári számok: 87756-38000,8775638000

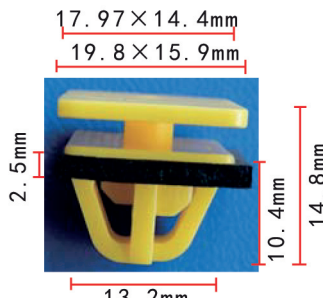


7199

 Gyári számok: 87758-3D000,877583D000

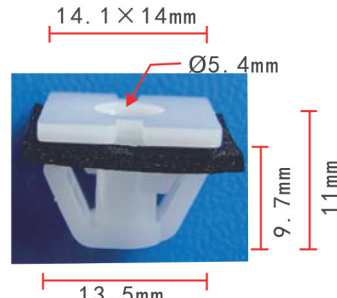

7200

 Gyári számok: 87756-3D000,877563D000

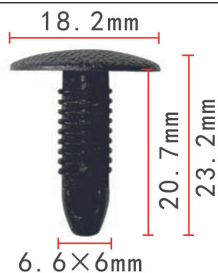


7280

Gyári számok: 09409-10302-5PK,09409103025PK,76996-01P02,7699601P02,85325-21000,90467-06020-3,90467-06020-5,90467-06020-A2,90467-06020-C0,90467-07090-0,90467060203,90467060205,9046706020A2,9046706020CO,9046707090Q,90666-693-000ZC,90667-SA0-0030,90667-SA0-003B3,90667-SA0-003B4,90667SA00030,90667SA00033,91546-SM2-003ZJ,95033FC030OE,M189333,M318810,M765662,M768471,M772940,M967678,MB189333,MB318810,MB768471




7292

 Gyári számok: 09409073085PK,90467-07041,90467-07041A0,90467-07041C0,90467-07041E8,90467-07041E9,9046707041,96057846,MB476821

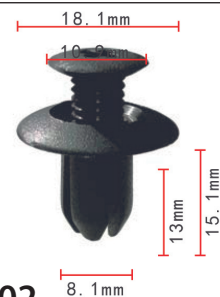


7302

 Gyári számok: 092-51-833,09251833,09409-09302,B092-51-833,B09251833,M-455-56143,M45556143,MB-455-56143,MB45556143,W705845-S300,W705845S300

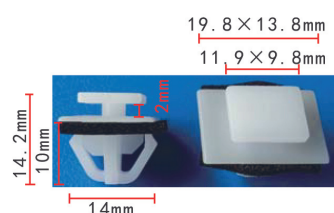


7362

 Gyári számok: 33031016,
87756-2E000,87756 2E000,
877562E000

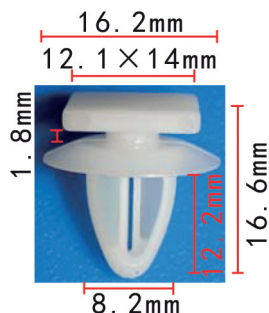


7427

 Gyári számok: 87770-28000,
8777028000,MB317677,
MB319754,MB344789,MB814435

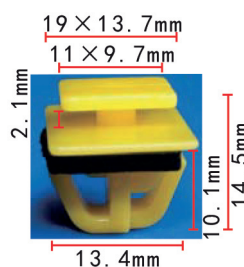

7455

 Gyári számok: 87758-35000,
8775835000

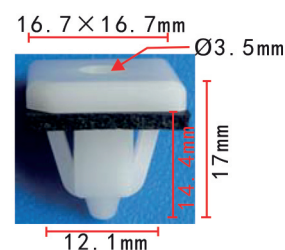


7456

Gyári számok: 87758-37000,
8775837000




7457

 Gyári számok: 86848-22000,
8684822000

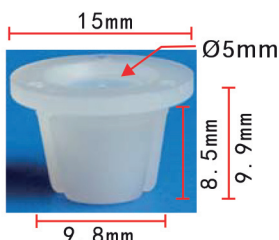


7458

 Gyári számok: 92351-37000,
9235137000

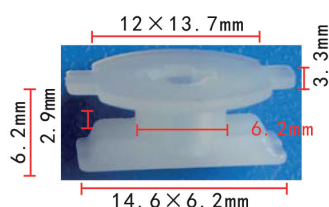


7466

 Gyári számok: 87719-3D000,
877193D000

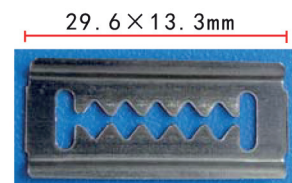


7468

 Gyári számok: 86593-24000,
8659324000

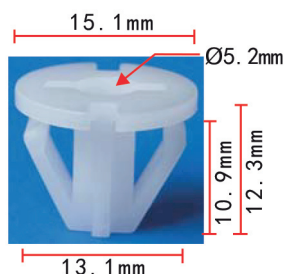


7471

 Gyári számok: 79519-05800,
K79519058001

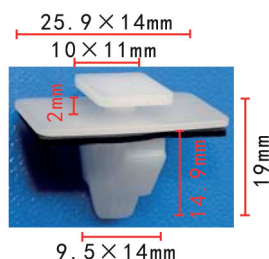


7472

 Gyári számok: 33030455,
7959108001,K7959108001

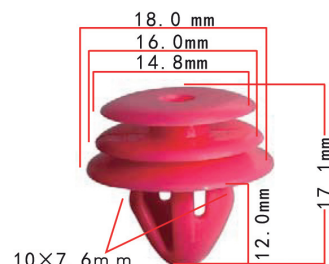


7491

 Gyári számok: 82315-27000,
8231527000

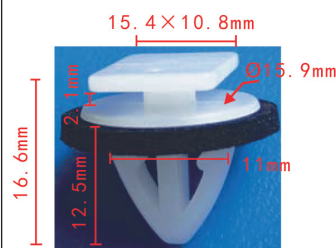


7496

 Gyári számok: 87702-H1000,
87702H1000

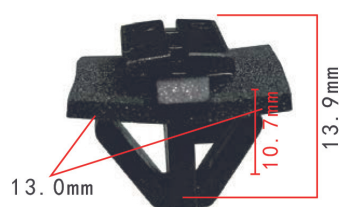


7508

 Gyári számok: 87756-26000,
87756-2G000,8775626000,
877562G000

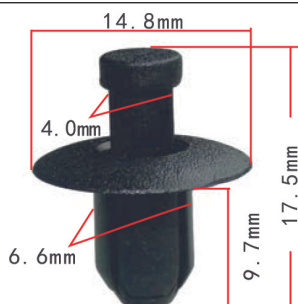


7511

 Gyári számok: 86155-2H100,
861552H100

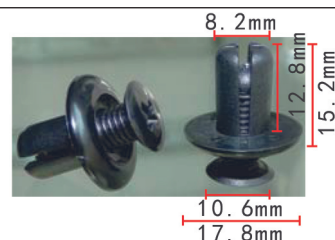


7620

 Gyári számok: 01553-0038U,
09409-09302,0G032-50037A,
0G032 50037A,0G03250037A,
60001,86590-28000,8659028000,
B092-51-833,MB-455-56143,
MB45556143,UB39-45-919,
W705845-S300

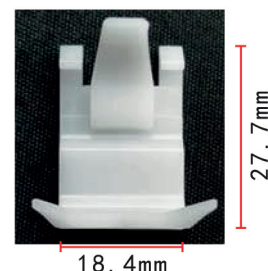


7623

 Gyári számok: 83219-22000,
8321922000,C70156

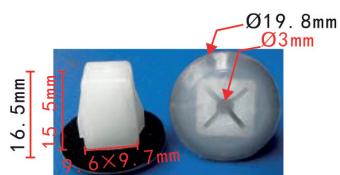

7671

 Gyári számok: GJ6A-58-975,
GJ6A58975

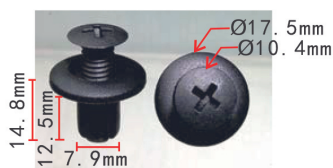


7708

Gyári számok: 0G0325007A,
86590-28000,8659028000,
B09251833,MB-455-56143,
MB45556143




 7742

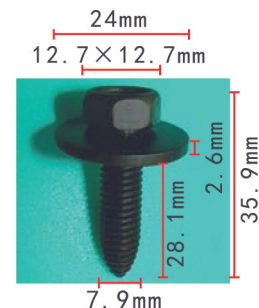


7764

 Gyári számok: C60617

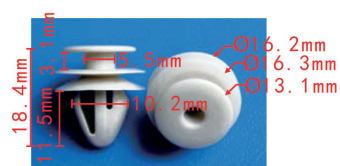


7806

 Gyári számok: 09409-08301,
0940908301,7259A013,
82315-2P000,82315-38000,
823152P000,8231538000,
85849-3B000,858493B000,
909130034,91560-S9A-A01,
91560S9AA01,A175049

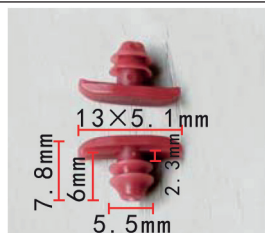


7845

 Gyári számok: 82133-37000,
8213337000

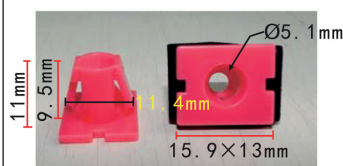

7854

 Gyári számok: 87756-2J000,
877562J000

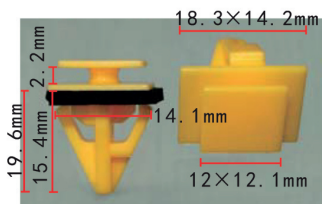

7856

Gyári számok: 87756-3N100,
877563N100



 
7857

Gyári számok: 87758-
25000,8775825000




7858

Gyári számok: 86825-
26000,8682526000

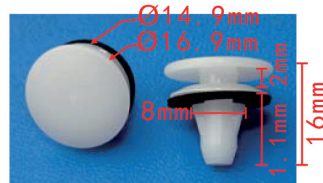


7859

 Gyári számok: 92485-
2H000,924852H000

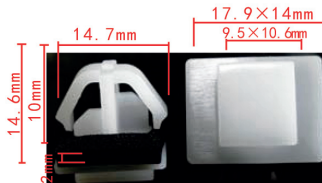

7876

 Gyári számok: 87719-
02500,8771902500

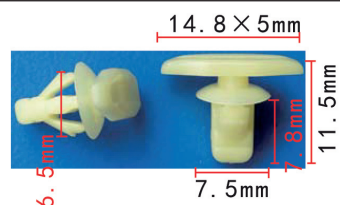


7885

Gyári számok: B25291,BC1D-58-762,
BC1D58762,MU481027



7011

 Gyári számok: 0155300603,0155306841,6295520030,67771-01010,67771-12010,6777101010,6777112010,74998WE900,8942264920,9046710134,9927-40-825,992740825,9928-40825,B14269

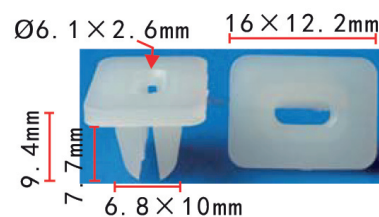

7078

Gyári számok: 8941340270,90189-05012,9018905012



7079

Gyári számok: 09409-06319,0940906319,10998-30880,1099830880,5578552020,8 34 752,834752,8942981190,90674-SA5-003,90684-SA5-003,90684SA50030,90746-SG2-N00,94298119,B14696,KK376-68865



7096

Gyári számok: 63844-D0100,63844D0100,8942211500,94221150



7097

Gyári számok: 67771-01010,6777101010,8942264920,95005064,9928-40825,B22165



 
7288

Gyári számok: 1160854,89414-55150,8941455150,90467-06061-1,90467060611,90665-S2-003ZF,90665-S2-003ZQ,90665-S2-003ZR,90665-S2-003ZU,90665-S2-003ZY,90665S2003ZF,90665S2003ZQ,90665S2003ZR,90665S2003ZU,90665S2003ZY,94145515,M772941




7699

Gyári számok: XP831159

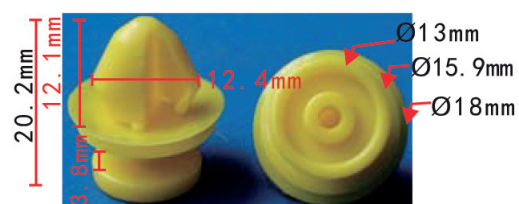

7879

 Gyári számok: 6991.S9,6991S9,C2D5807,C60337

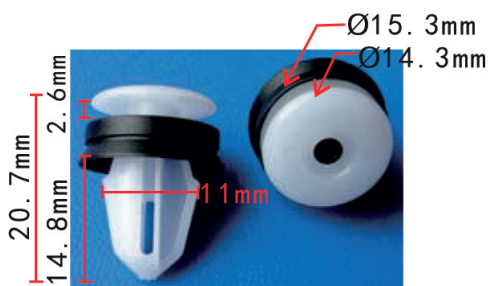


7892

Gyári számok: C70302,LR013135,W713610



7011

 Gyári számok: 0155300603,0155306841,6295520030,67771-01010,67771-12010,6777101010,6777112010,74998WE900,8942264920,9046710134,9927-40-825,992740825,9928-40825,B14269

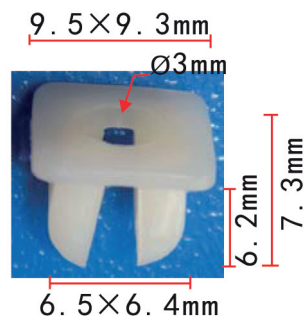


7019

Gyári számok: 75521-611-000,755226110000,90189-05013,90189-06010,9018905013,9018906010,96706-B0700,96706-P0105,96706B0700,96706P0105,9991-00-412,9991-00-601,999100412,B14274




7023

 Gyári számok: 6822QP,90189-06013,90189-06047,90189-06065,9018906013,9018906047,B21002,B455-56-145,B45556145,MR971765

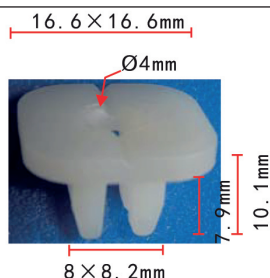

7024

 Gyári számok: 68425-H5000,68425H5000,90189-040118,90189040118,90662-671-003,90662-671-0030,90662671003,906626710030,9991-00-503,999100503,B14313

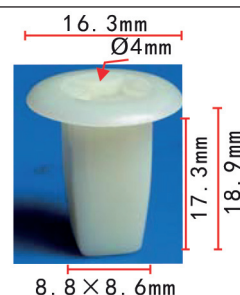

7026

Gyári számok: 01281-00023,01281-00231,01551-00481,01651-00481,0165100481,74798-S9000,74798S9000,90189-06001,90189-06042,9018906042,90661-SC7-003,90661SC70030,96706-P7900,96706-U0100,B14695,H00150841,MS-480012,MS480012,MU480012



 
7034

Gyári számok: 0155305761,09409-07305-5PK,09409073185E5,OK201-50-033,20426301,90467-06017-01,90467-06017-B0,90467-06017-B1,90467-06017-C0,90467-06017,9046706017,90657SA5003,96050KA140,9926-50-625,992650625,B22044,MB345544




7035

Gyári számok: 63876-95596,6387695596,90467-08145,9046708145,90675-SB3-003,90675S3003,90675SB3003,B22045,F0156964,FB01-56-964,FB0156964,GB01-56-964,GB0156964

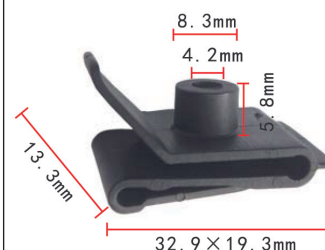


7039

 Gyári számok: 53879-14010-A,53879-14010,53879-14020,53879-17020,5387914010A,5387914020,5387922030,88970766,90467-05138,94841226,B22049,LA01-56-135,LA0156135

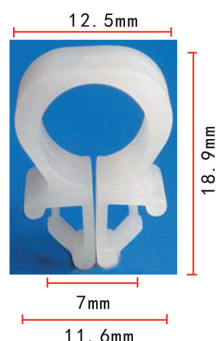

7040

 Gyári számok: 4042711,9927-70-901,99277-0901,992770901

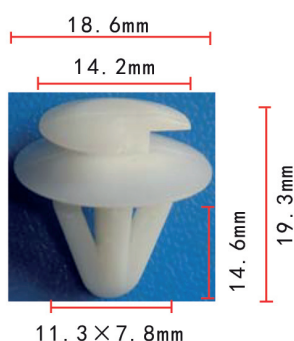


7043

Gyári számok: 52581-14020,6258114020,9927-40-822,992740822,B22061



7048

 Gyári számok: 01281-00501,0128100501,999100402

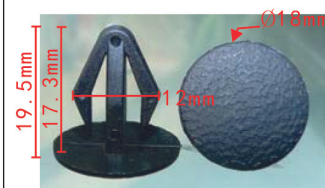

7049

Gyári számok: 01553-00051,0155300051,8133-50-022,813350022,90467-10091,9046710091,B22077



7056

Gyári számok: 0016830200,
90950-01248,9095001248,
B001-68-302,B22094



 
7057

Gyári számok: 90467-07117,
9046707117,B22097




7067

Gyári számok: 52531-35010-C0,
52531-35010,5253135010C0,
5253135010CO,5253135010O,
90467-09101,9046709101,
9046709181A1,B22110,MR772182

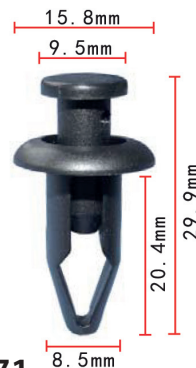


7071

 Gyári számok: 76882-57A00,
7688257A00,B22121

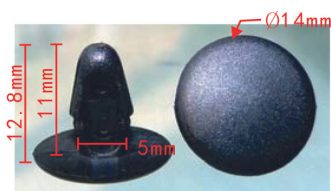

7073

 Gyári számok: 90467-06161-01,
90467-06161,904670616101,
992640426,B22124

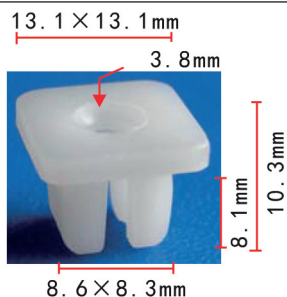


7075

Gyári számok: 75521-611-000,
755216110000,90189-05013,
90189-06010,9018906010,
96706-P0105,96706P0105,
999100601,B14274



7080

 Gyári számok: 01553-01393,
0155301393,86593-34000,
8659334000,B22136,BF82-50-233,
F8250233,MBF675003

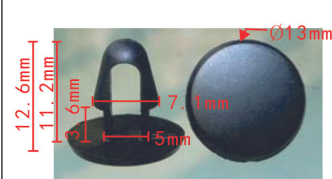

7086

Gyári számok: 90467-08004,
90467-08011,9046708004,
9046708011,94842841,
94849113,B22146



7092

Gyári számok: 1395-68-676,
139568676,90675-SB0-003,
90675SB0003,9926-50-635,
992650635,B22158



 
7097

Gyári számok: 67771-01010,
6777101010,8942264920,
95005064,9928-40825,B22165



7102

Gyári számok: 59130AA000,90467-06017-B7,90467-06017,90467-07072-22,
90467-07072,904670707222,90657-SA6-003,90657SA60030,94198687,
B14697,N304-13-356A,N30413356A

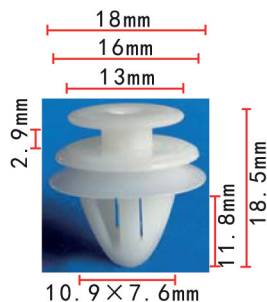

7146

Gyári számok: 09409-08310,
0940908310,67771-89104,
6777189104,D20150797



 
7150

Gyári számok: U3945919,
UB39-45-919



7154

Gyári számok: GD7A-50-EA1,
GD7A50EA1

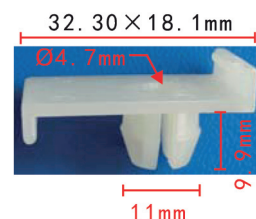

7157

 
Gyári számok: S084-58-502,
S08458502

7174



7186

Gyári számok: E110-50-E13,
E11050E13,LC62-50-E11,
LC6250E11,W705849-S300,
W705849S300

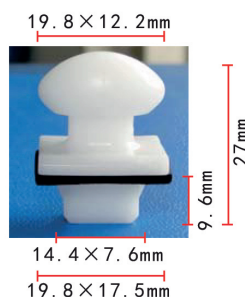


7187

Gyári számok: 01553-00515,
63844-01A00,63854-01A00,
63854-01A00 NB,NA01-56-145,
NA0156145,W706713-S300,
W706713S300




7201

 Gyári számok: 90179-05060,
9017905060

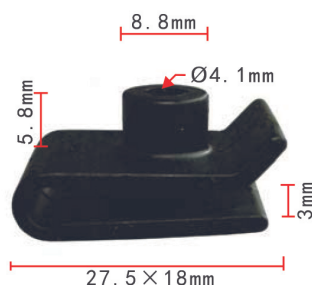


7211

 Gyári számok: 09409-10312,3568481A10,6777135010,6822.LL,
7181278F00,90467-10161,9046708179,9046709203,9046710161,909130076,
909130105,909130115,91560S6A003,94858299,GE4T68865A,MR402275,
MR550000,MR550882,MU000504,MU480150,MU481245,MU488002

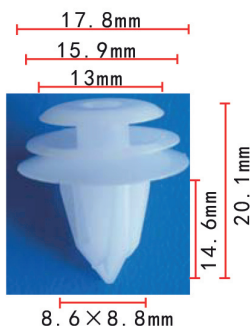


7212

 Gyári számok: 81910TA100,
BF6750033,E7GZ-17A904-B,
E7GZ17A904B,MR114963

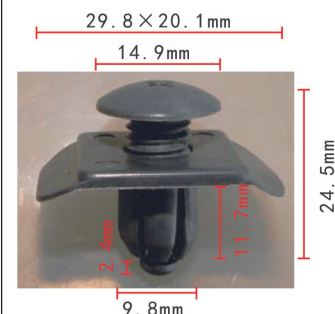


7251

 Gyári számok: 01553-00291,
0155300291,01554-00291,
992640543A,MS470073

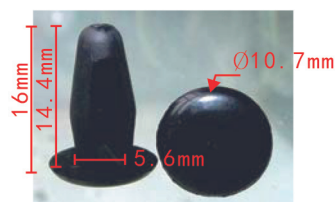


7254

 Gyári számok: 01553-00051,
0155300051,8133-50-022,
90685-SA5-003,90685SA5003

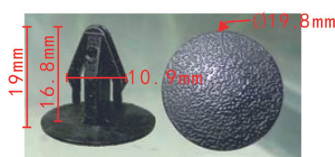


7255

 Gyári számok: 9924-90-512,
992490512

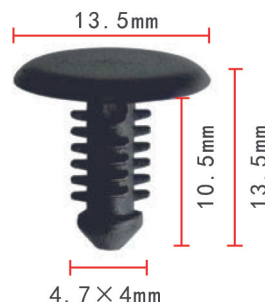

7258

 Gyári számok: F22Z-16774-A,
F22Z16774A,G030-68-885-38,
G0306888538,GA2A-56694,
GA2A56694

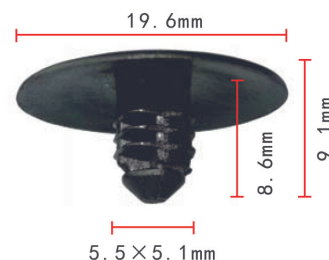


7276

Gyári számok: 67771-02030,
67771-22040,67771-26010,
67771-43010,6777102030,
6777122040,6777126010,
6777143010



7286

 Gyári számok: F32Z-17C756-S,
F32Z17C756S,GJ21-50-049,
GJ2150049

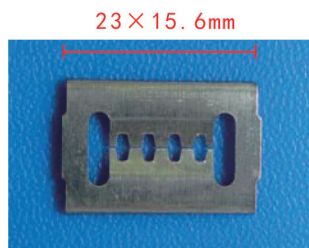

7287

 
Gyári számok: E92Z-17C756C,
E92Z17C756C,GJ21-50-034,
GJ2150034



7293


Gyári számok: 09409-08335,
1039463,21030249,4803228,
6503598,770 104 92 71,
7701049271,8E0 825 267,
8E0825267,N807389-S,N807389S



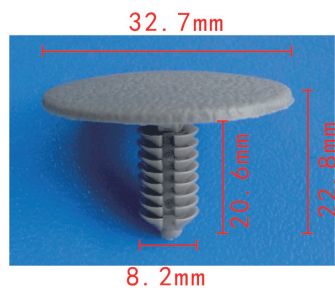

7297

 Gyári számok: N805315

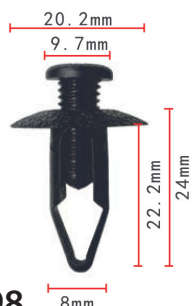


7298

Gyári számok: 01553-00515,
63844-01A00,63854-01A00,
63854-01A00 NB,6385401A00,
H38068885,H3816888500,
H3816888505,M547806,MB487004,
MB547806,MB866568,NA01-56-145




7299

 Gyári számok: 101-68-252-00,
1016825200,B101-68-252

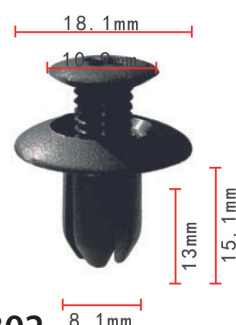

7302

 Gyári számok: 092-51-833,09251833,
09409-09302,B092-51-833,B09251833,
M-455-56143,M45556143,
MB-455-56143,MB45556143,
W705845-S300,W705845S300

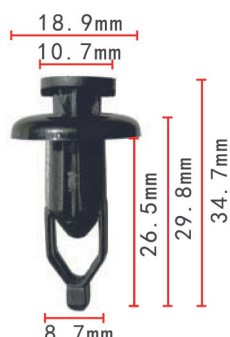

7305

Gyári számok: 90467-09143,
9046709143



7309

Gyári számok: 68929-01R00,
6892901R00,9926-40-531,
992640531



 
7311

Gyári számok: 455-56-741,
45556741,B455-56-741,
F1CZ-16774-A,F1CZ-16774A,
F1CZ16774A



7325

Gyári számok: 4327144,BC1D-56-145,
BC1D56145,XM34-16K194-EA

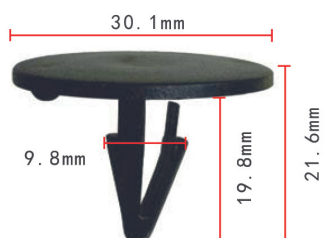


7332

Gyári számok: 386553-S,386553S



7364

 Gyári számok: GA5R-56-392,
GA5R56392

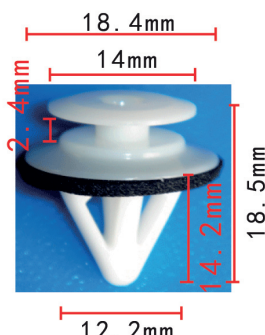

7484

Gyári számok: G18K-51-SJ3,
G18K51SJ3,NE51-51-SJ3A,
NE5151SJ3A



 
7506

Gyári számok: BP4K-58-762,
BP4K58762



7567

Gyári számok: 3M8Z-1502316-A,
3M8Z1502316A,GJ6E-50-715A,
GJ6E50715A

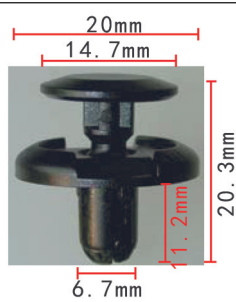


7571

Gyári számok: 09409-07332-000,
09409-07332,71 741 883,71 768 111,
71741883,73155SS0004,
9046707164,9S9AK07332,B23143,
MR220501




7609

 Gyári számok: H260-50-6K8,
H260506K8

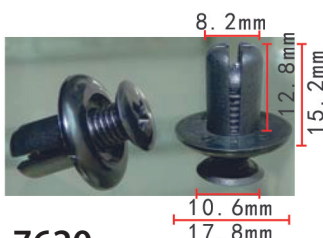


7620

 Gyári számok: 01553-0038U,
09409-09302,0G032-50037A,
0G032 50037A,0G03250037A,
60001,86590-28000,
8659028000,B092-51-833,
MB-455-6143,MB45556143,
UB39-45-919,W705845-S300

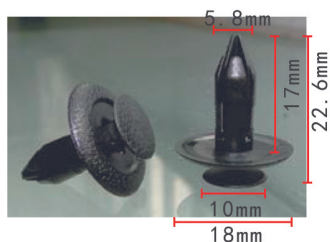


7621

 Gyári számok: 3391007,
5R3Z-54310D12-AAA,
5R3Z54310D12AAA,
80103,B467-68-AC3,B46768AC325,
B46768AC328,GJ21-68885-B69

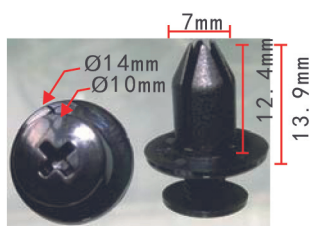


7659

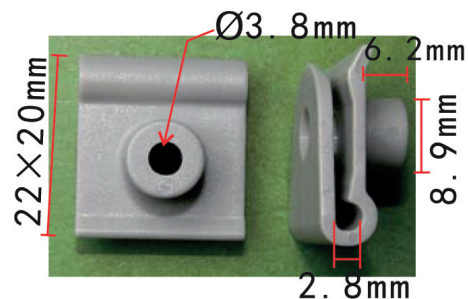 


7669

 Gyári számok: B455-56-135,B45556135

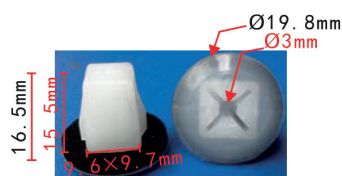


7671

 Gyári számok: GJ6A-58-975,
GJ6A58975

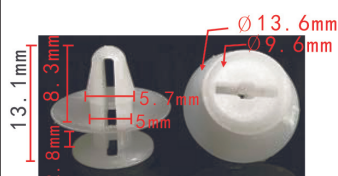


7679

 Gyári számok: 1 214 485,1214485,
B23168,W709011-S300,
W709011S300

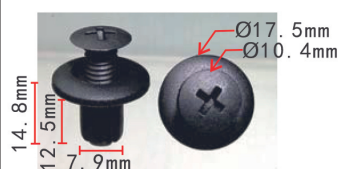

7708

 Gyári számok: 0G0325007A,
86590-28000,8659028000,
B09251833,MB-455-56143,
MB45556143

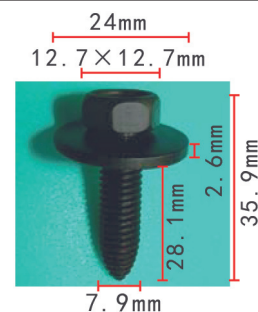

7764

Gyári számok: C60617



7775

Gyári számok: B21001,N806289-S,
N806289S



 
7847

Gyári számok: KD45-51-W24,
KD4551W24




7851

Gyári számok: EA01-50-037,
EA0150037

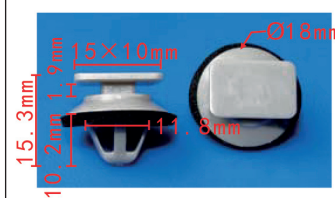


7852

 Gyári számok: KD53-51-SJ3A,
KD5351SJ3A

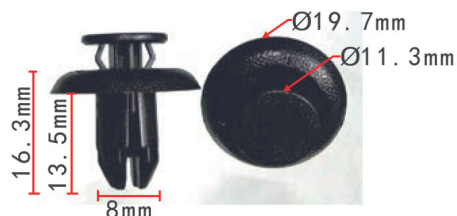

7861

 Gyári számok: 90118WB048,
B45A-56-146A

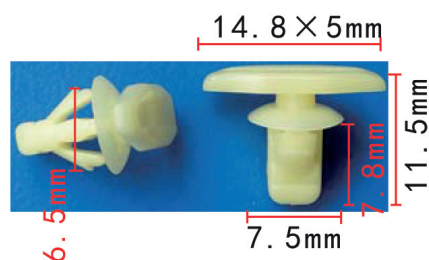

7885

Gyári számok: B25291,BC1D-58-762,
BC1D58762,MU481027



7017

Gyári számok: 000 988 15 81,
0009881581,0131853585,
A000 988 15 81,A0009881581,
A0131853585,A11751



 
7133

Gyári számok:
001 997 42 90,
0019974290,
A 001 997 42 90,
A0019974290




7136

Gyári számok: 000 990 03 92,
000 990 22 92,0009900392,
167935,77 03 072 173,7903072116,
8968165,947098,A 000 990 03 92,
A 000 990 22 92

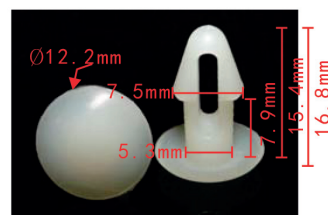


7179

 Gyári számok: 000 987 10 15,
0009871015,A 000 987 10 15,
A0009871015

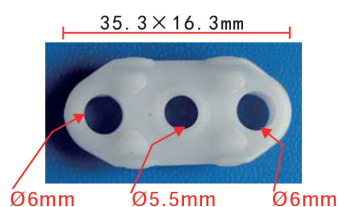

7347

 Gyári számok: 1 40 640,140640,
90055545,B25694

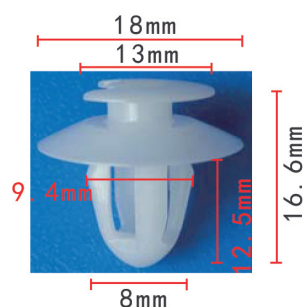

7368

Gyári számok: 003 988 41 78,
0039884178,0059888278,59888278,
A 003 988 41 78,A 005 988 82 78,
A0039884178,A0059888278



7378

Gyári számok: 504056662,
82421028



7380

Gyári számok: 504056662,
82421028



7385

Gyári számok: 124 990 04 92,
1249900492,A 124 990 04 92,
A1249900492,C60425

 


7386

Gyári számok: 000 990 37 92,
0009903792,1104881,90356928,
A 000 990 37 92,A0009903792,
N 100 323 01,N10032301




7387

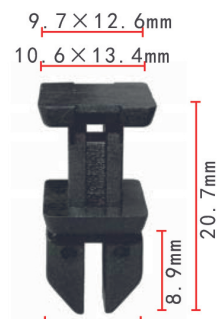


7388

 Gyári számok: 124-990-07-92,
124 990 07 92,1249900792,
A 124 990 07 92,A1249900792

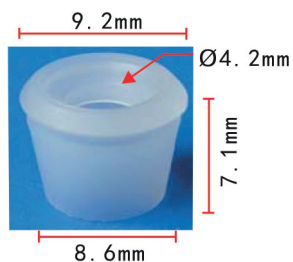


7393

 Gyári számok: 000 987 10 81,
0009871081,A0009871081

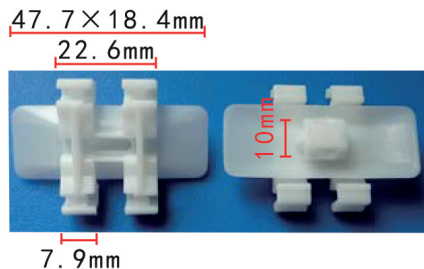

7394

 Gyári számok: 007 988 71 78,0079887178,50108,501080079887178,
A 007 988 71 78,A0079887178

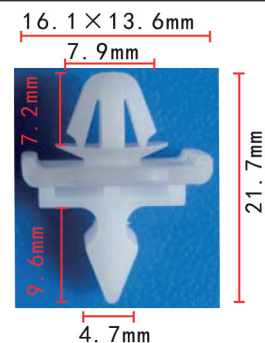

7395

Gyári számok: 001 988 49 81,
0019884981,55207Z,
A 001 988 49 81,A0019884981



 
7396

Gyári számok: 001 988 51 81,
0019885181,A0019885181




7410

Gyári számok: 0019887681,
A 001 988 76 81,A0019887681

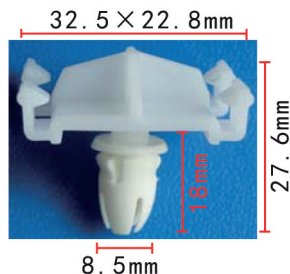


7412

 Gyári számok: 001 988 80 81,
0019888081,A 001 988 80 81,
A0019888081

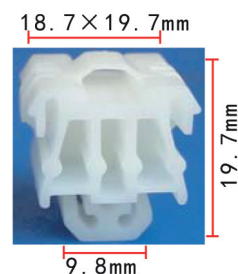


7413

 Gyári számok: 124 988 04 78,
1249880478,A1249880478

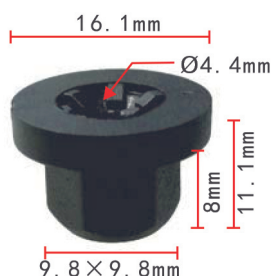


7422

 Gyári számok: 003 990 02 51,
0039900251,16 13 1 176 747,
16131176747

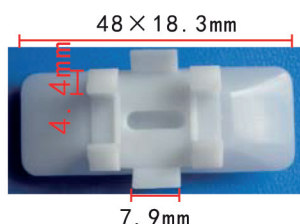


7424

 Gyári számok: 006 988 72 78,
0069887278,A0069887278

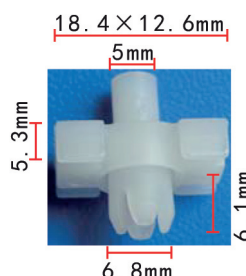


7426

 Gyári számok: 201 988 03 78,
A019880378,A2019880378

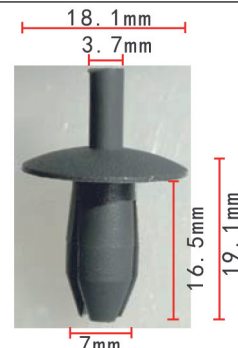


7430

 Gyári számok: 001 994 41 45,
0019944145,171885767,
A 001 994 41 45

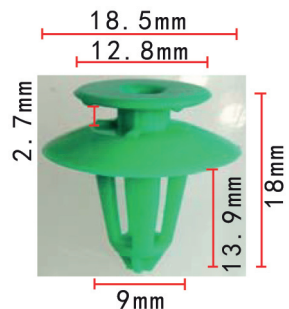


7431

 Gyári számok: 011 988 76 78,
0119887678,1591426,2E1 827 649,
2E1827649,A 011 988 76 78,
A0119887678

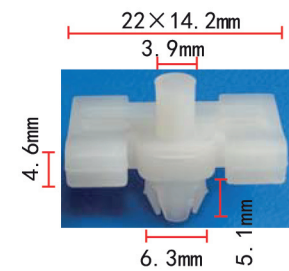


7435

 Gyári számok: 0069883078,
A 006 988 30 78,A0069883078

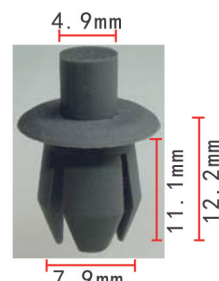

7437

 Gyári számok: 1239900292,
7 200 671,N 0385501,N0385501

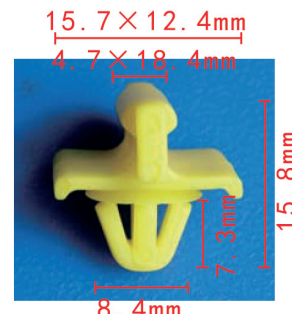

7438

Gyári számok: 001 988 60 81,
0019886081,A 001 988 60 81,
A0019886081



 
7439

Gyári számok: 001 988 29 81,
0019882981,6N0 809 966 A,
6N0809966A,A 001 988 29 81,
A0019882981



7442

Gyári számok: 811 807 577 C,
811807577C,A 001 988 46 81,
A0019884681

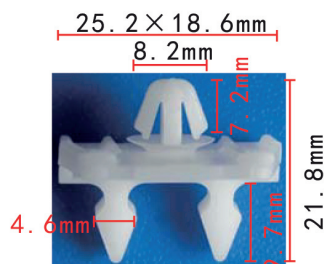

7443

Gyári számok: 0019884681,
A 001 988 46 81,A0019884681



 
7446

Gyári számok: 000 990 84 92,
0009908492,A0009908492




7450

Gyári számok: 000 990 78 92,
001 988 03 25, 0019880325,
68009867AA, A0019880325

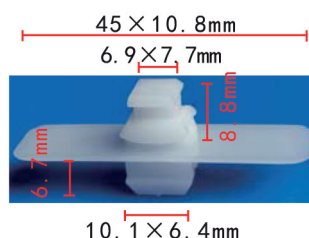


7460

 Gyári számok: 006 988 89 78,
0069888978, A0069888978

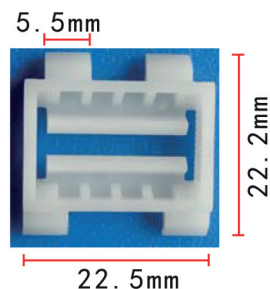

7462

 Gyári számok: 001 988 50 81,
0019885081, A 001 988 50 81,
A0019885081

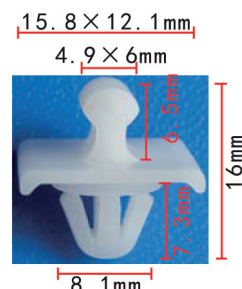


7463

Gyári számok: 001 988 44 81,
0019884481, A 001 988 44 81,
A0019884481




7517

 Gyári számok: 000 988 16 25,
0009881625, 1367868, 63 17 1 367 868,
639 998 01 85, A 000 988 16 25,
A 639 998 01 85

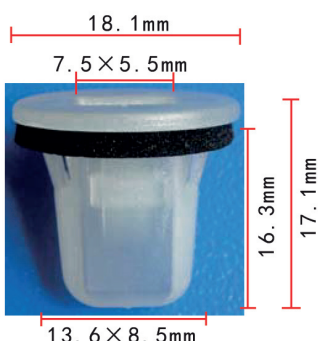


7520

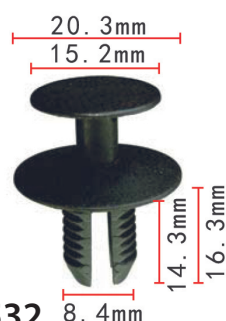 

7532

 Gyári számok: 201 990 02 92,
30820141, 4D0 807 300 B,
4D0807300B, 51 47 1 911 992,
51471911992, A 201 990 02 92,
A 201 990 02 92 90 51, M820141

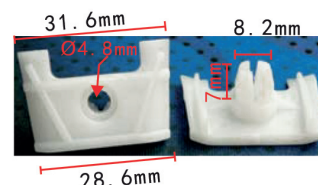


7542




7549

 Gyári számok: 10430, 631 984 25 61,
6319842561, A 631 984 25 61,
A6319842561

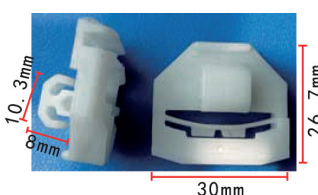

7552

 Gyári számok: 006 988 35 78,
0069883578, A0069883578,
A15687

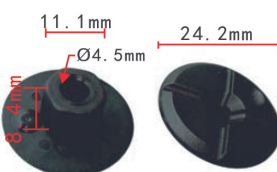

7565

Gyári számok: 201 990 00 50,
2019900050, 441955973B,
51 71 1 958 025, 51711958025,
712731, A2019900050, C10031



7584

Gyári számok: 000 990 34 92,
0009903492, 140 994 00 48,
1L0 853 934, 51 16 1 881 149,
51161881149, 51722681, 6972.10,
77 03 072 116, 7903072170,
A 000 990 34 92, A 140 994 00 48,
A0009903492, N 10259301



7585



7586



7588



7589



7590

 


7591




7626

Gyári számok: 30648141,6991.S6,
6991S6,6991Z1,77 01 056 846,
8337FC,8E9 867 299,C10091

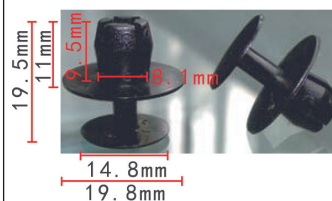


7644

 Gyári számok: 123 990 02 92,
51 48 1 938 725,51481938725,
7813.24,781324,A 123 990 02 92,
A1239900292,C30014

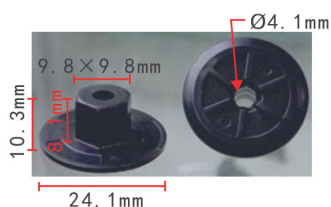


7653

 Gyári számok: 441955973B,
51 71 1 958 025,51711958025,
7127.31,712731,A 201 990 00 50,
A2019900050,C10031

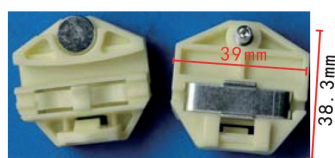


7664

 Gyári számok: C60378

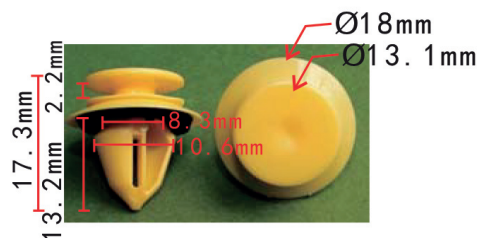

7668

 Gyári számok: 000 991 63 98,0009916398,A 000 991 63 98,
A0009916398,C70308

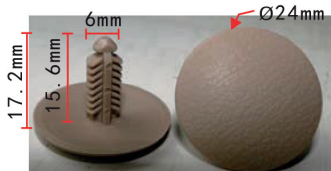


7670




7678

 Gyári számok: 230 990 01 92,
2309900192,6104900 AA,6104900A,
6104900AA,A2309900192

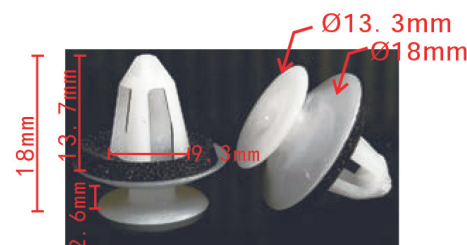


7687

 Gyári számok: 011 988 76 78,0119887678,1591426,2E0 867 059,
2E0867059,6030441,A 006 988 43 78,A 011 988 76 78,A0069884378,
A0119887678,A82027,E865220-S,M283083,MU010571

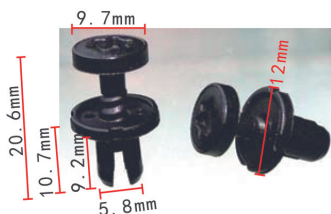


7689

 Gyári számok: 6555.LE,
6555LE,7703072236,7L6 868 307,
7L6868307,8Z0 857 784,
8Z0857784,A 000 991 66 40,
A0009916640,A60953

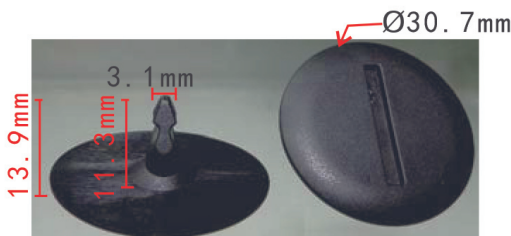


7691

 Gyári számok: 000 991 74 98,0009917498,A 000 991 74 98,
A0009917498,C70159

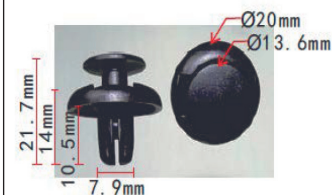


7707

 Gyári számok: 000 991 49 40,
0009914940,A 000 991 49 40,
A0009914940

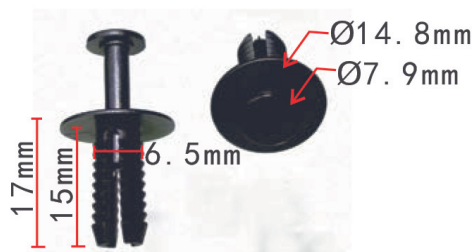


7712

 Gyári számok: 000 990 54 92,0009905492,14 00 804,1400804,51 11 1 964 186, 51111908077,51111964186,90414659,A0009905492,C10009,N90359101

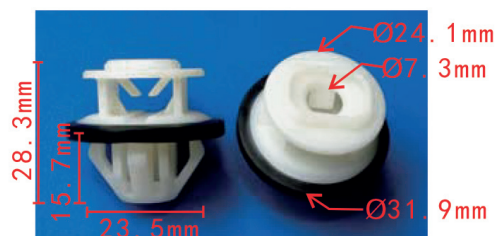


7724

 Gyári számok: 000 991 73 98,0009917398,A0009917398,C70353

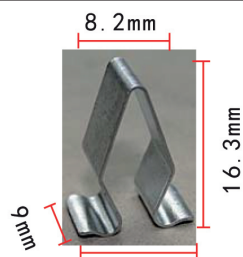

7736

 Gyári számok: 000 984 07 60, 0009840760,3B9 867 289, 3B9867289,4A0 867 276 A, 4A0 867 276 B,4A0867276A, 4A0867276B,8L4 867 276, 8L4867276,A0009840760,C60526

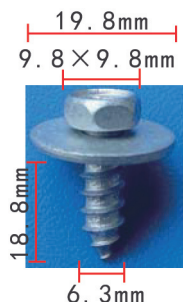


7740

Gyári számok: 90159-60383, 9015960383,C60610,N90542603




 7742

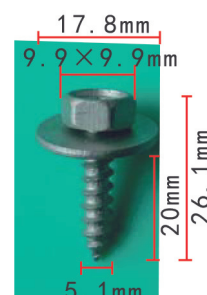


7743

 Gyári számok: 90159-60496, 9015960496,C60611

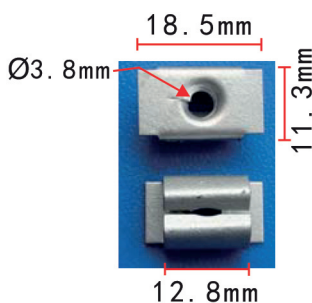


7747

 Gyári számok: 001 994 98 45, 8 50 856,850856,90270271, A 001 994 98 45,A0019949845, C60613

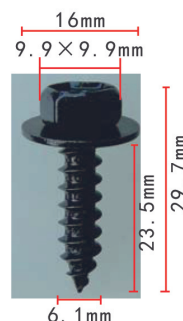


7748

 Gyári számok: 90159-60488, 9015960488,C60614

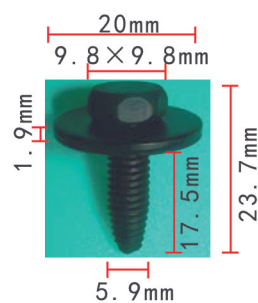


7750

 Gyári számok: 7013.AK,7013.GA, 7013AK,7013GA,C60615

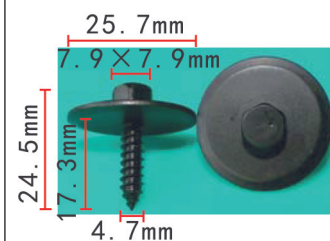

7752

 
Gyári számok: 201 990 05 36, 2019900536,A 201 990 05 36, A2019900536,C60465

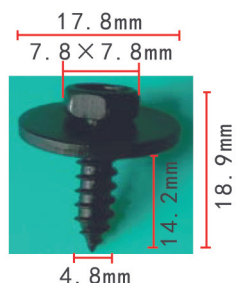

7753



 7755

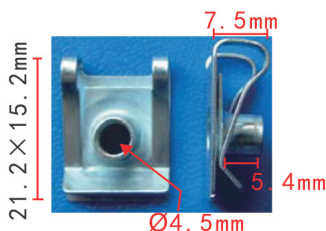


7756

Gyári számok: 003 994 42 45, 0039944245,16100,46473571, 61 13 1 372 033,61131372033, A 003 994 42 45,A0039944245




 7758

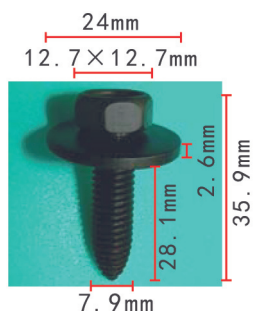


7764

 Gyári számok: C60617

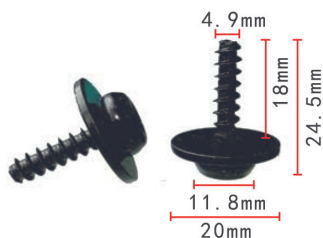


7765

 Gyári számok: 11093773,1388632, 1449533,2020106,C60460, N 103 546 02,N10354602, W700501-S303,W700501S303, W708591-S424,W708591S424

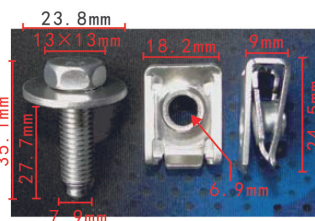


7767

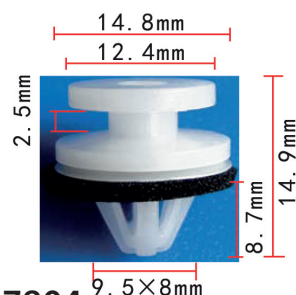 


7804

 Gyári számok: 07130702516, 44 14 720,44 30 858,4414720, 4430858,5001855049,7701050734, 7703077368,82Z61-02005, 82Z6102005,93161475,93176656, DYC101420

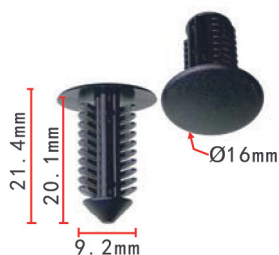


7813

 Gyári számok: 6389840061, 6389841661,7703077153, 7703077356,A 638 984 00 61, A 638 984 16 61,C10024, SS070069A

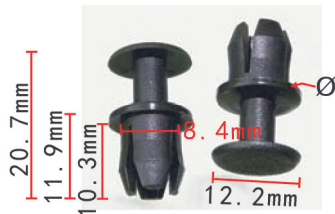

7814

 Gyári számok: 1239900092, A 123 990 00 92,A1239900092

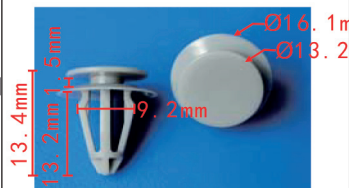


7816

Gyári számok: 000 990 57 92, 0009905792,A0009905792



7817

 Gyári számok: 001 988 76 81, 0019887681,009 988 03 78, 0099880378,A 001 988 76 81, A 009 988 03 78,A0019887681, A0099880378,A81246

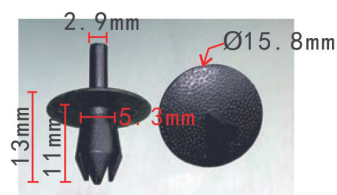

7823

Gyári számok: 0009905592, 1009164,23 17 703,2317703, 3923475,500355891, 90116376,A 000 990 55 92, A0009905592,A13840, N 102 195 01,N 102 195 02, N10219501,N10219502, W703904-S300,W703904S300



7824

Gyári számok: 2E1 857 784,2E1857784,6J0 853 379,6J0853379,A 000 991 39 40,A0009913940,C60762



 
7827

Gyári számok: 0019901392, A 001 990 13 92,A0019901392, A82009,N 107 009 01,N10700901




7853

Gyári számok: 20530,638 984 02 61, 6389840261,7703072144, A 638 984 02 61,A6389840261

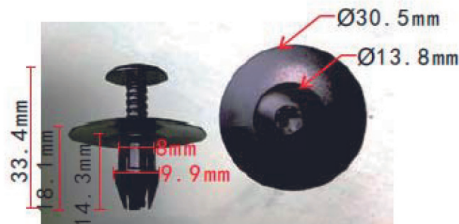


7867

 Gyári számok: 0019900192,A 001 990 01 92,A0019900192,C60442

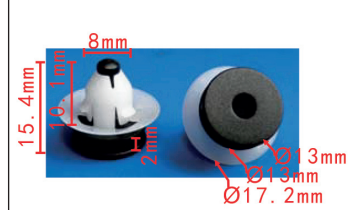


7871

 Gyári számok: 007 988 99 78, 0079889978,07 13 1 503 417, 07131503417,1 232 493,1232493, 30653441,8616645,9193585, A0079889978,B23171,EYC106710, EYC500090,EYC500120, EYC500170,EYC500280, W712417-S300,W712417S300

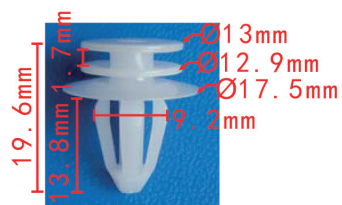

7873

 Gyári számok: 007 988 99 78,
6Y0867260,A0079889978,C60639

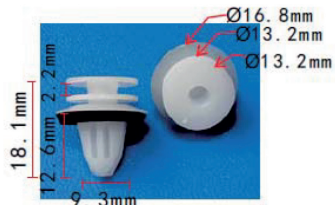


7895

Gyári számok: 000 991 01 98,
4M0 827 947,4M0827947,
A0009910198,C60716




7923

 Gyári számok: 2D1 867 059,
2D1867059,A 008 988 09 78,
A0089880978

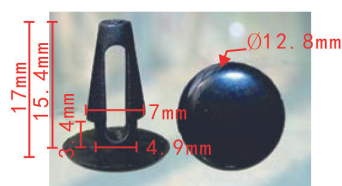

7007

 Gyári számok: 01553-00172,
0155300172,90467-07050,
9046707050,90672-671-003,
B14737,MB115492

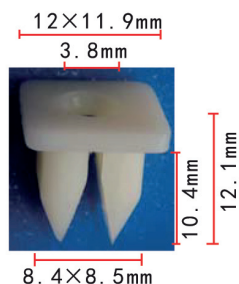


7020

Gyári számok: 90189-05013,
90189-05037,9018905013,
9018905037,B13932,MS480002




7023

 Gyári számok: 6822QP,
90189-06013,90189-06047,
90189-06065,9018906013,
9018906047,B21002,B455-56-145,
B45556145,MR971765

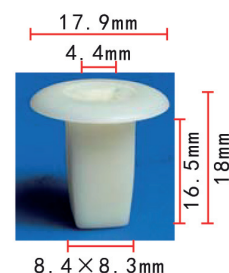

7025

 Gyári számok: 01281-00023,
01281-00231,0128100023,
0165100481,90189-06001,
9018906001,96706-P7900,
96706-U0100,B14275,M088341,
M098145,MB098145,MS480013

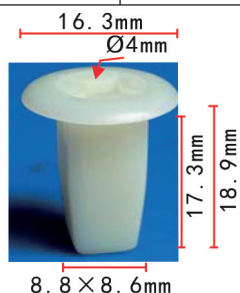

7026

Gyári számok: 01281-00023,01281-00231,01551-00481,01651-00481,
0165100481,74798-S9000,74798S9000,90189-06001,90189-06042,
9018906042,90661-SC7-003,90661SC70030,96706-P7900,96706-U0100,
B14695,H00150841,MS-480012,MS480012,MU480012



7044

Gyári számok: 67771-30070,
67771-32080,6777130070,
6777132080,94078FC010,
B22067,MB608410



7050

Gyári számok: 90467-08155,
9046708155,90505-SL0-003,
90505SL0003,94852368,B22081,
M888869,MB888869



7052

Gyári számok: 91501-S04-003,
91504-SF4-003,91512-SM4-003,
91512-SX0-003,91512SX0003,
B19239,MR220501,MU000319



7054

Gyári számok: 01553-09321,
0155309321,B22088,
MR 328954,MR328954



7066

Gyári számok: 01553-00515,
63844-01A00,6384401A00,
63854-01A00,63854-01A00 NB,
63878-01E10,B16858,MB406894,
MB487004,MB866568,MNA0156145,
NA01-56-145,NA0156145



7067

Gyári számok: 52531-35010-C0,
52531-35010,5253135010C0,
5253135010C0,52531350100,
90467-09101,9046709101,
9046709181A1,B22110,MR772182



 
7071

Gyári számok: 76882-57A00,
7688257A00,B22121



7077

Gyári számok: 4876498,B22132,
MB105489

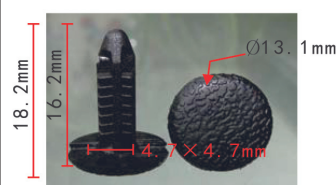

7089

Gyári számok: 90467-05004-11,
90467-05004,90666-SA0-0030,
90666SA00030,B22153,MR221721



 
7106

Gyári számok: 66860-01W01,
6686001W01,94051993,B22181,
M344737,M406893,MB344737,
MB406893



7109

Gyári számok: 01553-00755,0155300755,09409-07321-5PK,09409-07321-T01,09409073215PK,80999-05N07,8099905N07,8099946N20,90467-07043-11,90467-07043-C0,90467-07043,9046707043,B21003,M683156,M683157,M683158,M683159,M683160,MR108759,MR108760,MR417323

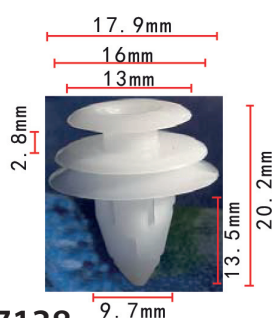

7138

Gyári számok: 67771-06010,67771-32090,67771-33040,6777106010,6777132090,6777133040,90467-10168,9046710168,MR250049



7145

Gyári számok: 90189-04008,9018904008,90467-12096,9046712096,M083120,MB083120



 
7147

Gyári számok: 30871878,MB020923,MU481187



7152

Gyári számok: 01553-03201,0155303201,MB487004

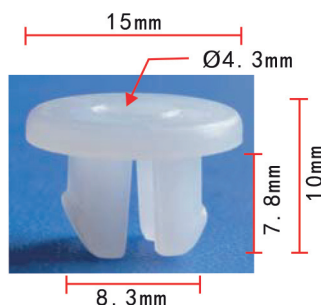

7172

Gyári számok: 380370,62698-V7000,62698V7000,90668-SA5-003,90668SA5003,MB690235,MS480003,MS480005



 
7185

Gyári számok: 01553-04183,0155304183,63878-01E10,6387801E10,MB547806




7197

Gyári számok: M271999,M403435,MB271999,MB403435

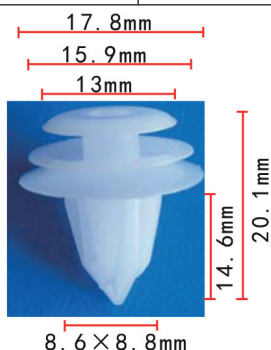


7211

 Gyári számok: 09409-10312,3568481A10,6777135010,6822.LL,7181278F00,90467-10161,9046708179,9046709203,9046710161,909130076,909130105,909130115,9156056A003,94858299,GE4T68865A,MR402275,MR550000,MR550882,MU000504,MU480150,MU481245,MU488002

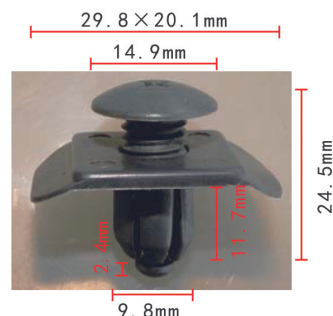

7212

 Gyári számok: 81910TA100,BF6750033,E7GZ-17A904-B,E7GZ17A904B,MR114963

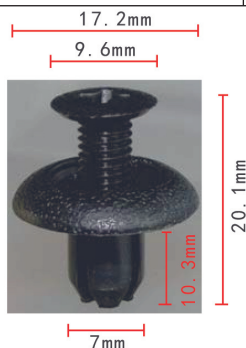

7214

Gyári számok: 90467-07030-01,904670703001,M253964,MB253964



7251

Gyári számok: 01553-00291,0155300291,01554-00291,992640543A,MS470073



7276

Gyári számok: 67771-02030,67771-22040,67771-26010,67771-43010,6777102030,6777122040,6777126010,6777143010



7280

Gyári számok: 09409-10302-5PK, 09409103025PK, 76996-01P02, 7699601P02, 85325-21000, 90467-06020-3, 90467-06020-5, 90467-06020-A2, 90467-06020-C0, 90467-07090-0, 90467060203, 90467060205, 9046706020A2, 9046706020C0, 90467070900, 90666-693-000ZC, 90667-SA0-0030, 90667-SA0-003B3, 90667-SA0-003B4, 90667SA00030, 90667SA00033, 91546-SM2-003ZJ, 95033FC030OE, M189333, M318810, M765662, M768471, M772940, M967678, MB189333, MB318810, MB768471



7288

Gyári számok: 1160854, 89414-55150, 8941455150, 90467-06061-1, 90467060611, 90665-S2-003ZF, 90665-S2-003ZQ, 90665-S2-003ZR, 90665-S2-003ZU, 90665-S2-003ZY, 90665S2003ZF, 90665S2003ZQ, 90665S2003ZR, 90665S2003ZU, 90665S2003ZY, 94145515, M772941



 
7292

Gyári számok: 09409073085PK, 90467-07041, 90467-07041A0, 90467-07041C0, 90467-07041E8, 90467-07041E9, 9046707041, 96057846, MB476821




7293

Gyári számok: 09409-08335, 1039463, 21030249, 4803228, 6503598, 770 104 92 71, 7701049271, 8E0 825 267, 8E0825267, N807389-S, N807389S

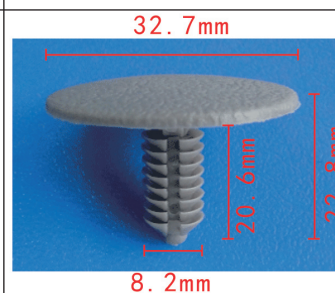

7297

 Gyári számok: N805315

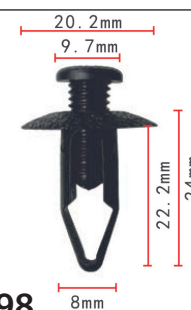

7298

Gyári számok: 01553-00515, 63844-01A00, 63854-01A00, 63854-01A00 NB, 6385401A00, H38068885, H3816888500, H3816888505, M547806, MB487004, MB547806, MB866568, NA01-56-145

7323

Gyári számok: 01553-01353, 01553-01503, 01553-01753, 01553-01763, 01553-02133, 01553-03703, 01553-04493, 01553-06361, 09409-08308-T01, 0940908308T01, 3533394, 57718PA020, 90467-08180, 90467-08182-C0, 90467-08182-CO, 90467-08187, 9046708180, 9046708182C0, 9046708182CO, 9046708187, 91505-SL0-003, 91505-ST3-E01ZC, 91505-ST3-E01ZC, 91505-ST7-003ZA, 91505-ST7-003ZD, 91505-ST7-003ZJ, 91505SL0003, 91505ST3E01ZC, 91505ST3EO1ZC, 91505ST7003ZA, 91505ST7003ZD, 91505ST7003ZJ, M674791, M674792, M674793, MR167002, MR167003, MR167004, MR381913, MR381914, MR7204, M



 
7332

Gyári számok: 386553-S, 386553S



7338

Gyári számok: 09409-08327-000, MR200300

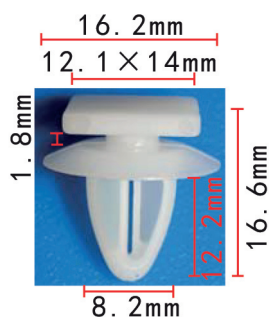

7427

Gyári számok: 87770-28000, 8777028000, MB317677, MB319754, MB344789, MB814435



 
7487

Gyári számok: 62660-48600-1, 62660-48600, 62660486001, 90667-671-013ZA, 90667671013ZA, MC440901




7504

Gyári számok: 30871878, MB020923, MU481187

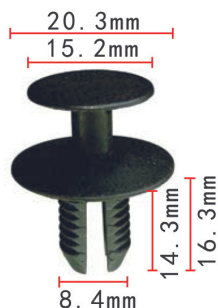

7532

 Gyári számok: 201 990 02 92, 30820141, 4D0 807 300 B, 4D0807300B, 51 47 1 911 992, 51471911992, A 201 990 02 92, A 201 990 02 92 90 51, M820141

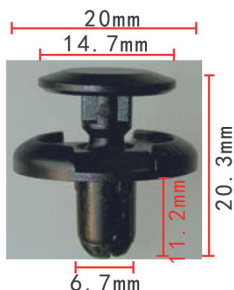


7571

Gyári számok: 09409-07332-000, 09409-07332, 71 741 883, 71 768 111, 71741883, 731555S0004, 9046707164, 9S9AK07332, B23143, MR220501




7641

 Gyári számok: 51 49 8 123 835, 51498123835, 6117693, N 905 417 01, N90541701

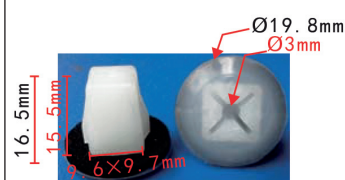


7671

 Gyári számok: GJ6A-58-975, GJ6A58975

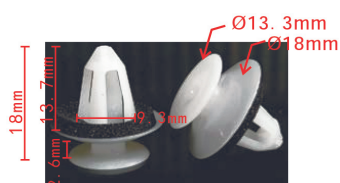

7687

 Gyári számok: 011 988 76 78, 0119887678, 1591426, 2E0 867 059, 2E0867059, 6030441, A 006 988 43 78, A 011 988 76 78, A0069884378, A0119887678, A82027, E865220-S, M283083, MU010571

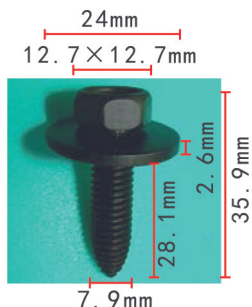

7764

Gyári számok: C60617



7775

Gyári számok: B21001, N806289-S, N806289S



 
7783

Gyári számok: 6822.NK, 6822NK, 90467-07166, 90467-07201, 9046707166, 9046707201, B22090, MU000262




7798

Gyári számok: MB567499, MB696120, MR154347

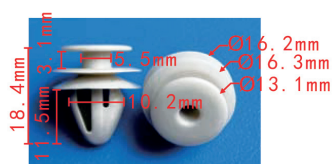


7806

 Gyári számok: 09409-08301, 0940908301, 7259A013, 82315-2P000, 82315-38000, 823152P000, 8231538000, 85849-3B000, 858493B000, 909130034, 91560-S9A-A01, 91560S9AA01, A175049

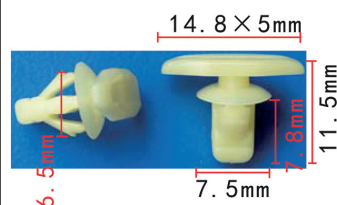

7885

 Gyári számok: B25291, BC1D-58-762, BC1D58762, MU481027

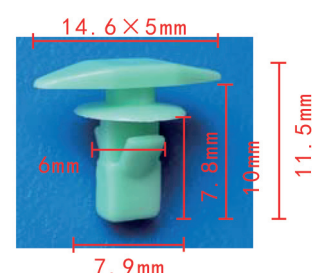

7887

Gyári számok: 91568-SR2-003, 91568SR2003, MR170639



7888

Gyári számok: 67867-12150, 6786712150, 90651-S4N-003, 90651S4N003, 909120023, 909120028, MR380850, MU481283



7904

Gyári számok: MU000977



 
7916

Gyári számok: 909140068, C70358




7922

Gyári számok: 91501-S04-003, 91501S04003

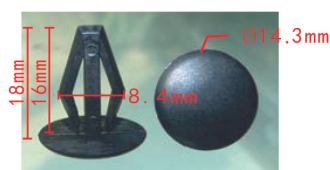


7004

 Gyári számok: 01553-02253, 0155302253, 76906-T3000, 76906T3000, 90467-090-6901, 90467-09069, 9046709069, B22006

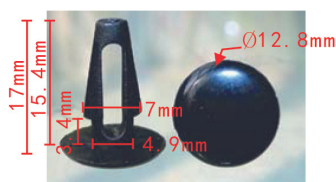


7007

 Gyári számok: 01553-00172, 0155300172, 90467-07050, 9046707050, 90672-671-003, B14737, MB115492

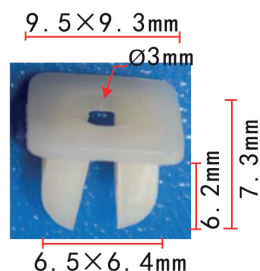


7019

 Gyári számok: 75521-611-000, 755226110000, 90189-05013, 90189-06010, 9018905013, 9018906010, 96706-B0700, 96706-P0105, 96706B0700, 96706P0105, 9991-00-412, 9991-00-601, 999100412, B14274

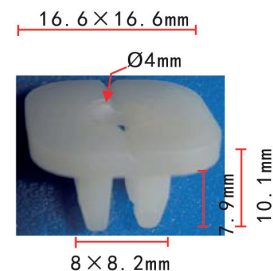


7024

 Gyári számok: 68425-H5000, 68425H5000, 90189-040118, 90189040118, 90662-671-003, 90662-671-0030, 90662671003, 906626710030, 9991-00-503, 999100503, B14313

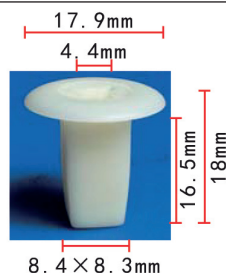

7025

 Gyári számok: 01281-00023, 01281-00231, 0128100023, 0165100481, 90189-06001, 9018906001, 96706-P7900, 96706-U0100, B14275, M088341, M098145, MB098145, MS480013

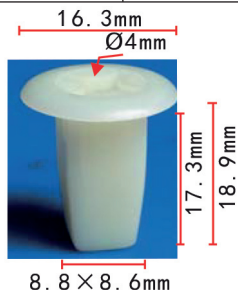

7026

Gyári számok: 01281-00023, 01281-00231, 01551-00481, 01651-00481, 0165100481, 74798-S9000, 74798S9000, 90189-06001, 90189-06042, 9018906042, 90661-SC7-003, 90661SC70030, 96706-P7900, 96706-U0100, B14695, H00150841, MS-



7034

Gyári számok: 0155305761, 09409-07305-5PK, 09409073185E5, 0K201-50-033, 20426301, 90467-06017-01, 90467-06017-B0, 90467-06017-B1, 90467-06017-C0, 90467-06017, 9046706017, 90657SA5003, 96050KA140, 9926-50-625, 992650625, B22044, MB345544



7035

Gyári számok: 63876-95596, 6387695596, 90467-08145, 9046708145, 90675-SB3-003, 90675SB3003, B22045, F0156964, FB01-56-964, FB0156964, GB01-56-964, GB0156964



7045

Gyári számok: 01553-03101, 0155303101, B22070



 
7047

Gyári számok: 91550-SH3-003, 91550SH3003, B22072



7048

Gyári számok: 01281-00501, 0128100501, 999100402

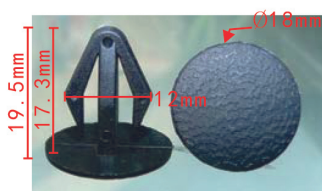

7049

Gyári számok: 01553-00051, 0155300051, 8133-50-022, 813350022, 90467-10091, 9046710091, B22077



7053

Gyári számok: 01553-05313, 0155305313, 09409-06314-5PK, 09409-06314-T01, 09409063145PK, 0940906314T01, 59122PA010, 66824-01G00, 6682401G00, 90116-SP0-003, 90116S75003Z, 90116S75003ZA, 90116SP0003, 90467-07071-22, 904670707122, 920390068, B22085, MR462748



7054

Gyári számok: 01553-09321, 0155309321, B22088, MR 328954, MR328954



7055

Gyári számok: 01553-01203, 01553-03573, 0155301203, 0155303573, 90409-06319, 9040906319, 90467-06153, 9046706153, 90683-SA5-003, 90683SA5003, B22091



 
7065

Gyári számok: 62325-R8000, 62325R8000, 62380-U7400, 62380U7400, B22108



7066

Gyári számok: 01553-00515, 63844-01A00, 6384401A00, 63854-01A00, 63854-01A00 NB, 63878-01E10, B16858, MB406894, MB487004, MB866568, MNA0156145, NA01-56-145, NA0156145

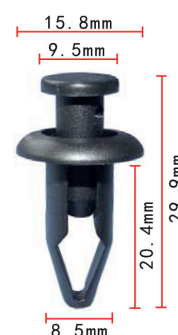


7071

Gyári számok: 76882-57A00, 7688257A00, B22121



7072

 Gyári számok: 01553-0034U, 015530034U, 91516-SK7-013, 91516SK7013, B22123

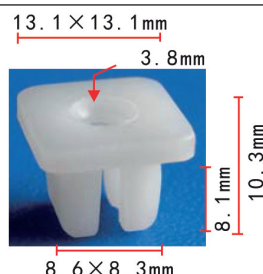

7075

Gyári számok: 75521-611-000, 755216110000, 90189-05013, 90189-06010, 9018906010, 96706-P0105, 96706P0105, 999100601, B14274



7079

Gyári számok: 09409-06319, 0940906319, 10998-30880, 1099830880, 5578552020834752, 8347528942981190, 90674-SA5-003, 90684-SA5-003, 90684SA50030, 90746-SG2-N00, 94298119, B14696, KK376-68865



7080

Gyári számok: 01553-01393, 0155301393, 86593-34000, 8659334000, B22136, BF82-50-233, F8250233, MBF675003



7096

Gyári számok: 63844-D0100, 63844D0100, 8942211500, 94221150



7103

Gyári számok: 383142-S, 383142S, 90467-06054, 9046706054



7106

Gyári számok: 66860-01W01, 6686001W01, 94051993, B22181, M344737, M406893, MB344737, MB406893



7108

Gyári számok: 89427-98070, 8942798070, 9046705021C0, 90667-SA7-003, 90667-SA7-003ZB, 90667SA70030, 90667SA7003F7, 90667SA7003YG, 90667SA7003YN, 90667SA7003YW, 90667SA7003Z, 90667SA7003ZT, B16775



7109

Gyári számok: 01553-00755, 0155300755, 09409-07321-5PK, 09409-07321-T01, 09409073215PK, 80999-05N07, 8099905N07, 8099946N20, 90467-07043-11, 90467-07043-C0, 90467-07043, 9046707043, B21003, M683156, M683157, M683158, M683159, M683160, MR108759, MR108760, MR417323



7113

Gyári számok: 26399-40U00, 2639940U00, 90467-11126, 90467-12042, 9046711126, 9046712042, N807994-S, N807994S



7140

Gyári számok: 51216-24005, 5121624005, 5121624005, 76882-WA000, 76882WA000, 88970345, 90467-10167, 9046710167, 909130077



7148

Gyári számok: 01553-01733,
0155301733,94858864



 
7152

Gyári számok: 01553-03201,
0155303201,MB487004



7155

Gyári számok: 65846-40F00,
6584640F00

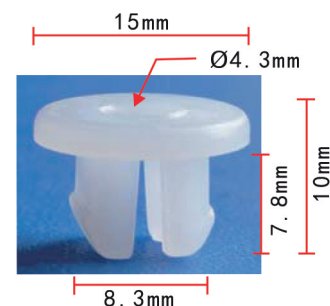

7172

Gyári számok: 380370,
62698-V7000,62698V7000,
90668-SA5-003,90668SA5003,
MB690235,MS480003,MS480005



7185

Gyári számok: 01553-04183,
0155304183,63878-01E10,
6387801E10,MB547806



7187

Gyári számok: 01553-00515,
63844-01A00,63854-01A00,
63854-01A00 NB,NA01-56-145,
NA0156145,W706713-S300,
W706713S300



 
7193

Gyári számok: 01553-09611,
01553-10501,0155309611,
0155310501,6822.N3,6822N3,
90467-08185,9046708185



7195

Gyári számok: 01553-09241,
57728-AC-090,57728AC090,
91503-SZ5-003,91503S75003,
91503SZ5003,91509S47003

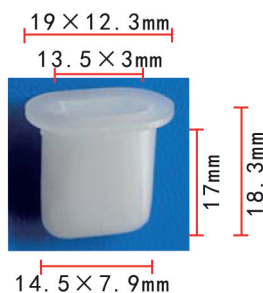


7206

Gyári számok: 78856-R4301,
78856R4301,90683-693-0000,
906836930000




7209

 Gyári számok: 96706-H2500,
96706H2500

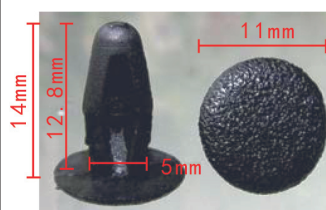

7250

 Gyári számok: 01553-00671,
01553-04083,0155304083,
66435-648-0000,664356480000,
66919-H1001,66919H1001

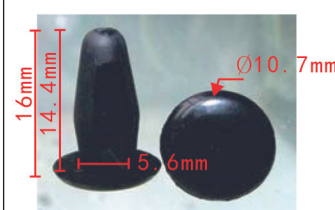

7251

Gyári számok: 01553-00291,
0155300291,01554-00291,
992640543A,MS470073



 
7252

Gyári számok: 76876W5000



7253

Gyári számok: 01553-00401,0155300401,
90504-S75-013,90504S75013,909120025

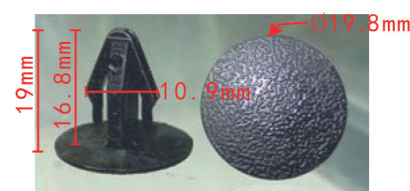


7254

Gyári számok: 01553-00051,0155300051,
8133-50-022,90685-SA5-003,90685SA5003




7280

 Gyári számok: 09409-10302-5PK,09409103025PK,76996-01P02,7699601P02,85325-21000,90467-06020-3,90467-06020-5,90467-06020-A2,90467-06020-C0,90467-07090-0,90467060203,90467060205,9046706020A2,9046706020CO,90467070900,90666-693-000ZC,90667-SA0-0030,90667-SA0-003B3,90667-SA0-003B4,90667SA00030,90667SA00033,91546-SM2-003ZJ,95033FC030OE,M189333,M318810,M765662,M768471,M772940,M967678,MB189333,MB318810,MB768471

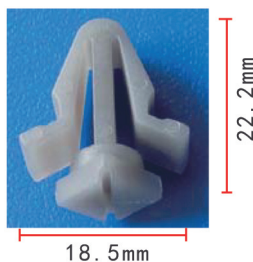

7283

 Gyári számok: 01553-01631,01553-03831,01553-05751,0155301631,0155303831,0155305751,62318-01W00,62318-V7000,6231801W00,62318V7000

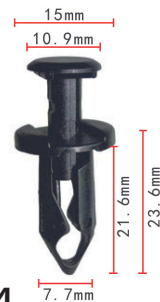

7294

Gyári számok: 01553-0192U,015530192U,11561878,21075686,F3LY-14570-B,F3LY-14570B,F3LY14570B



 
7295

Gyári számok: 01553-01285,07130702966,07130702966,4803742,57728AC060,78875.08000,7887508000,91503-SP0-003,91503SP0003,91503SPO003,94530623



7296

Gyári számok: 01281-00441,0128100441

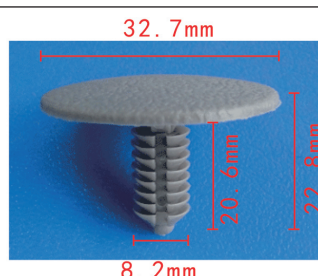


7297

Gyári számok: N805315



7298

 Gyári számok: 01553-00515,63844-01A00,63854-01A00,63854-01A00 NB,6385401A00,H38068885,H3816888500,H3816888505,M547806,MB487004,MB547806,MB866568,NA01-56-145

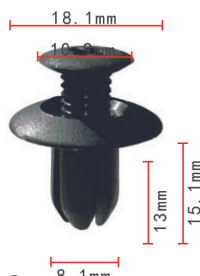

7302

Gyári számok: 092-51-833,09251833,09409-09302,B092-51-833,B09251833,M-455-56143,M45556143,MB-455-56143,MB45556143,W705845-S300,W705845S300



7303

Gyári számok: 01553-01781,0155301781



7306

Gyári számok: 80875-85E00,8087585E00



7309

Gyári számok: 68929-01R00,6892901R00,9926-40-531,992640531



 
7323

Gyári számok: 01553-01353,01553-01503,01553-01753,01553-01763,01553-02133,01553-03703,01553-04493,01553-06361,09409-08308-T01,0940908308T01,3533394,57718PA020,90467-08180,90467-08182-C0,90467-08182-CO,90467-08187,9046708180,9046708182C0,9046708182CO,9046708187,91505-SL0-003,91505-ST3-E01ZC,91505-ST3-E01ZC,91505-ST7-003ZA,91505-ST7-003ZD,91505-ST7-003ZJ,91505SL0003,91505ST3E01ZC,91505ST3E01ZC,91505ST7003ZA,91505ST7003ZD,91505ST7003ZJ,M674791,M674792,M674793,MR167002,MR167003,MR167004,MR381913,MR381914,MR7204



7332

Gyári számok: 386553-S,386553S

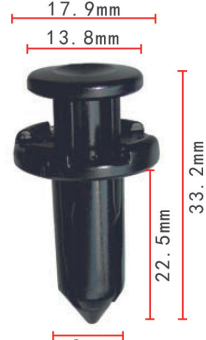


7342

Gyári számok: 63848-9E001,638489E001




7365

 Gyári számok: 63846-9E000,
638469E000,63848-9E000,
638489E000

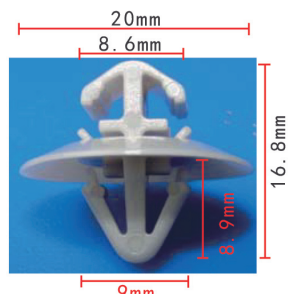

7376

 Gyári számok: 44 12 053,
4412053,45 01 568,4501568,
500326896,7701470779,
7703077421,78839-00QAB,
7883900QAB,9161868

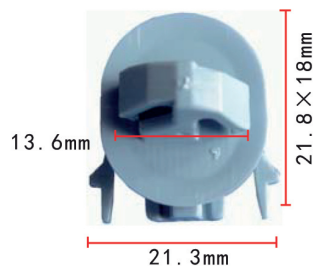


7467



7487

 Gyári számok: 62660-48600-1,
62660-48600,62660486001,
90667-671-013ZA,90667671013ZA,
MC440901

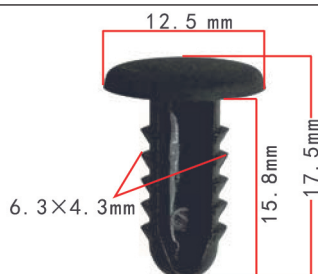

7492

Gyári számok: 01533-01781,
0153301781



 
7502

Gyári számok: 01553-07111,
0155307111,80999VE000,
84953-AU100,84953AU100,
94044TA040,94269AC010




7506

Gyári számok: BP4K-58-762,
BP4K58762

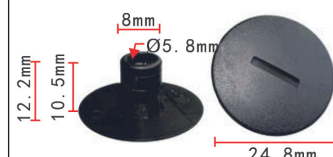


7563

 Gyári számok: 09148-05042-000,
09148-05042,0914805042

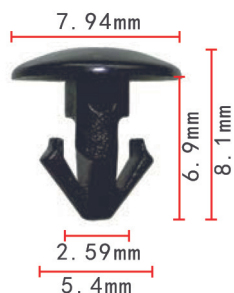

7568

 Gyári számok: 80850-CA003,
80850CA003

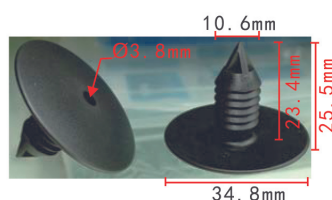


7608

Gyári számok: 50080216,700 580,
7518.N8,7518N8,7703077225,
A18000




7620

 Gyári számok: 01553-0038U,
09409-09302,0G032-50037A,
0G032 50037A,0G03250037A,
60001,86590-28000,
8659028000,B092-51-833,
MB-455-56143,MB45556143,
UB39-45-919,W705845-S300

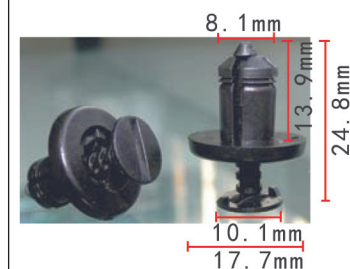

7622

 Gyári számok: 01515-00Q0C,
01515-00QAB,0151500QAB,
054000001R,77 03 072 360,
77 03 081 217,7703072360,
C10128

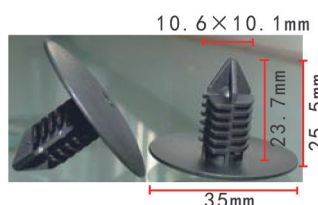


7630

Gyári számok: 44 14 104,50129Z,
7703077435,91169652




 7661

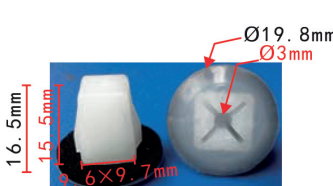


7671

 Gyári számok: GJ6A-58-975,
GJ6A58975

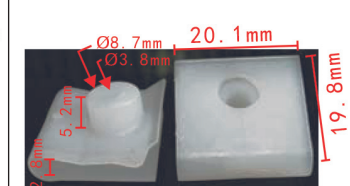


7677

 Gyári számok: 76882-0M000,
768820M000

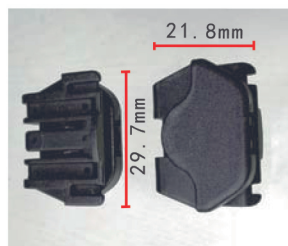


7690

 Gyári számok: 01553-05233,
0155305233

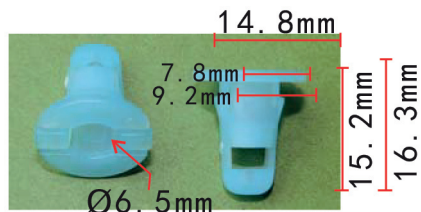


7693

 Gyári számok: 76848-ED000,76848ED000

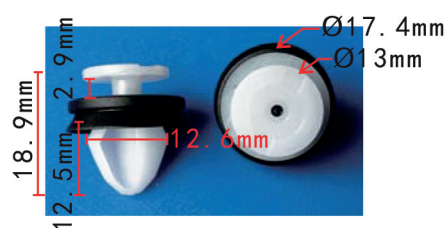

7705

 Gyári számok: 1 76 073,13317099,16 121 083 80,
1612108380,176073,4 860 409,44 01 080,44 22 820,
4401080,4860409,5 179 084,5179084,6991.Y8,
6991Y8,77 03 077 468,77 03 077 469,7703077469,
9341.PF,9341PF,93453019,95508747,96 542 807 80,
9654280780,C40790,W713489-S300,W715789-S300

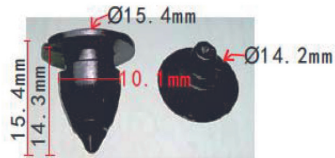

7731

Gyári számok: 44 11 887,4411887,
7703077434,93160780,C60141

 


7743

Gyári számok: 90159-60496,
9015960496,C60611




7744

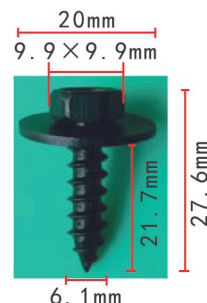


7745

 Gyári számok: 90159-60525,
9015960525,C70365

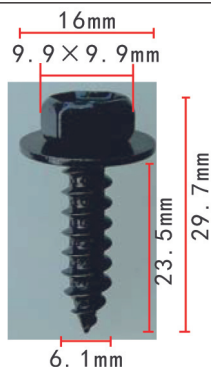


7748

 Gyári számok: 90159-60488,
9015960488,C60614

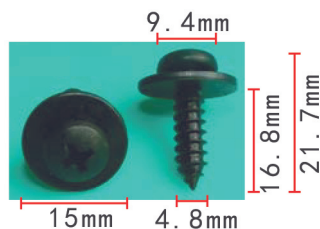


7749

 Gyári számok: 15532209,C60361

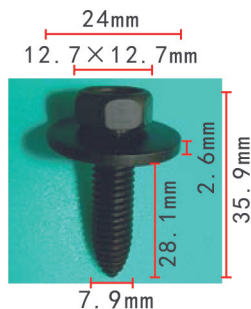

7764

 Gyári számok: C60617

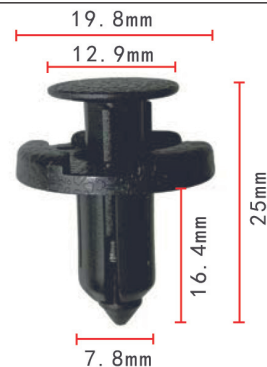

7785

Gyári számok: 11296-AG000,
11296AG000

 


7791




7797

Gyári számok: 09409-07333-000,
0940907333,3541113,63848-01G00,
63848-WA000,6384801G00,
91059-FC010,91059FC010,
91545-SE0-003,91545-SE0-003W

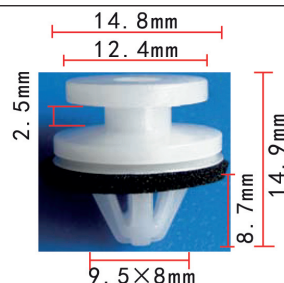


7804

 Gyári számok: 07130702516,
44 14 720,44 30 858,4414720,
4430858,5001855049,7701050734,
7703077368,82Z61-02005,
82Z6102005,93161475,93176656,
DYC101420

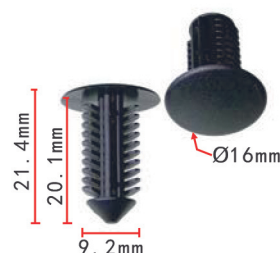

7813

 Gyári számok: 6389840061,
6389841661,7703077153,
7703077356,A 638 984 00 61,
A 638 984 16 61,C10024,
SS070069A

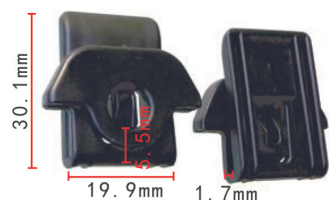


7836

Gyári számok: 63848-9Y000,
63848-D4001,638489Y000,
63848D4001,B22182



7878

 Gyári számok: 1473596,7701049008,
7703077354,8200702219,C30142,
W710404-S300,W710404S300

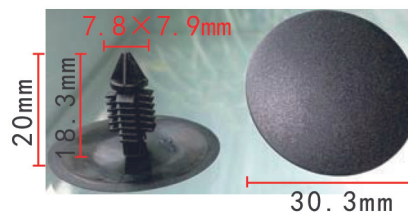

7880

Gyári számok: 6001546909,7703077090,C40135



 
7882

Gyári számok: 84995-3J001,
849953J001,C70313




7886

Gyári számok: 01553-09311,
0155309311

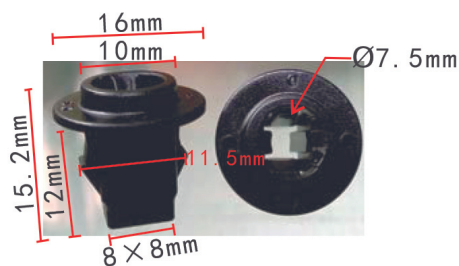

7901

 Gyári számok: 76881-JG00A,76881JG00A

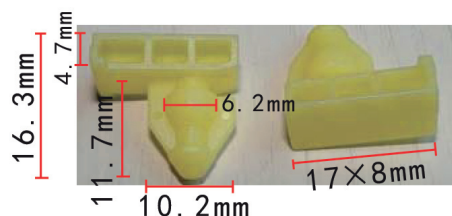

7910

Gyári számok: 76847-JG00A,76847 JG00A,76847JG00A



7911

Gyári számok: 76882-JG10A,76882 JG10A,76882JG10A



7000

Gyári számok: 20064875,3078511,3977775,B21007



7001

Gyári számok: 1619321,B22002



 
7002

Gyári számok: 02860454,04630747,06030441,06502381,06505403AA,06509015AA,11569768,1595864,15958694,1605396,3885775,3893585,4004569,4004919,53001698,53001699,6030441,6036007AA,85746-06000,8574606000,B11146,J4004569,J4004919,W705589-5300,W7055895300



7003

Gyári számok: 0940907326,0940907350,10021,14093311,20732399,332364,3691590,389358,6031321,94530527,94530548

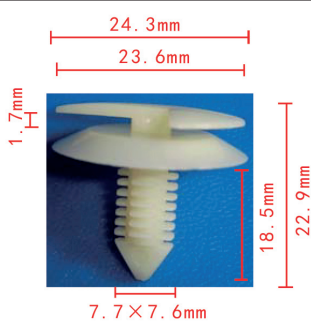


7009

Gyári számok: 4005470,6003349,6032363,9685057,B22011,V98905101



7010

 Gyári számok: 2064891,9818648,9883583

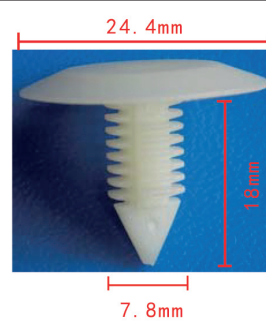


7013

Gyári számok: 2048248,6003423




7014

 Gyári számok: 09409-09303,0940909303,48 03 743,4803743,60003,86157-37000,8615737000,91502-SP0-003,91502SP0003,94530624

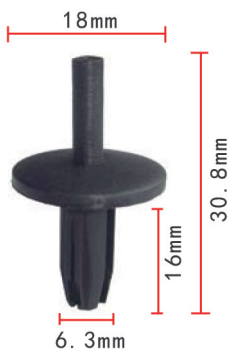


7015

 Gyári számok: 472434,6031390,B22019

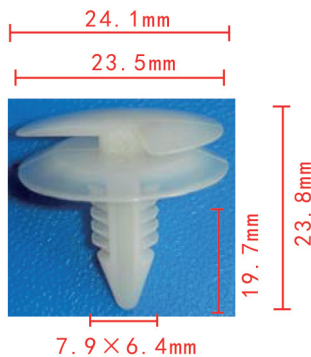


7016

 Gyári számok: 20480475,B22020

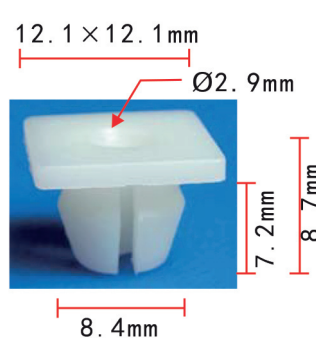

7021

 Gyári számok: 14013246

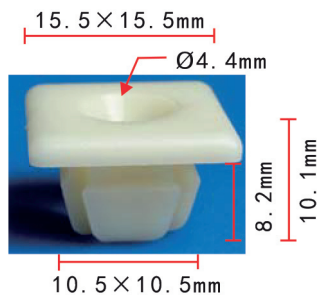


7022

Gyári számok: 1 40 527,140527,3907444,4755299,B22030



7027

 Gyári számok: 25601491

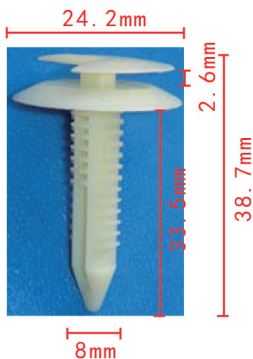

7029

Gyári számok: 10126901,B22038



7030

Gyári számok: 14103461



7031

Gyári számok: 14019205,
14019206,34201621



7032

Gyári számok: 14074081



7033

Gyári számok: 20590899



7034

Gyári számok: 0155305761,09409-07305-5PK,
09409073185ES,0K201-50-033,20426301,
90467-06017-01,90467-06017-B0,90467-06017-B1,
90467-06017-C0,90467-06017,9046706017,
90657SA5003,96050KA140,9926-50-625,992650625,
B22044,MB345544



 
7036

Gyári számok: 07 14 6 971 349,
07146971349,1304727,15773445,
20452072,20664092,4638136,
B22046,N804570-S,N804570S




7037

Gyári számok: 20510029,34202672,
N803362-S,N803362S

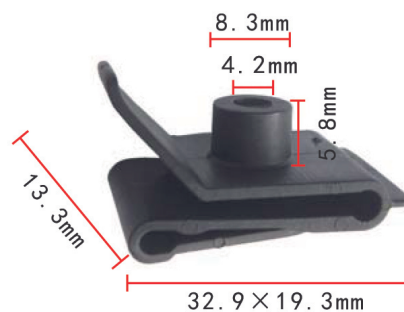

7039

 Gyári számok: 53879-14010-A,53879-14010,53879-14020,53879-17020,
5387914010A,5387914020,5387922030,88970766,90467-05138,94841226,
B22049,LA01-56-135,LA0156135

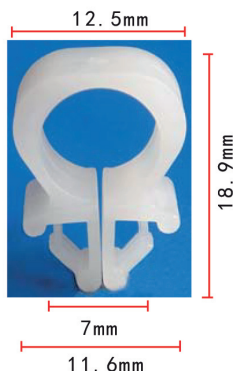

7040

Gyári számok: 4042711,9927-70-901,
99277-0901,992770901



7041

Gyári számok: 3816659,8917320



7042

Gyári számok: 4005099,
6033862,796255



 
7046

Gyári számok: 21095797



7050

Gyári számok: 90467-08155,
9046708155,90505-SL0-003,
90505SL0003,94852368,B22081,
M888869,MB888869

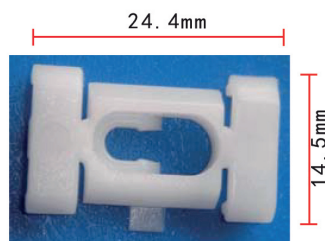

7051

Gyári számok: 15633873,20175051



7060

Gyári számok: 20319841,B22102



7061

Gyári számok: 20511451



7063

Gyári számok: 7642589,
B22105



7068

Gyári számok: 10077283



7077

Gyári számok: 4876498,
B22132,MB105489



 
7079

Gyári számok: 09409-06319,0940906319,
10998-30880,1099830880,5578552020,
8 34 752,834752,8942981190,90674-SA5-003,
90684-SA5-003,90684SA50030,90746-SG2-N00,
94298119,B14696,KK376-68865



7081

Gyári számok: 179 813 881,
179813881,3997391

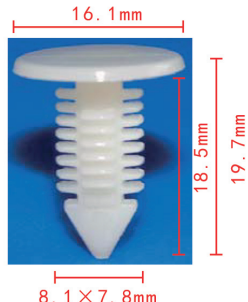


7082

Gyári számok: 25514221,6003587



7083

 Gyári számok: 20032850,3861577,
387258-S,387258S

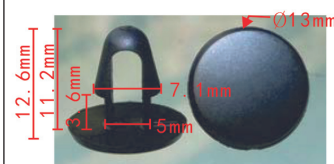

7086

Gyári számok: 90467-08004,
90467-08011,9046708004,
9046708011,94842841,
94849113,B22146



7087

Gyári számok: 14027471



7090

Gyári számok: 20699808,6502328



7093

Gyári számok: 22535007



7094

Gyári számok: 10053388,22542705



7096

Gyári számok: 63844-D0100,
63844D0100,8942211500,
94221150



7097

Gyári számok: 67771-01010,
6777101010,8942264920,
95005064,9928-40825,B22165



 
7098

Gyári számok: 15545202,15607165,
15612948,15953247



7099

Gyári számok: 10157900,11517803,
15993201

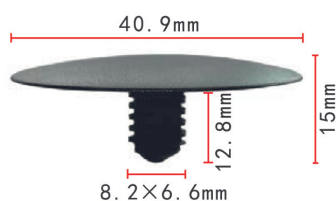

7101

Gyári számok: 21039141, B22174



7102

Gyári számok: 59130AA000, 90467-06017-B7, 90467-06017, 90467-07072-22, 90467-07072, 904670707222, 90657-SA6-003, 90657SA60030, 94198687, B14697, N304-13-356A, N30413356A



7104

Gyári számok: 380382



7106

Gyári számok: 66860-01W01, 6686001W01, 94051993, B22181, M344737, M406893, MB344737, MB406893



7111

Gyári számok: 10134407, 6501925



7112

Gyári számok: 3540858



7114

Gyári számok: 10185925



7116

Gyári számok: 175 853 577 01C, 17585357701C, 20432975, 6500899, 6503800, 8048635



7117

Gyári számok: 10184895, 14063981, 6500911, 6501559, B13750, N803043-S, N803043S, N803862-S



 
7118

Gyári számok: 14070914, 175 553 577 A, 175 853 577 A, 175553577A, 175853577A, 20433026, 4370132, B13753




7120

Gyári számok: 1631564, N804379-S, N804379S

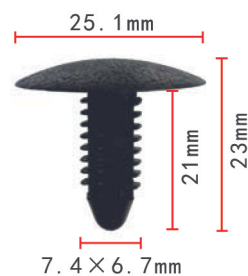

7122

 Gyári számok: 22718305, 6501067, 90467-08104, N802734-S, N802734S

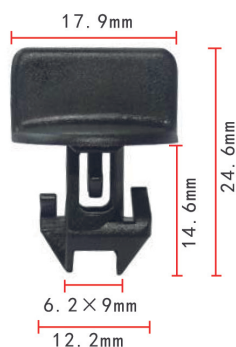


7124

Gyári számok: 25535963, N811772-S, N811772S



7126

 Gyári számok: 09409-07325-5PK, 09409-07325, 0940907325, 09409073255PK, 30008324

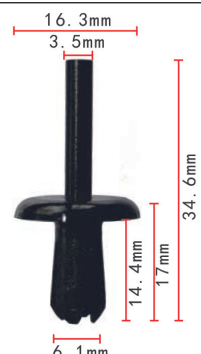

7127

Gyári számok: 000 990 29 92, 1268176-3, 1268176, 12681763, 199 016 92 92, A 000 990 29 92



7131

Gyári számok: 10437565



 
7136

Gyári számok: 000 990 03 92,
000 990 22 92,0009900392,167935,
77 03 072 173,7903072116,8968165,
947098,A 000 990 03 92,
A 000 990 22 92




7137

Gyári számok: 25603960

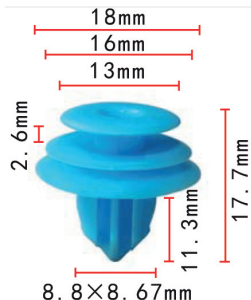

7140

 Gyári számok: 51216-24005,
5121624005,5121624005,
76882-WA000,76882WA000,
88970345,90467-10167,
9046710167,909130077

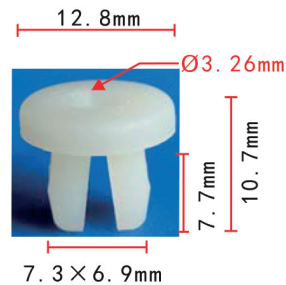

7143

Gyári számok: 1355003



7148

Gyári számok: 01553-01733,
0155301733,94858864



7159

Gyári számok: 21094146,6501301



7160

Gyári számok: 10143422,
34202599,55196747AA,
55196858AA,8934-202-599,
N805612-S100,N805612S100



7166

Gyári számok: 20455900



 
7168

Gyári számok: 4801268



7169

Gyári számok: 3783006

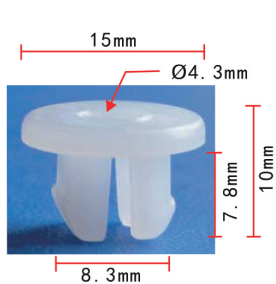

7172

Gyári számok:
380370,62698-V7000,
62698V7000,90668-SA5-003,
90668SA5003,MB690235,
MS480003,MS480005



7174



7178

Gyári számok: 10262036



7180

Gyári számok: 21035345



 
7181

Gyári számok: 22657634




7182

Gyári számok: 14 00 806,1400806,
51 11 8 174 185,51118174185,
90508809

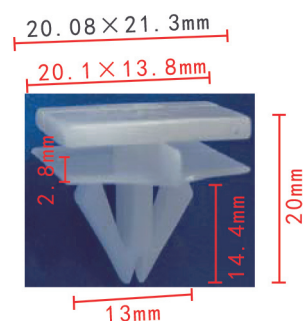

7183

 Gyári számok: 10443956

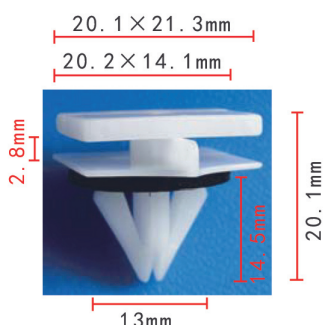


7188

Gyári számok: 11518357




7190

 Gyári számok: 90189-06212,
90189-06214,9018906214

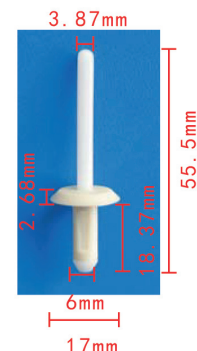

7191

 Gyári számok: 14070914,
175 853 577 A,175853577A,
20433026,4370132

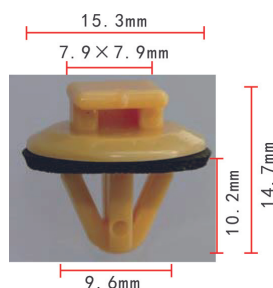


7196

Gyári számok: 62955-12010,
62955-20020,6295512010,
6295520020,90467-10077,
9046710077,94848834,
94850809




7202

 Gyári számok: 10078274

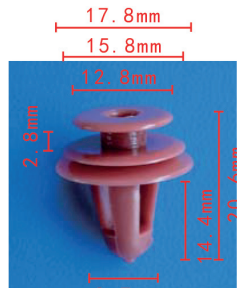


7203

 Gyári számok: 30006620,
67771-12050,67771-28020,
6777112050,6777128020,
940908320000,940910311

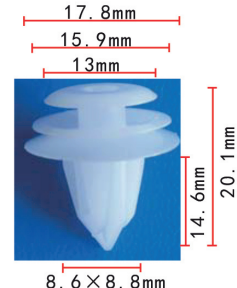


7211

 Gyári számok: 09409-10312,3568481A10,6777135010,
6822.LL,7181278F00,90467-10161,9046708179,
9046709203,9046710161,909130076,909130105,
909130115,9156056A003,94858299,GE4T68865A,
MR402275,MR550000,MR550882,MU000504,
MU480150,MU481245,MU488002

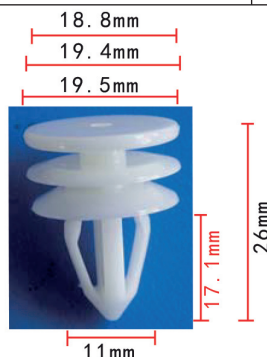

7215

 Gyári számok: 15076791

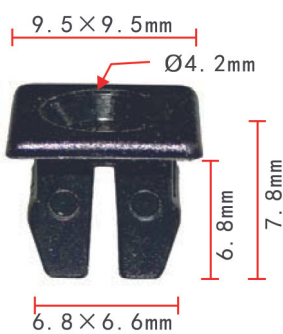


7216

Gyári számok: 175 853 674,
175853674,20475950



7218

 Gyári számok: 332364,3691590,
389358,4004569,6031321,
94530548

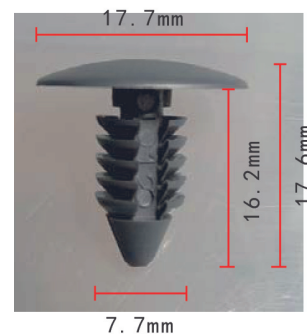

7219

Gyári számok: 480534,6030538,
6270163



7220

Gyári számok: 8731909



 
7222

Gyári számok: 20413107,388246-S,
388246S




7223

Gyári számok: 20413107,388246-S,
388246S

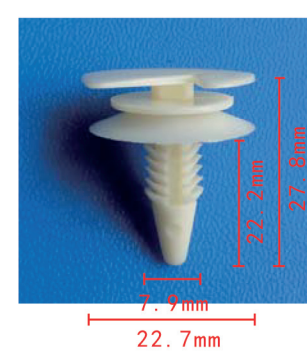


7226

 Gyári számok: 3065575

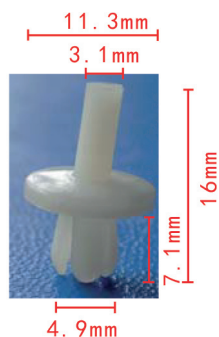


7228

 Gyári számok: 14005089

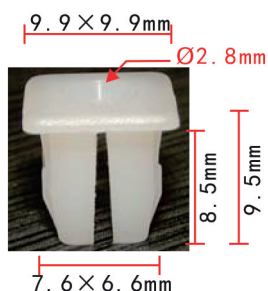

7229

 Gyári számok: 8934201262,
9669486

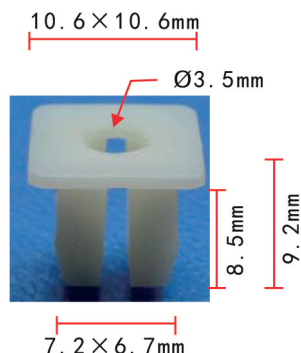


7231

Gyári számok: 1370853,
179 813 883,179813883,6029501



7232

 Gyári számok: 5973400

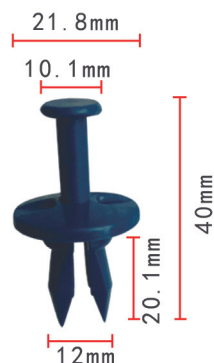


7233

Gyári számok: 5973823




7234

 Gyári számok: 22512276

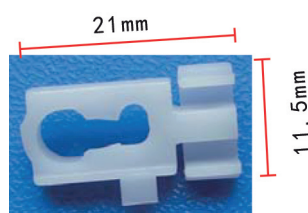


7235

 Gyári számok: 20274997

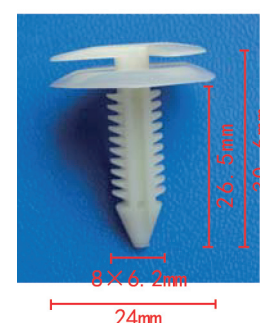


7236

 Gyári számok: 20451401

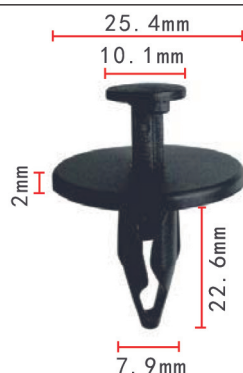


7239

 Gyári számok: 20570245,
N-804614-S,N804614S

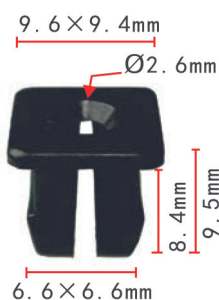

7240

 Gyári számok: 16503329

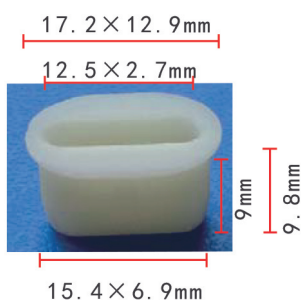

7241

Gyári számok: 14032291,
7622606,7754387



7242

Gyári számok: 14045480,
6508746 AA,6508746AA



 
7243

Gyári számok: 14019226,
14071289



7246

Gyári számok: 14093088,
N802781-S,N802781S,
W704340-S300,W704340S300

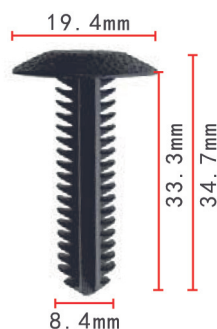


7248

Gyári számok: 15588078



7249

 Gyári számok: 15596280,6035274

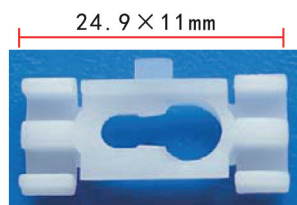


7257

Gyári számok: 20199675




7260

 Gyári számok: 10139822, 25680782, N808147-S, N808147S

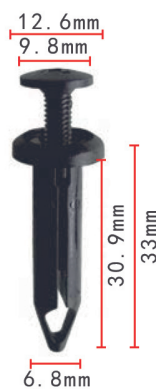

7263

 Gyári számok: 10195515, 4696488, 6503163, N805026-S, N805026S

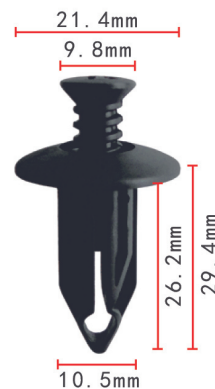


7265

Gyári számok: 10053182, 1404961




7266

 Gyári számok: 10078274, 20514862

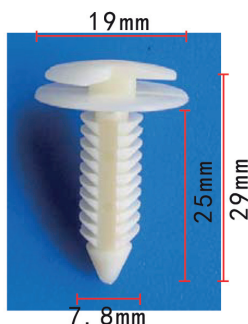


7267

 Gyári számok: 363137

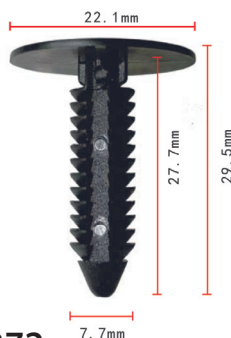

7272

 Gyári számok: 22547243, 3C0 863 559, 3C0863559, 6501916, W706635-SSW, W706635SSW

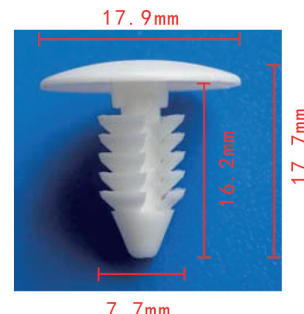

7273

Gyári számok: 0940907326, 0940907350, 14093311, 20732399, 3691590, 389358, 4004569, 6031321, 94530527, 94530548



7275

Gyári számok: 14101262



7282

Gyári számok: 21047094



7288

Gyári számok: 1160854, 89414-55150, 8941455150, 90467-06061-1, 90467060611, 90665-S2-003ZF, 90665-S2-003ZQ, 90665-S2-003ZR, 90665-S2-003ZU, 90665-S2-003ZY, 90665S2003ZF, 90665S2003ZQ, 90665S2003ZR, 90665S2003ZU, 90665S2003ZY, 94145515, M772941



7290

Gyári számok: 15681408, N803709-S, N803709S



7291

Gyári számok: 22566221, 6501577



 
7292

Gyári számok: 09409073085PK, 90467-07041, 90467-07041A0, 90467-07041C0, 90467-07041E8, 90467-07041E9, 9046707041, 96057846, MB476821



7293

Gyári számok: 09409-08335, 1039463, 21030249, 4803228, 6503598, 770 104 92 71, 7701049271, 8E0 825 267, 8E0825267, N807389-S, N807389S

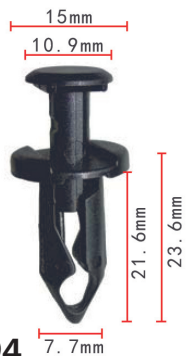


7294

Gyári számok: 01553-0192U,
015530192U,11561878,
21075686,F3LY-14570-B,
F3LY-14570B,F3LY14570B




7295

 Gyári számok: 01553-01285,
07 13 0 702 966,07130702966,
4803742,57728AC060,
78875.08000,7887508000,
91503-SP0-003,91503SP0003,
91503SP0003,94530623

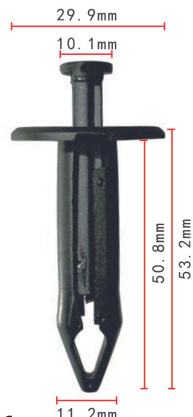

7301

 Gyári számok: 21077131,4803224

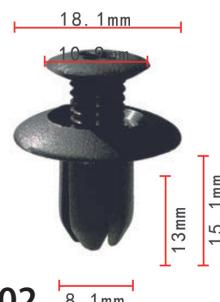


7302

Gyári számok: 092-51-833,
09251833,09409-09302,B092-51-833,
B09251833,M-455-56143,
M45556143,MB-455-56143,
MB45556143,W705845-S300,
W705845S300



7304

 Gyári számok: 10121502,1314934,
3900185,6033082,6033840

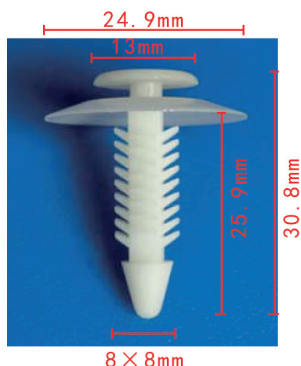

7307

Gyári számok: 10158124



 
7314

Gyári számok: 6502104



7321

Gyári számok: 90189-06028,
9018906028,94854203

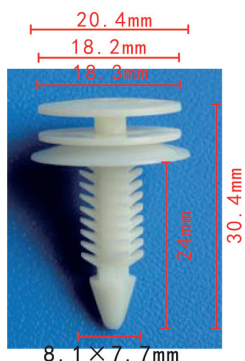


7324

Gyári számok: 10285935,2240973



7327

 Gyári számok: 383297-S,383297S,
384051-S,384051S,480534

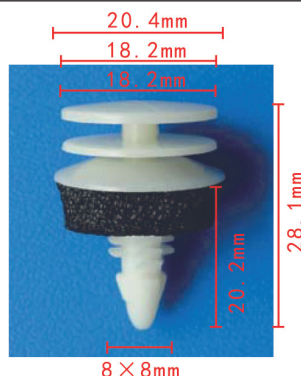

7328

Gyári számok: 22646099



 
7330

Gyári számok: 15153415



7331

Gyári számok: 15149708,4805808,
6506008AA

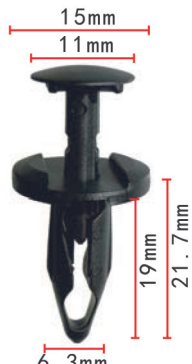

7334

Gyári számok: 21077123,3001337,
W705436-S300,W705436S300



 
7335

Gyári számok: 15975244




7339

Gyári számok: 25663903

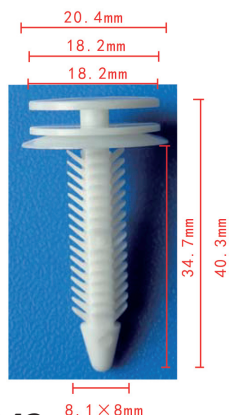


7343

 Gyári számok: 10421018,2332900

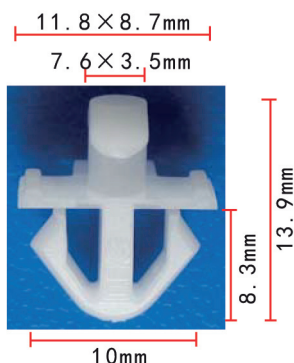

7346

 Gyári számok: 10287547

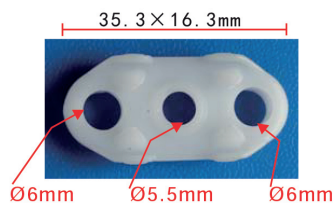


7347

Gyári számok: 1 40 640,140640, 90055545,B25694




7357

 Gyári számok: 25649667, W705590-S300,W705590S300

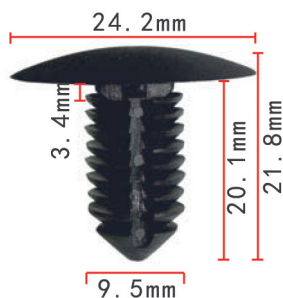

7359

 Gyári számok: 22189414, 6505667AA

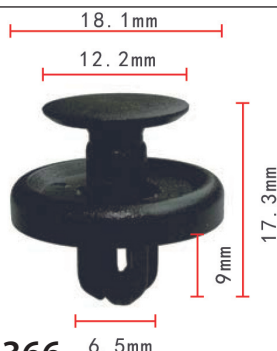


7366

Gyári számok: 88970767, 90467-07183,90467-10183, 9046710183,909130043



7370

 Gyári számok: 11 62 005,11 62 488, 11 62 495,11 62 742,1162488, 1162742,13238288,13265959, 13336240,72451-83E00,90355604

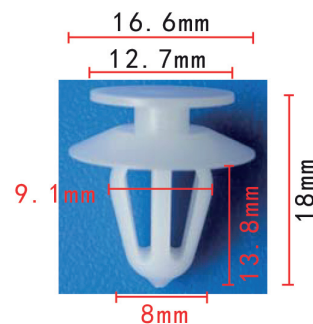


7371

Gyári számok: 23 45 957, 2345957,90 321 122,90321122




7375

 Gyári számok: 22 08 843,2208843, 90218614,90221543

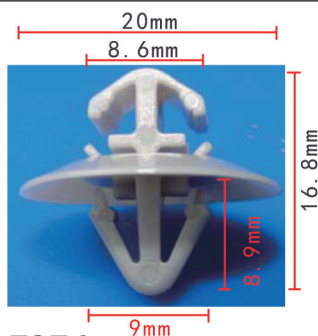

7376

 Gyári számok: 44 12 053,4412053, 45 01 568,4501568,500326896, 7701470779,7703077421, 78839-00QAB,7883900QAB,9161868

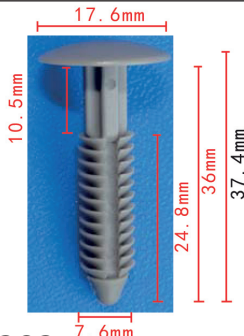

7383

Gyári számok: W705955-S300, W705955S300



7386

Gyári számok: 000 990 37 92, 0009903792,1104881,90356928, A 000 990 37 92,A0009903792, N 100 323 01,N10032301

 


7387



7389

Gyári számok: 11518017, W705955-S300,W708530S300

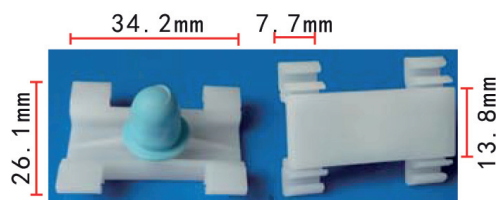

7397

Gyári számok: 1 72 017,172017,51 13 8 166 675,51138166675,71717421, 90590995



7414

Gyári számok: 1 57 979,1065204, 157979,1H0 837 719,1H0837719, 90579619



7433

Gyári számok: 000 988 03 28,000 988 05 28,1079129,2 207 713,2207713, 51 47 1 904 317,51471904317,6678518,6998849,90082231,A 000 988 03 28, A 000 988 05 28,N90201601,N90201601H,W700671-S300,W706023-S300



7470

Gyári számok: 0174611,1 74 611, 129943,90355861,90580707



7474

Gyári számok: 22 40 582,22 40 587, 2240582,2240587,90221828



7500

 


7503



7505

Gyári számok: 09409-08326, 09409-08332,5482087, 6777158010,71741886, 90467-10201,909130018

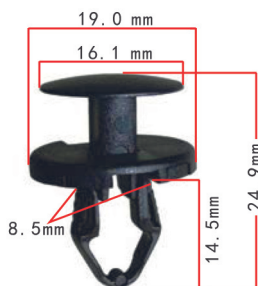


7507

Gyári számok: 11609417



7509

 Gyári számok: 1 104 880,1 916 670,1104880,161 867 299 01C,16186729901C, 1618672999,51 47 1 916 670,6136889,90087290,A000990299,E844052S, N 0385491,N0385491,N0385494,N90112201,N90112202,N91018901

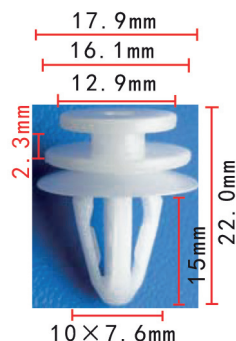


7518

Gyári számok: 11562585,11569810, 330151056



7538

 Gyári számok: 25705182

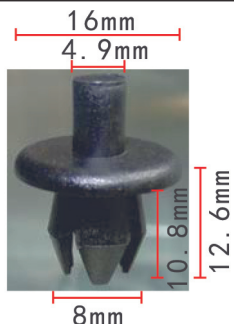


7544

Gyári számok: 13011,1719245, 51751429,90 138 810,90138810, 94530507



7553

 Gyári számok: 1 40 642,1938884, 3509416,3A0 837 461,3A0837461, 51 32 1 938 884,51321938884, 9196667,ALR1051,C10110

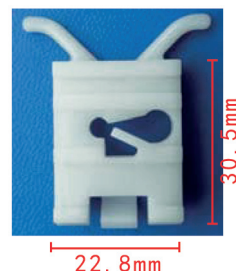

7555

Gyári számok: 1 74 833, 174833,90052911

7558



7560

Gyári számok: 88970494,88973676,
90467-07168,9046707168



 
7604

Gyári számok: 11589291,
W713331-S300,W713331S300



7605

Gyári számok: 06508863 AA,
06508863AA,11589289,11589291,
48 11 301,4811301,4855809,
6508863AA,C70149,
W713610-S300,W713610S300

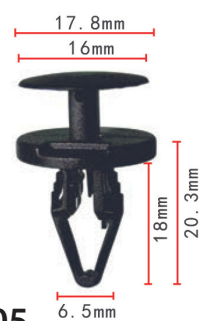


7606

Gyári számok: 10431524




7608

 Gyári számok: 50080216,
700 580,7518.N8,7518N8,
7703077225,A18000

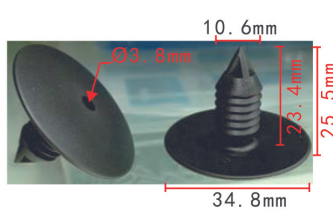

7619

 Gyári számok: 91176726

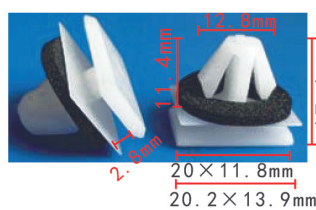


7620

Gyári számok: 01553-0038U,
09409-09302,0G032-50037A,
0G032 50037A,0G03250037A,
60001,86590-28000,8659028000,
B092-51-833,MB-455-56143,
MB45556143,UB39-45-919,
W705845-S300




7630

 Gyári számok: 44 14 104,50129Z,
7703077435,91169652

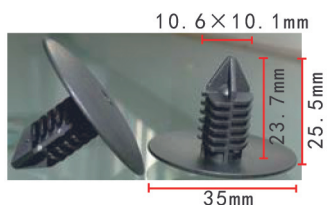


7642

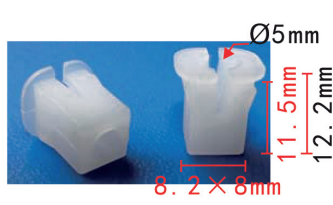 


7643

 Gyári számok: 1608722380,45 01 607,
4501607,500389689,6997.96,699796,
7703081185,9161907,9621824880,
C60104

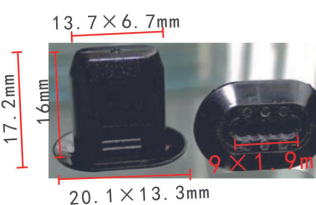


7646

 Gyári számok: 77 03 072 502,
7703072502,N90 229 301,
N90229301

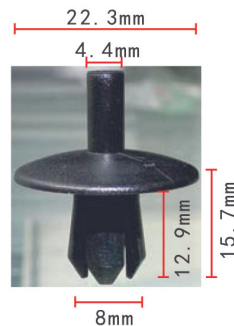


7659

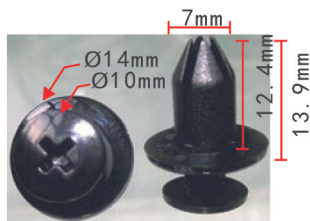 


7664

 
Gyári számok: C60378

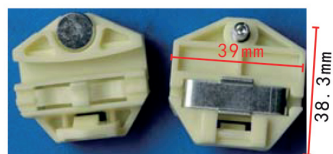

7670

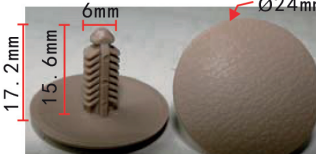 


7672

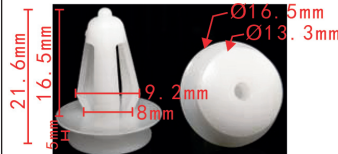 




7676

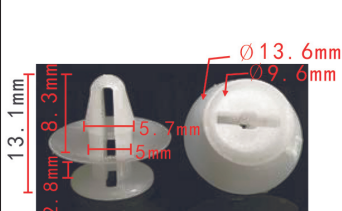 

7679

 Gyári számok: 1 214 485, 1214485, B23168, W709011-S300, W709011S300

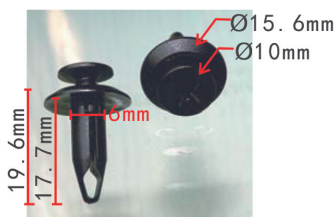


7692

Gyári számok: 1007932, 58211Z, 96FG-16K262-AA, W703915SSYYB6, YS4Z16K262AA




7694

 Gyári számok: 1 404 926, 1 719 242, 1719242, 77 03 072 172, 90 058 826, 90 262 367, 90058826, A12710, N 0385012, N0385012

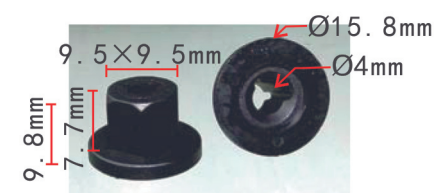


7701

 Gyári számok: 1 80 942, 1809.42, 180942, 8E0 825 265, 8E0825265, 90413589, C70376

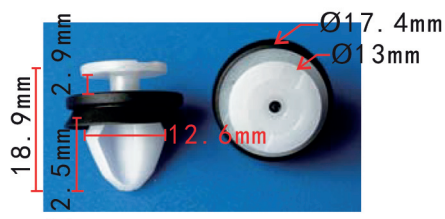

7705

 Gyári számok: 1 76 073, 13317099, 16 121 083 80, 1612108380, 176073.4 860 409, 44 01 080, 44 22 820, 4401080, 4860409, 5 179 084, 5179084, 6991.Y8, 6991Y8, 77 03 077 468, 77 03 077 469, 7703077469, 9341.PF, 9341PF, 93453019, 95508747, 96 542 807 80, 9654280780, C40790, W713489-S300, W715789-S300

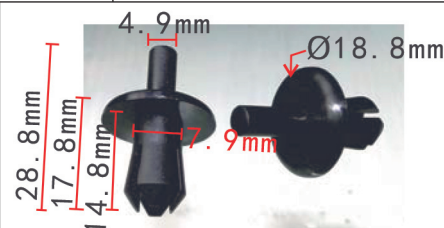

7706

Gyári számok: 000 990 29 92, 001 990 16 92, 1104882, 161867299, 199 016 92 92, 51 478 170 166, 51751426, 90450482, 9133417, 94530507, A 000 990 29 92, A 001 990 16 92, C70310



 
7709

Gyári számok: 13252118, 72 31 991, 7231991, C60709




7710

Gyári számok: 11589293, 18 16 589, 1816589, 4811301, 4855809, C60644, W712196-S300, W712196S300

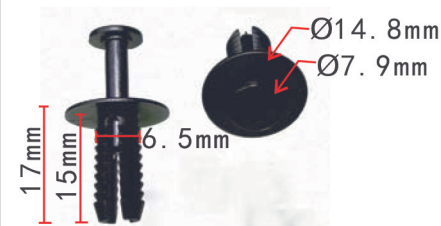


7712

 Gyári számok: 000 990 54 92, 0009905492, 14 00 804, 1400804, 51 11 1 964 186, 5111908077, 51111964186, 90414659, A0009905492, C10009, N90359101

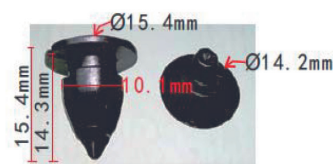


7731

 Gyári számok: 44 11 887, 4411887, 7703077434, 93160780, C60141

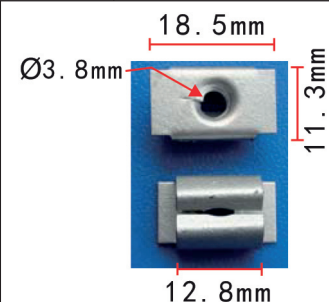


7747

 Gyári számok: 001 994 98 45, 8 50 856, 850856, 90270271, A 001 994 98 45, A0019949845, C60613

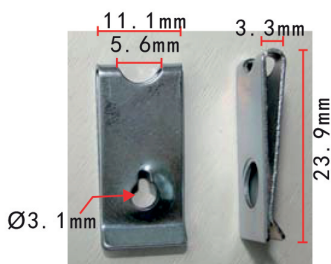


7757

 Gyári számok: 14 50 657, 1450657, 16034, 211837223, N 01 543 01, N0154301

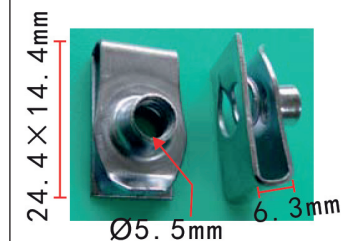


7759

 Gyári számok: 00152492, 06100041, 06500933, 06504118, 11503714, 52028851AA, 52028851AB, 52028851AC, C60616

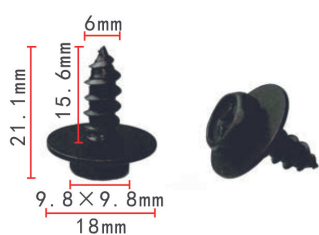


7762

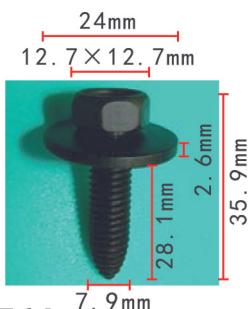 


7764

 Gyári számok: C60617

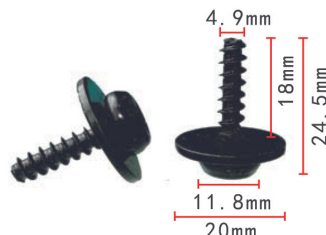

7765

 Gyári számok: 11093773,1388632,
1449533,2020106,C60460,
N 103 546 02,N10354602,
W700501-S303,W700501S303,
W708591-S424,W708591S424

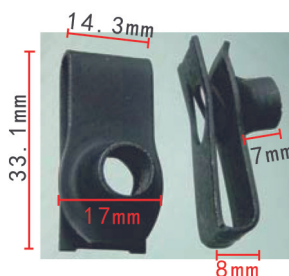


7768




7794

 Gyári számok: 05480772,
09409-15302,0940915302,
5480772,71741894,C30363

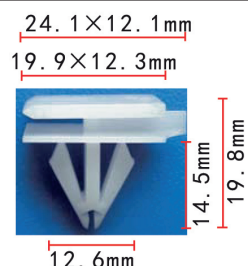

7803

 Gyári számok: 10323057

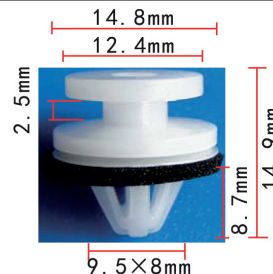


7804

Gyári számok: 07130702516,
44 14 720,44 30 858,4414720,
4430858,5001855049,7701050734,
7703077368,82Z61-02005,
82Z6102005,93161475,93176656,
DYC101420




7805

 Gyári számok: 14 06 925,1406925,
9130754,C10008

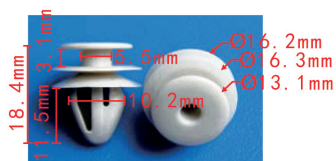


7806

 Gyári számok: 09409-08301,
0940908301,7259A013,
82315-2P000,82315-38000,
823152P000,8231538000,
85849-3B000,858493B000,
909130034,91560-S9A-A01,
91560S9AA01,A175049

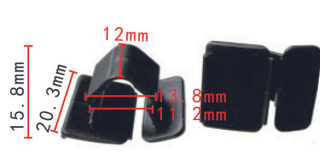


7807

 Gyári számok: 11 62 014,46804433,
95511141,C60373

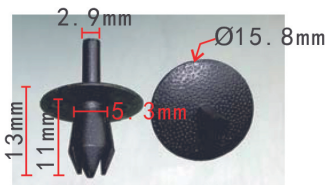

7823

 Gyári számok: 0009905592,
1009164,23 17 703,2317703,
3923475,500355891,90116376,
A 000 990 55 92,A0009905592,
A13840,N 102 195 01,N 102 195 02,
N10219501,N10219502,
W703904-S300,W703904S300

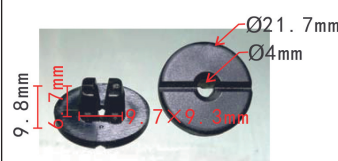

7831

Gyári számok: 12 74 977,1274977,
57280Z,90506890



 
7835

Gyári számok: 01 49 910,0149910,
1 49 910,149910,90560163,
C50550




7877

Gyári számok: 5160260-AA,
5160260AA

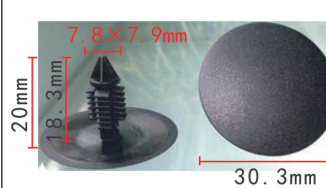

7880

 Gyári számok: 6001546909,
7703077090,C40135

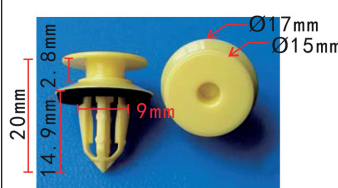

7919

Gyári számok: 11610606



 
7392

Gyári számok: N 908 338 01,
N 90833801,N90833801




7530

Gyári számok: 7L6 868 243,
7L6868243,8679426,
955 555 243 00,95555524300

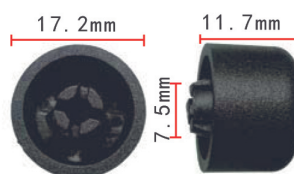


7582

 Gyári számok: 014 301 485,
014301485

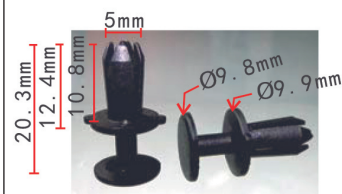

7688

 Gyári számok: C70300,N 905 369 01,
N90536901

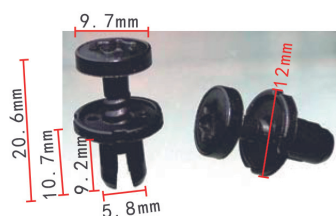


7689

Gyári számok: 6555.LE,6555LE,
7703072236,7L6 868 307,
7L6868307,8Z0 857 784,
8Z0857784,A 000 991 66 40,
A0009916640,A60953




7694

 Gyári számok: 1 404 926,
1 719 242,1719242,
77 03 072 172,90 058 826,
90 262 367,90058826,A12710,
N 0385012,N0385012

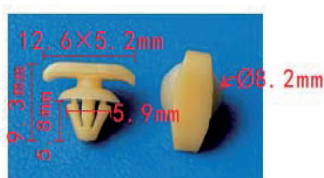


7720

 Gyári számok: 1Z0 837 732 A,
1Z0837732A,C60452

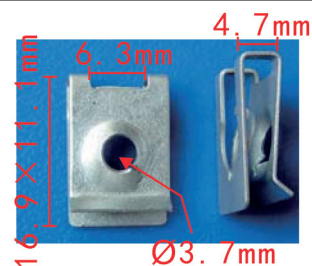


7766

 Gyári számok: 07 12 9 904 150,
07129904150,C70173,N 015 437 4,
N0154374

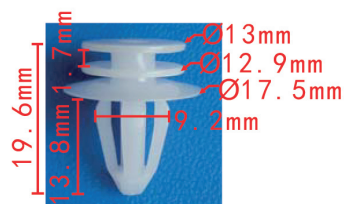


7873

 Gyári számok: 007 988 99 78,
6Y0867260,A0079889978,C60639

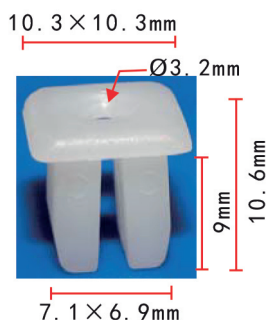

7105

 Gyári számok: 6000943,
8934201263

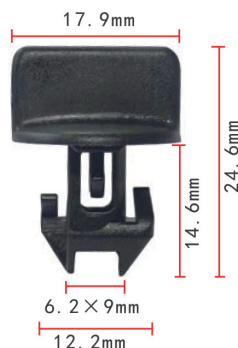

7124

Gyári számok: 25535963,
N811772-S,N811772S



 
7136

Gyári számok: 000 990 03 92,
000 990 22 92,0009900392,167935,
77 03 072 173,7903072116,8968165,
947098,A 000 990 03 92,
A 000 990 22 92




7213

Gyári számok: 8934201235

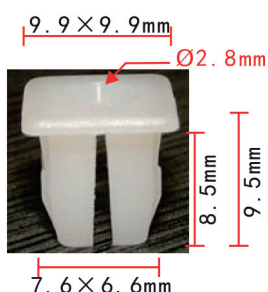


7229

 Gyári számok: 8934201262,
9669486

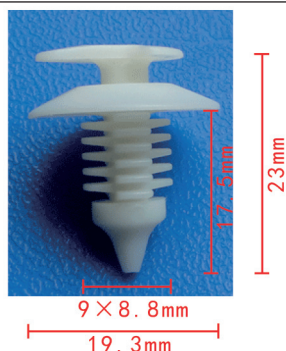

7237

 Gyári számok: 175 867 299,
175867299,8934201681

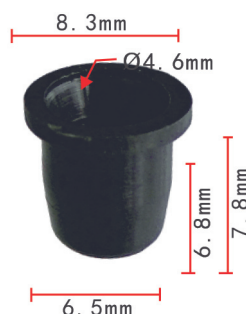


7238

Gyári számok: 8934201767




7293

 Gyári számok: 09409-08335,
1039463,21030249,4803228,
6503598,770 104 92 71,
7701049271,8E0 825 267,
8E0825267,N807389-S,N807389S

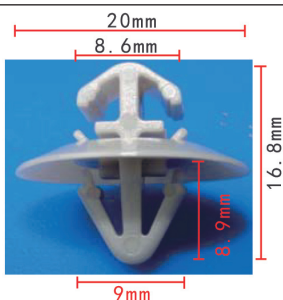


7376

 Gyári számok: 44 12 053,
4412053,45 01 568,4501568,
500326896,7701470779,
7703077421,78839-00QAB,
7883900QAB,9161868

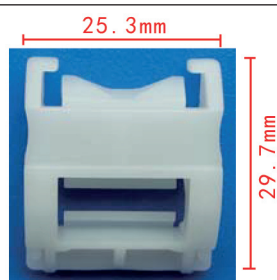


7377

 Gyári számok: 7703077256

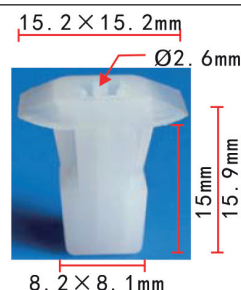


7444

 Gyári számok: 7703081147

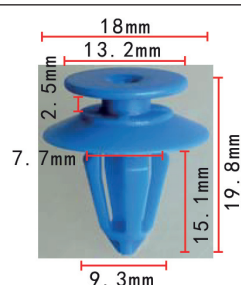


7447

 Gyári számok: 7701053516,
7701057715,7L5 853 994,
7L5853994

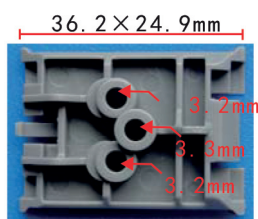


7452

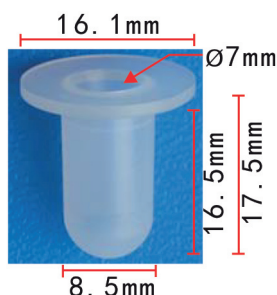 


7464

 Gyári számok: 0000698771,
109746420,51 44 7 780 135,
51447780135,698771,7701397195,
7703074022,82312646

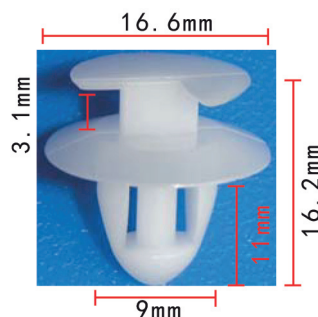

7475

 Gyári számok: 14188380,
7703077059

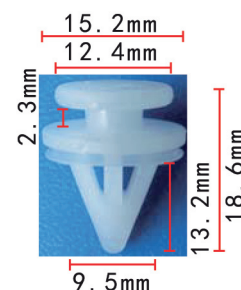


7540

Gyári számok: 11383,7703077250




7556

 Gyári számok: 7703077107

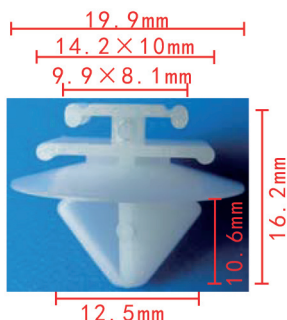

7601

 Gyári számok: 007 173 79 18,
0071737918,12409,71719954,
7701049270,8565.40,856540

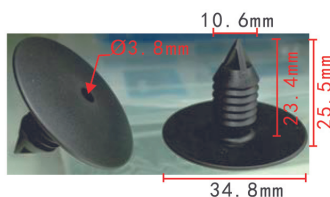


7608

Gyári számok: 50080216,700 580,
7518.N8,7518N8,7703077225,
A18000




7622

 Gyári számok: 01515-00Q0C,
01515-00QAB,0151500QAB,
054000001R,77 03 072 360,
77 03 081 217,7703072360,C10128

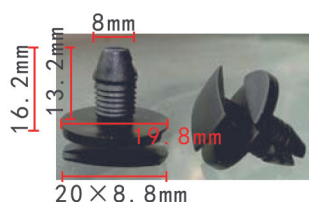


7624

 Gyári számok: 16 092 672 80,
16 227 495 80,1609267280,
1622749580,51834606,8565 53,
8565.53,856553,96 489 756 80,
9648975680,C60151

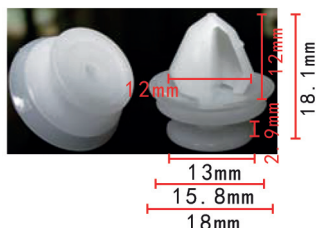


7626

 Gyári számok: 30648141,6991.S6,
6991S6,6991Z1,77 01 056 846,
8337FC,8E9 867 299,C10091

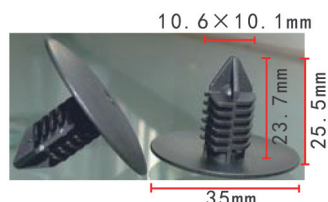


7630

 Gyári számok: 44 14 104,50129Z,
7703077435,91169652

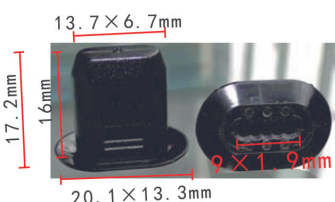


7643

 Gyári számok: 1608722380,
45 01 607,4501607,500389689,
6997.96,699796,7703081185,
9161907,9621824880,C60104

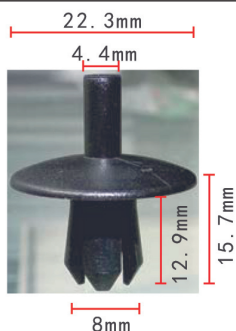


7646

 Gyári számok: 77 03 072 502,
7703072502,N90 229 301,
N90229301

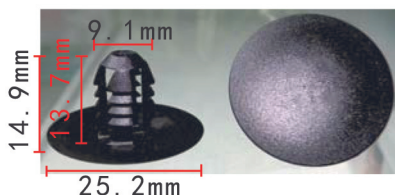


7648

 Gyári számok: 6 448 410,6 678 518,6448410,6678518,
678518,A15749,W700671-S300,W700671S300

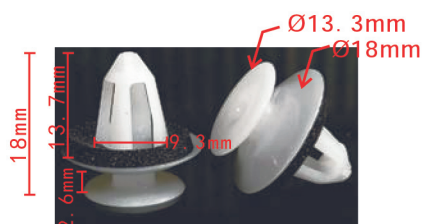

7687

 Gyári számok: 011 988 76 78,0119887678,1591426,
2E0 867 059,2E0867059,6030441,A 006 988 43 78,
A 011 988 76 78,A0069884378,A0119887678,A82027,
E865220-S,M283083,MU010571

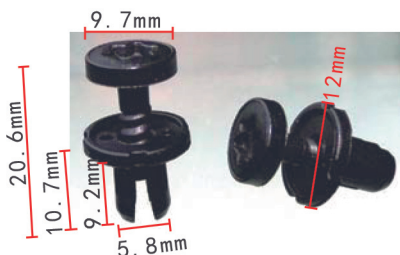

7689

Gyári számok: 6555.LE,6555LE,7703072236,
7L6 868 307,7L6868307,8Z0 857 784,
8Z0857784,A 000 991 66 40,
A0009916640,A60953



 
7694

Gyári számok: 1 404 926,1 719 242,1719242,
77 03 072 172,90 058 826,90 262 367,
90058826,A12710,N 0385012,N0385012



7703

Gyári számok: 7703077476,9345.ZN,
9345ZN,C60332

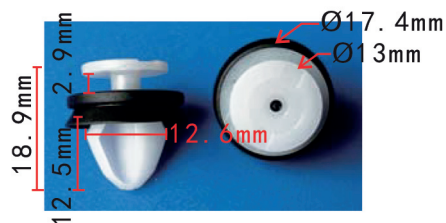


7705

Gyári számok: 1 76 073,13317099,16 121 083 80,1612108380,176073, 4 860 409,44 01 080,44 22 820,4401080,4860409,5 179 084,5179084, 6991.Y8,6991Y8,77 03 077 468,77 03 077 469,7703077469,9341.PF, 9341PF,93453019,95508747,96 542 807 80,9654280780,C40790, W713489-S300,W715789-S300




7730

 Gyári számok: 11361,6995.A3, 6995A3,7703077111

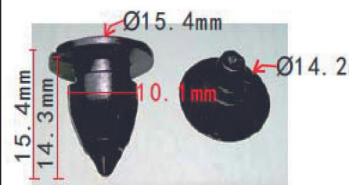


7731

 Gyári számok: 44 11 887,4411887, 7703077434,93160780,C60141

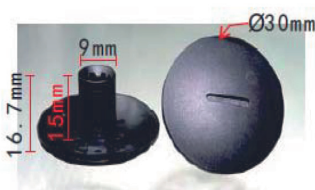


7732

 Gyári számok: 10556,6 142 789, 6142789,6995X9,77 03 081 054, 77 03 081 127,77 03 081 227, 77 03 081 237,7703081054, E864311S

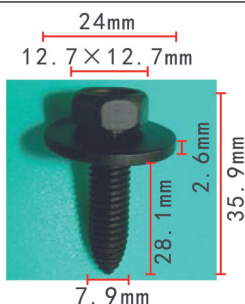


7764

 Gyári számok: C60617

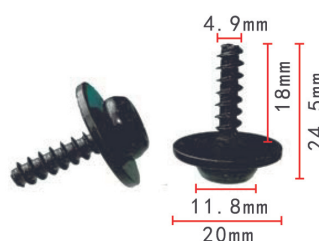


7765

 Gyári számok: 11093773,1388632, 1449533,2020106,C60460, N 103 546 02,N10354602, W700501-S303,W700501S303, W708591-S424,W708591S424

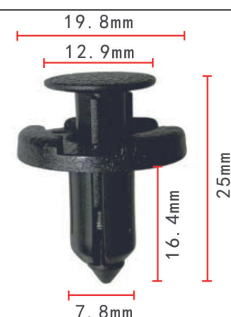


7785

 Gyári számok: 11296-AG000, 11296AG000

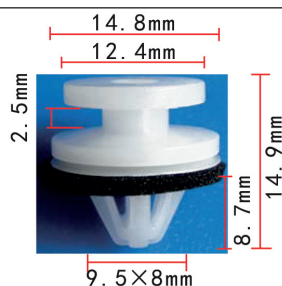


7804

 Gyári számok: 07130702516,44 14 720, 44 30 858,4414720,4430858, 5001855049,7701050734, 7703077368,82Z61-02005, 82Z6102005,93161475,93176656, DYC101420

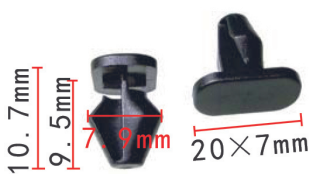


7808

 Gyári számok: 9025.J8,9025.W9, 9025J8,9025W9,C60595

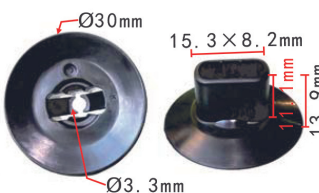


7811

 Gyári számok: 77 03 081 056, 7703081056,7703081237,C40881

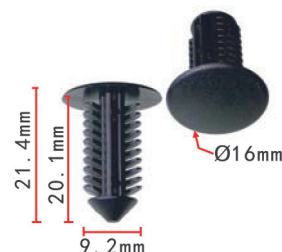

7813

 Gyári számok: 6389840061, 6389841661,7703077153, 7703077356,A 638 984 00 61, A 638 984 16 61,C10024, SS070069A

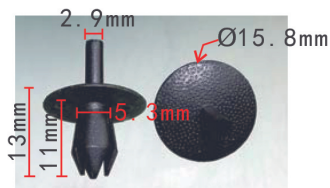


7823

Gyári számok: 0009905592, 1009164,23 17 703,2317703, 3923475,500355891,90116376, A 000 990 55 92,A0009905592, A13840,N 102 195 01,N 102 195 02, N10219501,N10219502, W703904-S300,W703904S300




7825

 Gyári számok: 6995.V6,6995V6,C40841

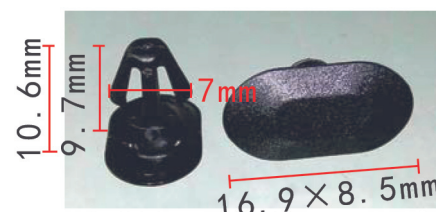

7832

 Gyári számok: 6990E0,6997.86,699786,7701044547, 96 197 690 80,9619769080,A82031,C10088

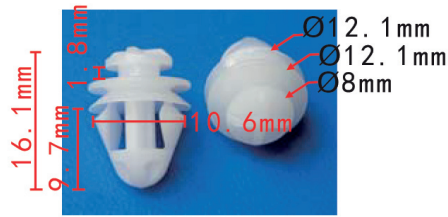


7849

Gyári számok: 7701061797,C60565




7853

 Gyári számok: 20530,638 984 02 61,6389840261,7703072144,
A 638 984 02 61,A6389840261

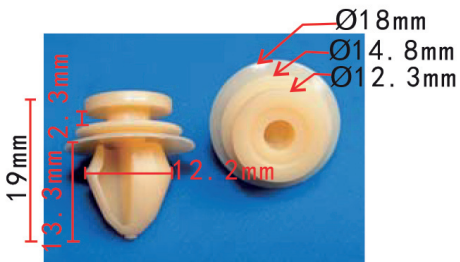

7863

 Gyári számok: 6001549265,6991.56,699156

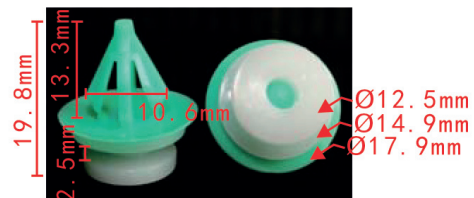

7878

Gyári számok: 1473596,7701049008,7703077354,8200702219,C30142,
W710404-S300,W710404S300



 
7886

Gyári számok: 01553-09311,
0155309311




7696

Gyári számok: C70178,DYC500110

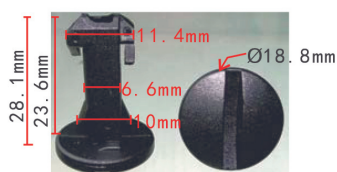


7697

 Gyári számok: LR012844

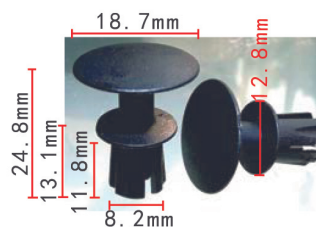

7698

 Gyári számok: C70179,DYQ500060,
RYQ500170

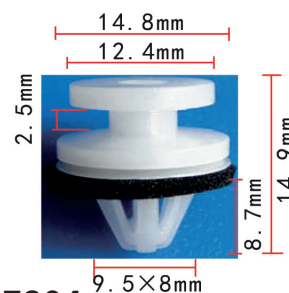


7804

Gyári számok: 07130702516,44 14 720,
44 30 858,4414720,4430858,
5001855049,7701050734,
7703077368,82Z61-02005,
82Z6102005,93161475,93176656,
DYC101420



7099

 Gyári számok: 10157900,11517803,15993201

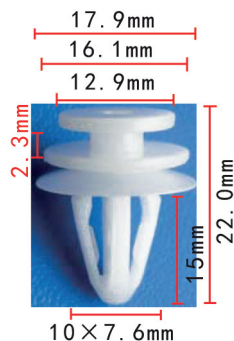


7518

Gyári számok: 11562585,11569810,330151056



7544

 Gyári számok: 13011,1719245,51751429, 90 138 810,90138810,94530507

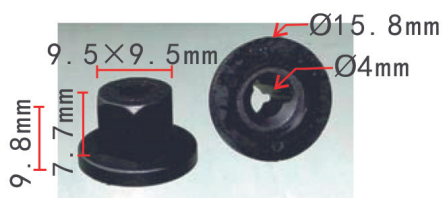


7701

Gyári számok: 1 80 942,1809.42,180942,8E0 825 265,8E0825265, 90413589,C70376



7709

 Gyári számok: 13252118,72 31 991,7231991,C60709

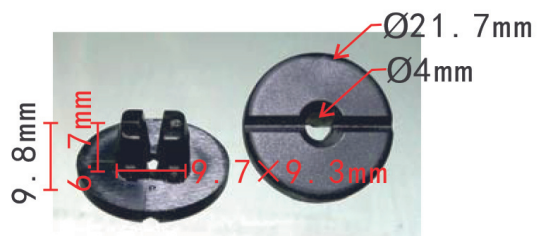


7831

Gyári számok: 12 74 977,1274977,57280Z,90506890



7295

 Gyári számok: 01553-01285, 07 13 0 702 966, 07130702966, 4803742, 57728AC060, 78875.08000, 7887508000, 91503-SP0-003, 91503SP0003, 91503SPO003, 94530623

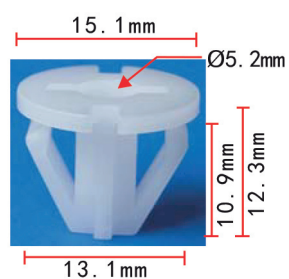

7471

Gyári számok: 79519-05800, K79519058001



7044

Gyári számok: 67771-30070, 67771-32080, 6777130070, 6777132080, 94078FC010, B22067, MB608410



7047

Gyári számok: 91550-SH3-003, 91550SH3003, B22072



7053

Gyári számok: 01553-05313, 0155305313, 09409-06314-5PK, 09409-06314-T01, 09409063145PK, 0940906314T01, 59122PA010, 66824-01G00, 6682401G00, 90116-SP0-003, 90116S7S003Z, 90116S7S003ZA, 90116SP0003, 90467-07071-22, 904670707122, 920390068, B22085, MR462748



7102

Gyári számok: 59130AA000, 90467-06017-B7, 90467-06017, 90467-07072-22, 90467-07072, 904670707222, 90657-SA6-003, 90657SA60030, 94198687, B14697, N304-13-356A, N30413356A



7126

Gyári számok: 09409-07325-5PK, 09409-07325, 0940907325, 09409073255PK, 30008324



 
7140

Gyári számok: 51216-24005, 5121624005, 51Z1624005, 76882-WA000, 76882WA000, 88970345, 90467-10167, 9046710167, 909130077




7195

Gyári számok: 01553-09241, 57728-AC-090, 57728AC090, 91503-SZ5-003, 91503S7S003, 91503SZ5003, 91509S47003

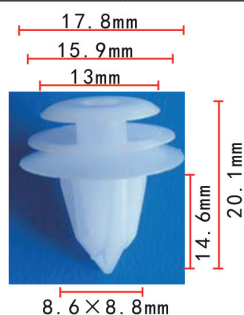


7211

 Gyári számok: 09409-10312, 3568481A10, 6777135010, 6822.LL, 7181278F00, 90467-10161, 9046708179, 9046709203, 9046710161, 909130076, 909130105, 909130115, 9156056A003, 94858299, GE4T68865A, MR402275, MR550000, MR550882, MU000504, MU480150, MU481245, MU488002

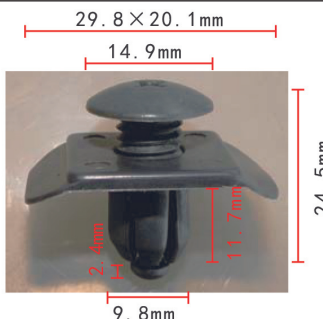


7212

 Gyári számok: 81910TA100, BF6750033, E7GZ-17A904-B, E7GZ17A904B, MR114963

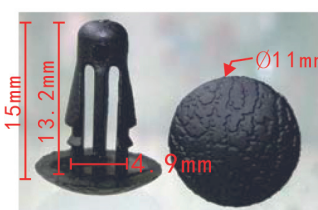

7253

 Gyári számok: 01553-00401, 0155300401, 90504-S7S-013, 90504S7S013, 909120025

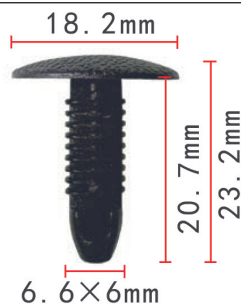


7280

Gyári számok: 09409-10302-5PK, 09409103025PK, 76996-01P02, 7699601P02, 85325-21000, 90467-06020-3, 90467-06020-5, 90467-06020-A2, 90467-06020-C0, 90467-07090-0, 90467060203, 90467060205, 9046706020A2, 9046706020C0, 90467070900, 90666-693-000ZC, 90667-SA0-0030, 90667-SA0-003B3, 90667-SA0-003B4, 90667SA00030, 90667SA00033, 91546-SM2-003ZJ, 95033FC030OE, M189333, M318810, M765662, M768471, M772940, M967678, MB189333, MB318810, MB768471



7292

 Gyári számok: 09409073085PK, 90467-07041, 90467-07041A0, 90467-07041C0, 90467-07041E8, 90467-07041E9, 9046707041, 96057846, MB476821

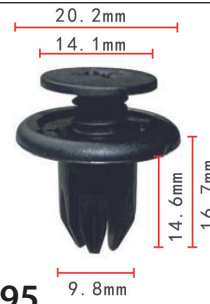

7295

Gyári számok: 01553-01285, 07130702966, 07130702966, 4803742, 57728AC060, 78875.08000, 7887508000, 91503-SP0-003, 91503SP0003, 91503SP0003, 94530623



 
7323

Gyári számok: 01553-01353,01553-01503,01553-01753,01553-01763,01553-02133,01553-03703,01553-04493,01553-06361,09409-08308-T01,0940908308T01,3533394,57718PA020,90467-08180,90467-08182-C0,90467-08182-C0,90467-08187,9046708180,9046708182C0,9046708182C0,9046708187,91505-SL0-003,91505-ST3-E01ZC,91505-ST3-E01ZC,91505-ST7-003ZA,91505-ST7-003ZD,91505-ST7-003ZJ,91505SL0003,91505ST3E01ZC,91505ST3EO1ZC,91505ST7003ZA,91505ST7003ZD,91505ST7003ZJ,M674791,M674792,M674793,MR167002,MR167003,MR167004,MR381913,MR381914,MR7204




7325

Gyári számok: 4327144,BC1D-56-145,BC1D56145,XM34-16K194-EA

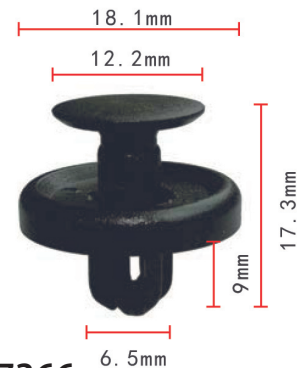

7366

 Gyári számok: 88970767,90467-07183,90467-10183,9046710183,909130043

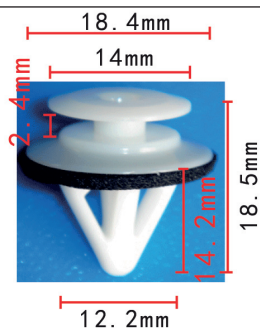

7484

Gyári számok: G18K-51-SJ3,G18K51SJ3,NE51-51-SJ3A,NE5151SJ3A



 
7502

Gyári számok: 01553-07111,0155307111,80999VE000,84953-AU100,84953AU100,94044TA040,94269AC010



7505

Gyári számok: 09409-08326,09409-08332,5482087,6777158010,71741886,90467-10201,909130018

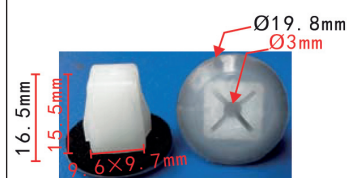

7671

Gyári számok: GJ6A-58-975,GJ6A58975



7794

Gyári számok: 05480772,09409-15302,0940915302,5480772,71741894,C30363



 
7795

Gyári számok: 0909140055,90914-0055,909140055




7797

Gyári számok: 09409-07333-000,0940907333,3541113,63848-01G00,63848-WA000,6384801G00,91059-FC010,91059FC010,91545-SE0-003,91545-SE0-003W

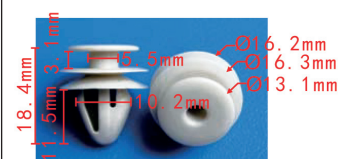

7806

 Gyári számok: 09409-08301,0940908301,7259A013,82315-2P000,82315-38000,823152P000,8231538000,85849-3B000,858493B000,909130034,91560-S9A-A01,91560S9AA01,A175049

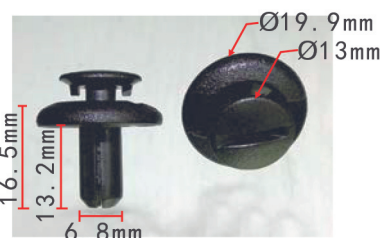

7862

Gyári számok: 90914-0063,909140063



7888

Gyári számok: 67867-12150,6786712150,90651-S4N-003,90651S4N003,909120023,909120028,MR380850,MU481283



7916

Gyári számok: 909140068,C70358



7034

Gyári számok: 0155305761,09409-07305-5PK,09409073185E5,0K201-50-033,20426301,90467-06017-01,90467-06017-B0,90467-06017-B1,90467-06017-C0,90467-06017,9046706017,90657SA5003,96050KA140,9926-50-625,992650625,B22044,MB345544



 
7052

Gyári számok: 91501-S04-003,91504-SF4-003,91512-SM4-003,91512-SX0-003,91512SX0003,B19239,MR220501,MU000319




7053

Gyári számok: 01553-05313,0155305313,09409-06314-5PK,09409-06314-T01,09409063145PK,0940906314T01,59122PA010,66824-01G00,6682401G00,90116-SP0-003,90116S7S003Z,90116S7S003ZA,90116SP0003,90467-07071-22,904670707122,920390068,B22085,MR462748

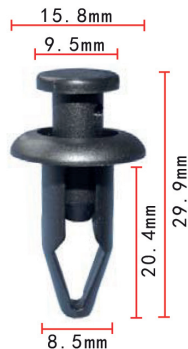


7071

 Gyári számok: 76882-57A00,7688257A00,B22121

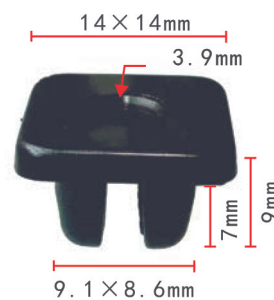

7074

 Gyári számok: 82Z16-08001,82Z1608001,90189-06018,9018906018,B22126

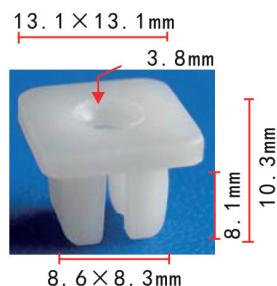


7075

Gyári számok: 75521-611-000,755216110000,90189-05013,90189-06010,9018906010,96706-P0105,96706P0105,999100601,B14274



7079

 Gyári számok: 09409-06319,0940906319,10998-30880,1099830880,5578552020,834752,834752,8942981190,90674-SA5-003,90684-SA5-003,90684SA50030,90746-SG2-N00,94298119,B14696,KK376-68865

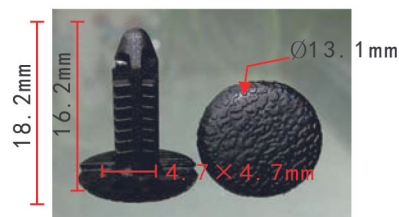

7089

Gyári számok: 90467-05004-11,90467-05004,90666-SA0-0030,90666SA00030,B22153,MR221721



7109

Gyári számok: 01553-00755,0155300755,09409-07321-5PK,09409-07321-T01,09409073215PK,80999-05N07,8099905N07,8099946N20,90467-07043-11,90467-07043-C0,90467-07043,9046707043,B21003,M683156,M683157,M683158,M683159,M683160,MR108759,MR108760,MR417323



 
7126

Gyári számok: 09409-07325-5PK,09409-07325,0940907325,09409073255PK,30008324




7130

Gyári számok: 90467-05045-22,90467-05045,904670504522

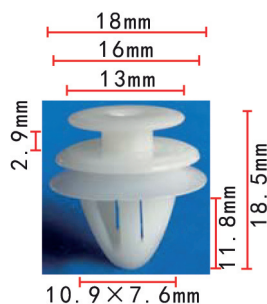

7146

 Gyári számok: 09409-08310,
0940908310,67771-89104,
6777189104,D20150797

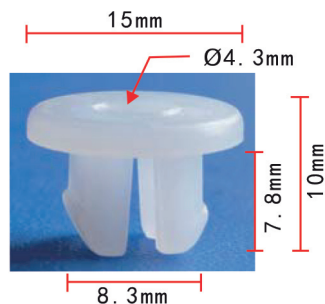

7172

Gyári számok: 380370,62698-V7000,
62698V7000,90668-SA5-003,
90668SA5003,MB690235,MS480003,
MS480005

 


7174



7193

Gyári számok: 01553-09611,
01553-10501,0155309611,
0155310501,6822.N3,6822N3,
90467-08185,9046708185

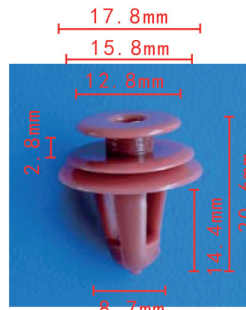


7203

Gyári számok: 30006620,
67771-12050,67771-28020,
6777112050,6777128020,
940908320000,940910311




7204

 Gyári számok: 09409-06322-5PK,
09409063225PK,90467-06133-3,
90467-06133-C0,90467061333,
9046706133CO,9046706133O

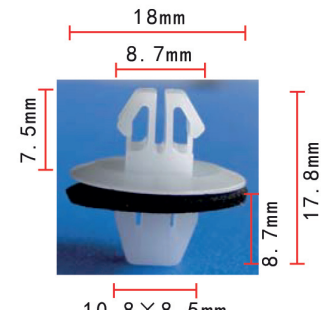

7205

 Gyári számok: 77553-65D10,
7755365D10,90467-11063,
9046711063

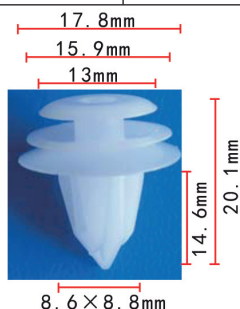


7211

Gyári számok: 09409-10312,3568481A10,6777135010,6822.LL,
7181278F00,90467-10161,9046708179,9046709203,9046710161,909130076,
909130105,909130115,91560S6A003,94858299,GE4T68865A,MR402275,
MR550000,MR550882,MU000504,MU480150,MU481245,MU488002



7246

 Gyári számok: 14093088,
N802781-S,N802781S,
W704340-S300,W704340S300

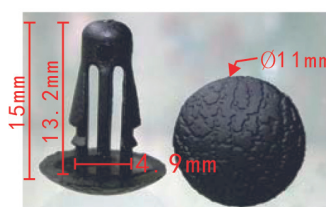

7253

Gyári számok: 01553-00401,
0155300401,90504-S7S-013,
90504S7S013,909120025



7268



7276

Gyári számok: 67771-02030,
67771-22040,67771-26010,
67771-43010,6777102030,
6777122040,6777126010,
6777143010



7280

Gyári számok: 09409-10302-5PK,09409103025PK,76996-01P02,7699601P02,
85325-21000,90467-06020-3,90467-06020-5,90467-06020-A2,90467-06020-C0,
90467-07090-0,90467060203,90467060205,9046706020A2,9046706020CO,
90467070900,90666-693-000ZC,90667-SAO-0030,90667-SAO-003B3,
90667-SAO-003B4,90667SA00030,90667SA00033,91546-SM2-003ZJ,
95033FC030OE,M189333,M318810,M765662,M768471,M772940,M967678,
MB189333,MB318810,MB768471



 
7292

Gyári számok: 09409073085PK, 90467-07041, 90467-07041A0, 90467-07041C0, 90467-07041E8, 90467-07041E9, 9046707041, 96057846, MB476821



7293

Gyári számok: 09409-08335, 1039463, 21030249, 4803228, 6503598, 770 104 92 71, 7701049271, 8E0 825 267, 8E0825267, N807389-S, N807389S

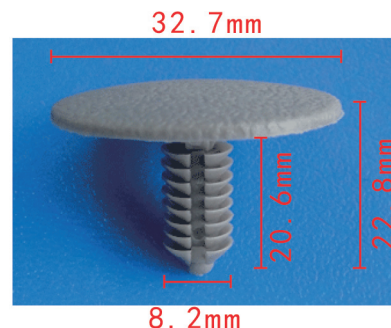


7297

Gyári számok: N805315



7323

 Gyári számok: 01553-01353, 01553-01503, 01553-01753, 01553-01763, 01553-02133, 01553-03703, 01553-04493, 01553-06361, 09409-08308-T01, 0940908308T01, 3533394, 57718PA020, 90467-08180, 90467-08182-C0, 90467-08182-CO, 90467-08187, 9046708180, 9046708182C0, 9046708182CO, 9046708187, 91505-SL0-003, 91505-ST3-E01ZC, 91505-ST3-E01ZC, 91505-ST7-003ZA, 91505-ST7-003ZD, 91505-ST7-003ZJ, 91505SL0003, 91505ST3E01ZC, 91505ST3E01ZC, 91505ST7003ZA, 91505ST7003ZD, 91505ST7003ZJ, M674791, M674792, M674793, MR167002, MR167003, MR167004, MR381913, MR381914, MR7204

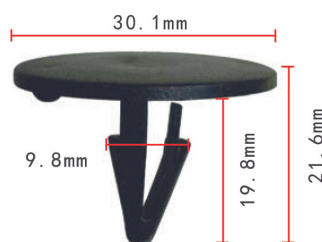

7332

Gyári számok: 386553-S, 386553S



7338

Gyári számok: 09409-08327-000, MR200300



 
7370

Gyári számok: 11 62 005, 11 62 488, 11 62 495, 11 62 742, 1162488, 1162742, 13238288, 13265959, 13336240, 72451-83E00, 90355604




7505

Gyári számok: 09409-08326, 09409-08332, 5482087, 6777158010, 71741886, 90467-10201, 909130018

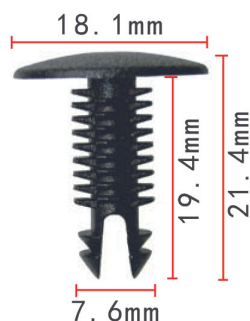


7534

 Gyári számok: 00006992C6, 10147, 5757139, 60586984, 6992C6

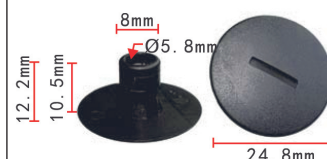

7563

 Gyári számok: 09148-05042-000, 09148-05042, 0914805042

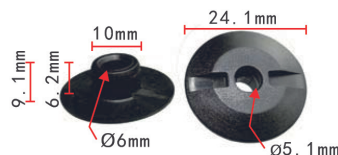

7564

Gyári számok: 09148-05037-000, 09148-05037, 0914805037



 
7571

Gyári számok: 09409-07332-000, 09409-07332, 71 741 883, 71 768 111, 71741883, 73155SS0004, 9046707164, 959AK07332, B23143, MR220501




7597

Gyári számok: 09409-08322, 0940908322

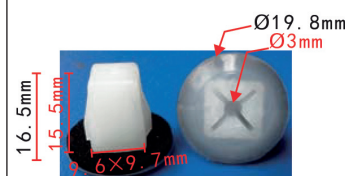


7671

 Gyári számok: GJ6A-58-975, GJ6A58975

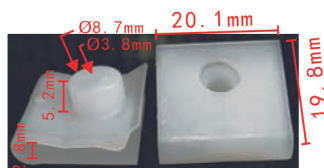


7677

 Gyári számok: 76882-0M000,
768820M000

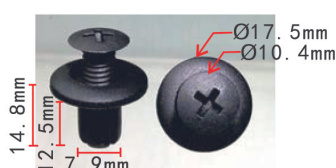

7708

 Gyári számok: 0G0325007A,
86590-28000,8659028000,
B09251833,MB-455-56143,
MB45556143

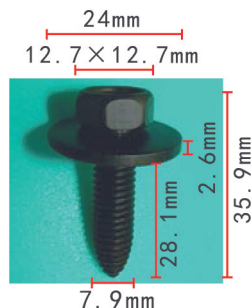


7764

Gyári számok: C60617



7794

 Gyári számok: 05480772,
09409-15302,0940915302,5480772,
71741894,C30363

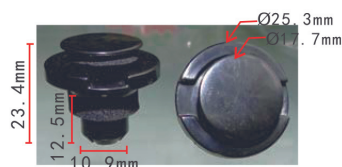

7795

Gyári számok: 0909140055,
90914-0055,909140055



 
7797

Gyári számok: 09409-07333-000,
0940907333,3541113,63848-01G00,
63848-WA000,6384801G00,
91059-FC010,91059FC010,
91545-SE0-003,91545-SE0-003W




7805

Gyári számok: 14 06 925,1406925,
9130754,C10008

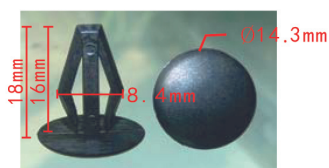

7004

 Gyári számok: 01553-02253, 0155302253, 76906-T3000, 76906T3000, 90467-090-6901, 90467-09069, 9046709069, B22006

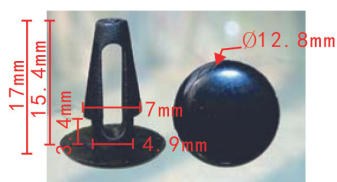


7007

Gyári számok: 01553-00172, 0155300172, 90467-07050, 9046707050, 90672-671-003, B14737, MB115492




7008

 Gyári számok: 90467-09006, 9046709006, B22010

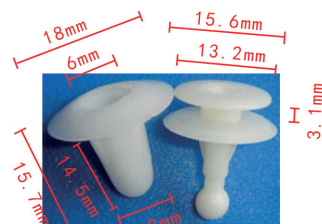


7011

 Gyári számok: 0155300603, 0155306841, 6295520030, 67771-01010, 67771-12010, 6777101010, 6777112010, 74998WE900, 8942264920, 9046710134, 9927-40-825, 992740825, 9928-40825, B14269

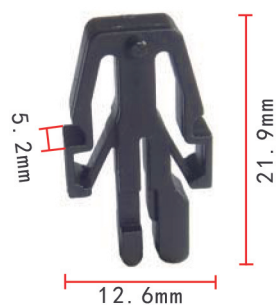


7012

 Gyári számok: 90467-13005, 9046713005

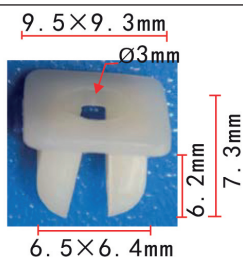

7019

 Gyári számok: 75521-611-000, 755226110000, 90189-05013, 90189-06010, 9018905013, 9018906010, 96706-B0700, 96706-P0105, 96706B0700, 96706P0105, 9991-00-412, 9991-00-601, 999100412, B14274

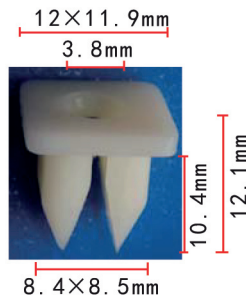


7020

Gyári számok: 90189-05013, 90189-05037, 9018905013, 9018905037, B13932, MS480002




7023

 Gyári számok: 6822QP, 90189-06013, 90189-06047, 90189-06065, 9018906013, 9018906047, B21002, B455-56-145, B45556145, MR971765

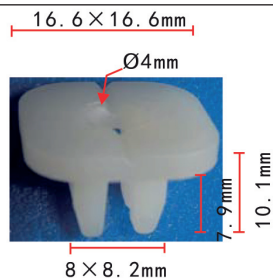


7024

 Gyári számok: 68425-H5000, 68425H5000, 90189-040118, 90189040118, 90662-671-003, 90662-671-0030, 90662671003, 906626710030, 9991-00-503, 999100503, B14313

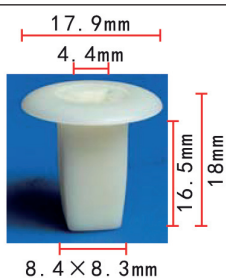

7025

 Gyári számok: 01281-00023, 01281-00231, 0128100023, 0165100481, 90189-06001, 9018906001, 96706-P7900, 96706-U0100, B14275, M088341, M098145, MB098145, MS480013

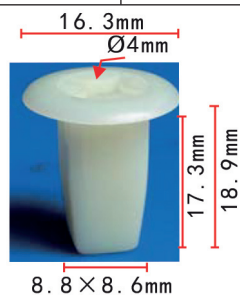

7026

Gyári számok: 01281-00023, 01281-00231, 01551-00481, 01651-00481, 0165100481, 74798-S9000, 74798S9000, 90189-06001, 90189-06042, 9018906042, 90661-SC7-003, 90661SC70030, 96706-P7900, 96706-U0100, B14695, H00150841, MS-480012, MS480012, MU480012



7034

Gyári számok: 0155305761, 09409-07305-5PK, 09409073185ES, 0K201-50-033, 20426301, 90467-06017-01, 90467-06017-B0, 90467-06017-B1, 90467-06017-C0, 90467-06017, 9046706017, 90657SA5003, 96050KA140, 9926-50-625, 992650625, B22044, MB345544



 
7035

Gyári számok: 63876-95596, 6387695596, 90467-08145, 9046708145, 90675-SB3-003, 90675S3003, 90675SB3003, B22045, F0156964, FB01-56-964, FB0156964, GB01-56-964, GB0156964




7038

Gyári számok: 53879-22010, 5387922010, B22048

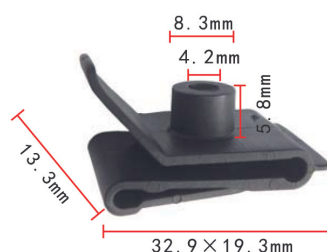

7039

 Gyári számok: 53879-14010-A, 53879-14010, 53879-14020, 53879-17020, 5387914010A, 5387914020, 5387922030, 88970766, 90467-05138, 94841226, B22049, LA01-56-135, LA0156135

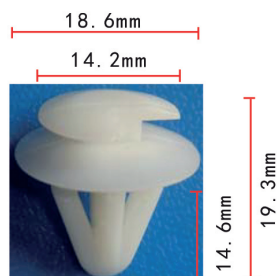

7043

Gyári számok: 52581-14020, 6258114020, 9927-40-822, 992740822, B22061



 
7044

Gyári számok: 67771-30070, 67771-32080, 6777130070, 6777132080, 94078FC010, B22067, MB608410



7047

Gyári számok: 91550-SH3-003, 91550SH3003, B22072

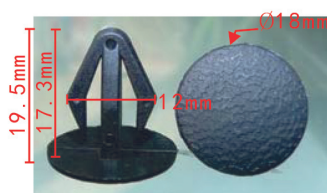

7049

Gyári számok: 01553-00051, 0155300051, 8133-50-022, 813350022, 90467-10091, 9046710091, B22077



7050

Gyári számok: 90467-08155, 9046708155, 90505-SL0-003, 90505SL0003, 94852368, B22081, M888869, MB888869



 
7053

Gyári számok: 01553-05313, 0155305313, 09409-06314-5PK, 09409-06314-T01, 09409063145PK, 0940906314T01, 59122PA010, 66824-01G00, 6682401G00, 90116-SP0-003, 90116S7S003Z, 90116S7S003ZA, 90116SP0003, 90467-07071-22, 904670707122, 920390068, B22085, MR462748



7055

Gyári számok: 01553-01203, 01553-03573, 0155301203, 0155303573, 90409-06319, 9040906319, 90467-06153, 9046706153, 90683-SA5-003, 90683SA5003, B22091

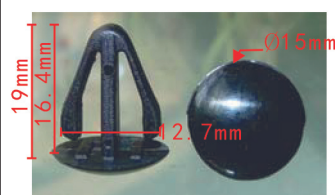


7056

Gyári számok: 0016830200, 90950-01248, 9095001248, B001-68-302, B22094



7057

 Gyári számok: 90467-07117, 9046707117, B22097

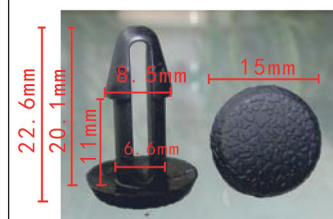


7058

Gyári számok: 90467-09065, 9046709065, 90670-692-0030, 906706920030, B22098



7067

 Gyári számok: 52531-35010-C0, 52531-35010, 5253135010C0, 5253135010C0, 5253135010O, 90467-09101, 9046709101, 9046709181A1, B22110, MR772182

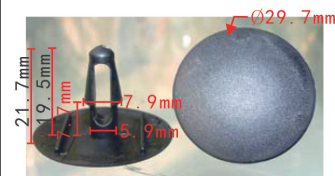


7069

Gyári számok: 90467-09008-01, 90467-09008, 9046709008, B22119




7071

 Gyári számok: 76882-57A00, 7688257A00, B22121

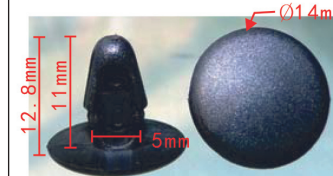


7073

 Gyári számok: 90467-06161-01, 90467-06161, 904670616101, 992640426, B22124

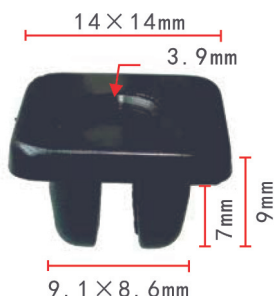


7074

 Gyári számok: 82Z16-08001, 82Z1608001, 90189-06018, 9018906018, B22126

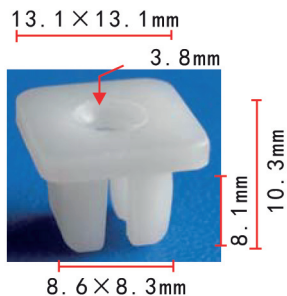

7075

 Gyári számok: 75521-611-000, 755216110000, 90189-05013, 90189-06010, 9018906010, 96706-P0105, 96706P0105, 999100601, B14274

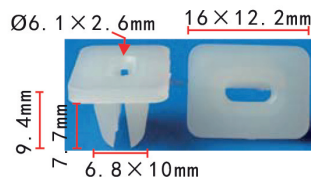

7078

Gyári számok: 8941340270, 90189-05012, 9018905012



 
7079

Gyári számok: 09409-06319, 0940906319, 10998-30880, 1099830880, 5578552020, 8 34 752, 834752, 8942981190, 90674-SA5-003, 90684-SA5-003, 90684SA50030, 90746-SG2-N00, 94298119, B14696, KK376-68865




7085

Gyári számok: 90467-09145-C0, 90467-09145, 9046709145, 9046709145C0, B22145

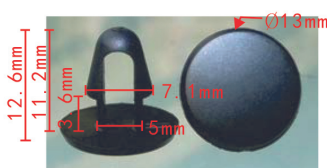


7086

 Gyári számok: 90467-08004, 90467-08011, 9046708004, 9046708011, 94842841, 94849113, B22146

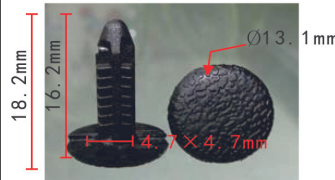

7089

 Gyári számok: 90467-05004-11, 90467-05004, 90666-SA0-0030, 90666SA00030, B22153, MR221721

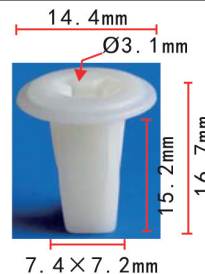

7091

Gyári számok: 90189-04013, 9018904013, 90663-SB0-003, 90672-671-811, 90672671811, 906726718110M1, 90674-SB0-000, 90674S0000, 97519-22000, 9751922000, B14268



7097

Gyári számok: 67771-01010, 6777101010, 8942264920, 95005064, 9928-40825, B22165



7102

Gyári számok: 59130AA000, 90467-06017-B7, 90467-06017, 90467-07072-22, 90467-07072, 904670707222, 90657-SA6-003, 90657SA60030, 94198687, B14697, N304-13-356A, N30413356A



 
7108

Gyári számok: 89427-98070, 8942798070, 9046705021C0, 90667-SA7-003, 90667-SA7-003ZB, 90667SA70030, 90667SA7003F7, 90667SA7003YG, 90667SA7003YN, 90667SA7003YW, 90667SA7003Z, 90667SA7003ZT, B16775



7109

Gyári számok: 01553-00755, 0155300755, 09409-07321-5PK, 09409-07321-T01, 09409073215PK, 80999-05N07, 8099905N07, 8099946N20, 90467-07043-11, 90467-07043-C0, 90467-07043, 9046707043, B21003, M683156, M683157, M683158, M683159, M683160, MR108759, MR108760, MR417323

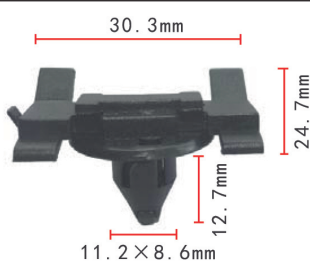

7110

Gyári számok: 75049-33010, 7504933010



7113

Gyári számok: 26399-40U00, 2639940U00, 90467-11126, 90467-12042, 9046711126, 9046712042, N807994-S, N807994S



7122

Gyári számok: 22718305, 6501067, 90467-08104, N802734-S, N802734S



7128

Gyári számok: 90467-10107, 9046710107



7129

Gyári számok: 90467-07096, 9046707096



 
7130

Gyári számok: 90467-05045-22, 90467-05045, 904670504522



7132

Gyári számok: 90189-06013, 90189-06065, 90189-T0014, 9018906065, 90189T0014

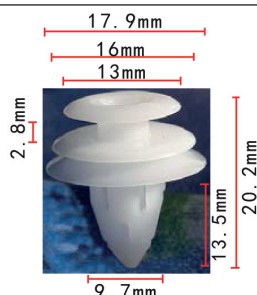

7138

Gyári számok: 67771-06010, 67771-32090, 67771-33040, 6777106010, 6777132090, 6777133040, 90467-10168, 9046710168, MR250049



7140

Gyári számok: 51216-24005, 5121624005, 51Z1624005, 76882-WA000, 76882WA000, 88970345, 90467-10167, 9046710167, 909130077



 
7144

Gyári számok: 90189-06003, 9018906003



7145

Gyári számok: 90189-04008, 9018904008, 90467-12096, 9046712096, M083120, MB083120

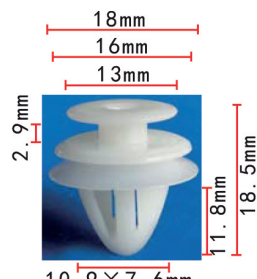


7146

Gyári számok: 09409-08310, 0940908310, 67771-89104, 6777189104, D20150797




7149

 Gyári számok: 90467-07121-B2, 90467-07121-B8, 90467-07121-C0, 90467-07121, 90467071212, 90467071218, 9046707121C0, 9046707121CO

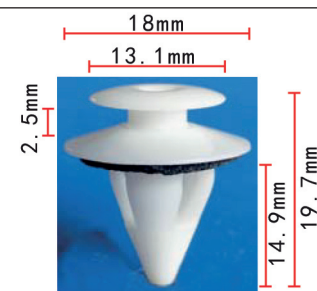

7151

 Gyári számok: 67771-12070, 6777112070

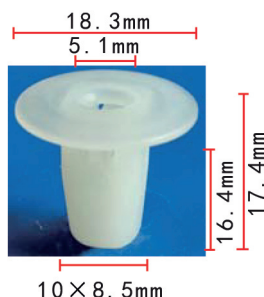

7156

Gyári számok: 90189-06104, 9018906104



7174



7175

Gyári számok: 90468-04030, 9046804030, 9468-04030, 946804030



7184

Gyári számok: 53879-60010,
5387960010



 
7190

Gyári számok: 90189-06212,
90189-06214,9018906214




7193

Gyári számok: 01553-09611,
01553-10501,0155309611,
0155310501,6822.N3,6822N3,
90467-08185,9046708185

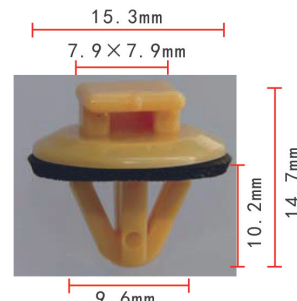


7196

 Gyári számok: 62955-12010,
62955-20020,6295512010,
6295520020,90467-10077,
9046710077,94848834,94850809

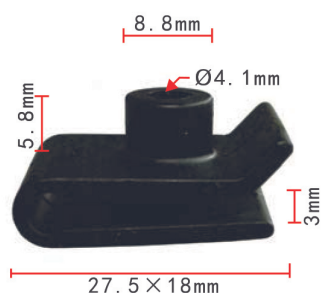

7201

 Gyári számok: 90179-05060,
9017905060

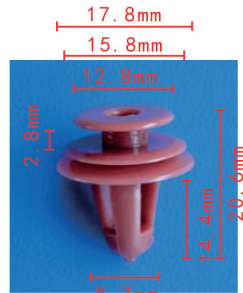


7203

Gyári számok: 30006620,
67771-12050,67771-28020,
6777112050,6777128020,
940908320000,940910311




7204

 Gyári számok: 09409-06322-5PK,
09409063225PK,90467-06133-3,
90467-06133-C0,90467061333,
9046706133CO,9046706133O

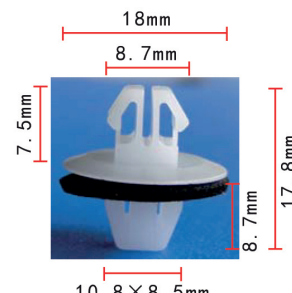

7205

 Gyári számok: 77553-65D10,
7755365D10,90467-11063,
9046711063

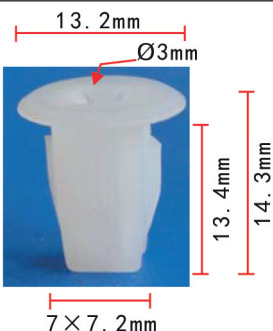


7207

Gyári számok: 90189-05082,
9018905082



7210

 Gyári számok: 90467-07146,
9046707146

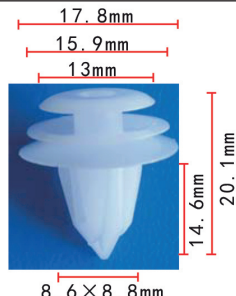


7211

Gyári számok: 09409-10312,3568481A10,6777135010,
6822.LL,7181278F00,90467-10161,9046708179,
9046709203,9046710161,909130076,909130105,
909130115,9156056A003,94858299,GE4T68865A,
MR402275,MR550000,MR550882,MU000504,MU480150,
MU481245,MU488002



7214

 Gyári számok: 90467-07030-01,
904670703001,M253964,
MB253964

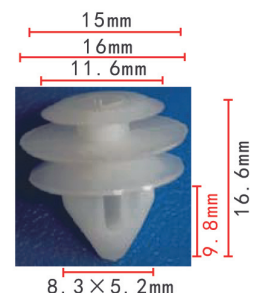

7268



 
7276

Gyári számok: 67771-02030,
67771-22040,67771-26010,
67771-43010,6777102030,
6777122040,6777126010,
6777143010

7280

Gyári számok: 09409-10302-5PK,09409103025PK,
76996-01P02,7699601P02,85325-21000,
90467-06020-3,90467-06020-5,
90467-06020-A2,90467-06020-C0,
90467-07090-0,90467060203,90467060205,
9046706020A2,9046706020CO,
90467070900,90666-693-000ZC,
90667-SA0-0030,90667-SA0-003B3,
90667-SA0-003B4,90667SA00030,
90667SA00033,91546-SM2-003ZJ,
95033FC030OE,M189333,M318810,
M765662,M768471,M772940,M967678,
MB189333,MB318810,MB768471



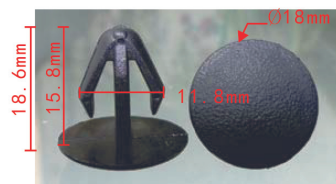

7281

Gyári számok: 74842-659-0030, 748426590030, 90467-12078, 9046712078



7288

Gyári számok: 1160854, 89414-55150, 8941455150, 90467-06061-1, 90467060611, 90665-S2-003ZF, 90665-S2-003ZQ, 90665-S2-003ZR, 90665-S2-003ZU, 90665-S2-003ZY, 90665S2003ZF, 90665S2003ZQ, 90665S2003ZR, 90665S2003ZU, 90665S2003ZY, 94145515, M772941



 
7292

Gyári számok: 09409073085PK, 90467-07041, 90467-07041A0, 90467-07041C0, 90467-07041E8, 90467-07041E9, 9046707041, 96057846, MB476821



7293

Gyári számok: 09409-08335, 1039463, 21030249, 4803228, 6503598, 770 104 92 71, 7701049271, 8E0 825 267, 8E0825267, N807389-S, N807389S

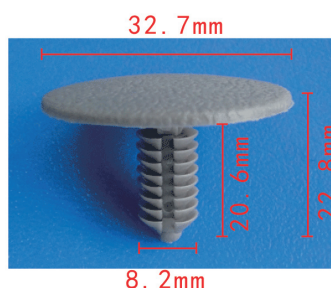

7297

Gyári számok: N805315



7305

Gyári számok: 90467-09143, 9046709143



 
7315

Gyári számok: 90467-08081, 9046708081



7319

Gyári számok: 90467-07059-22, 90467-07059, 904670705922

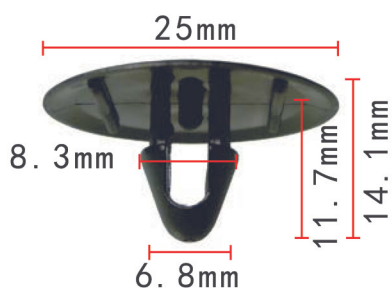

7320

Gyári számok: 90467-08124, 9046708124



 
7321

Gyári számok: 90189-06028, 9018906028, 94854203




7323

Gyári számok: 01553-01353, 01553-01503, 01553-01753, 01553-01763, 01553-02133, 01553-03703, 01553-04493, 01553-06361, 09409-08308-T01, 0940908308T01, 3533394, 57718PA020, 90467-08180, 90467-08182-C0, 90467-08182-CQ, 90467-08187, 9046708180, 9046708182C0, 9046708182CQ, 9046708187, 91505-SL0-003, 91505-ST3-E01ZC, 91505-ST3-E01ZC, 91505-ST7-003ZA, 91505-ST7-003ZD, 91505-ST7-003ZJ, 91505SL0003, 91505ST3E01ZC, 91505ST3E01ZC, 91505ST7003ZA, 91505ST7003ZD, 91505ST7003ZJ, M674791, M674792, M674793, MR167002, MR167003, MR167004, MR381913, MR381914, MR7204

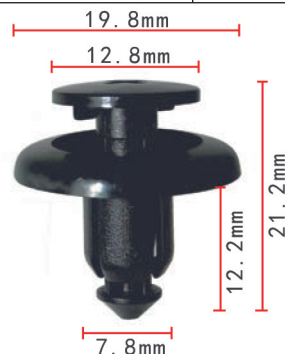

7325

 Gyári számok: 4327144, BC1D-56-145, BC1D56145, XM34-16K194-EA

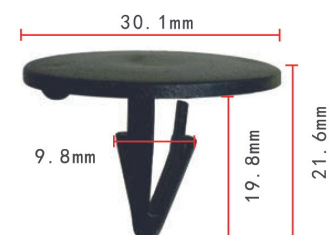

7332

Gyári számok: 386553-S, 386553S



 
7336

Gyári számok: 75867-30110,
75867-50030, 7586730110,
7586750030




7338

Gyári számok: 09409-08327-000,
MR200300

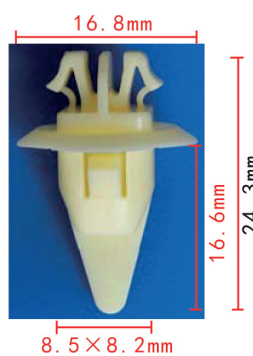


7348

 Gyári számok: 90467-11100,
9046711100

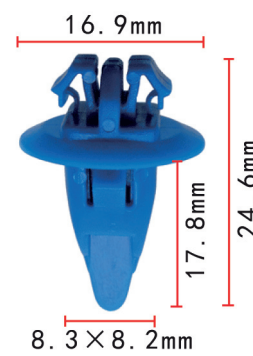

7349

 Gyári számok: 90904-67036,
9090467036

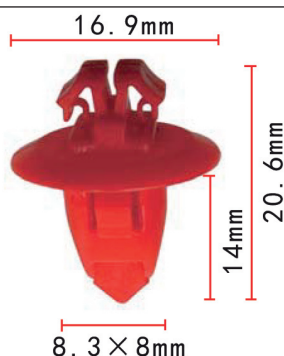

7350

Gyári számok: 90904-67037,
9090467037



7351

Gyári számok: 90467-09166,
9046709166



 
7352

Gyári számok: 75392-600030,
75392-60031, 75392600030,
7539260031



7358

Gyári számok: 90467-06150-C0,
90467-06150, 9046706150

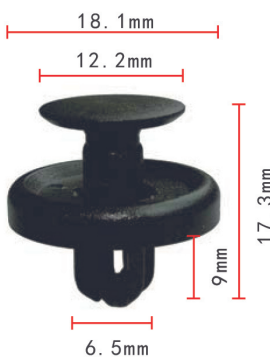


7366

Gyári számok: 88970767,
90467-07183, 90467-10183,
9046710183, 909130043



7454

 Gyári számok: 75493-60020,
7549360020

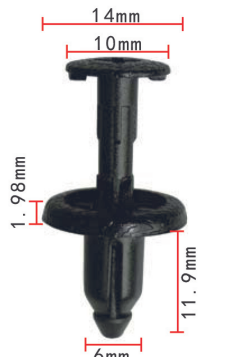

7476

Gyári számok: 90467-06168,
9046706168



7477

Gyári számok: 90467-09185,
9046709185



 
7478

Gyári számok: 90467-07201,
9046707201



7479

Gyári számok: 76924-26050,
7693426050, 96724-26050,
9672426050

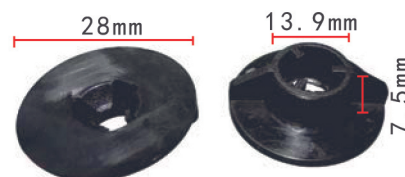


7480




7481

 Gyári számok: 90480-01537,
9048001537

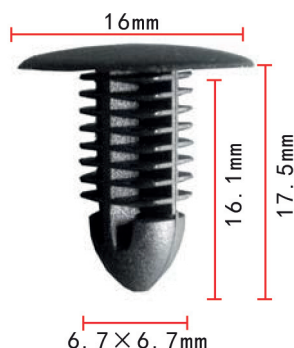

7482

 Gyári számok: 90467-07198-C0,
90467-07198,9046707198C0,
9046707198C0

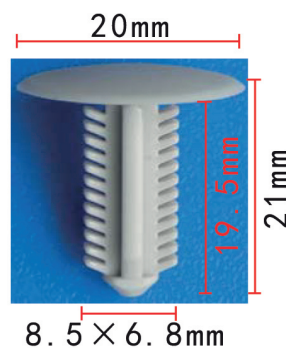

7483

Gyári számok: 63399-26050-B0,
63399-26050,6339926050,
6339926050B0

 


7485

Gyári számok: 61Z16-20086,
61Z1620086,90950-01620,
9095001620



7498

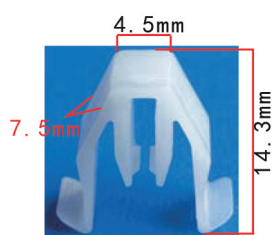


7505

Gyári számok: 09409-08326,
09409-08332,5482087,
6777158010,71741886,
90467-10201,909130018



7510

 Gyári számok: 90467-06177,
9046706177

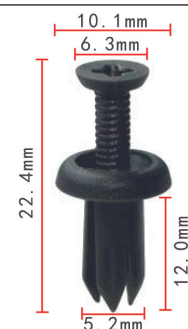


7516

Gyári számok: 90467-05090-B1,
904670-5090,9046705090,
9046705090B1




7560

 Gyári számok: 88970494,
88973676,90467-07168,
9046707168

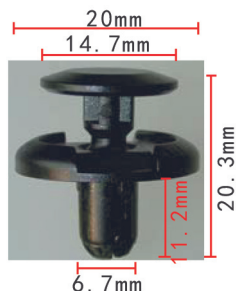

7571

 Gyári számok: 09409-07332-000,
09409-07332,71 741 883,71 768 111,
71741883,731555S0004,
9046707164,9S9AK07332,B23143,
MR220501

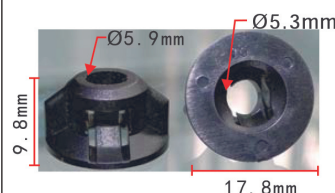


7651

Gyári számok: 90467-06169,
9046706169,90476-N0301,
90476N0301




7658

 Gyári számok: 4D0 807 300,
4D0807300,A81365

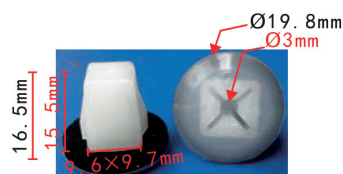


7671

 Gyári számok: GJ6A-58-975,
GJ6A58975

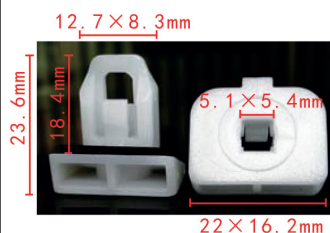

7673

 Gyári számok: 52197-30040,
5219730040

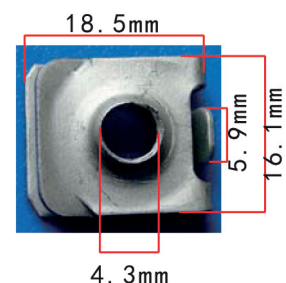


7735

Gyári számok: 90179-06127,
9017906127



7739

 Gyári számok: 90159-60477,
9015960477,C70320

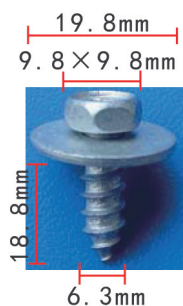

7740

Gyári számok: 90159-60383,
9015960383,C60610,N90542603

 


7741

Gyári számok: 90159-60498,
9015960498,C70197



7742

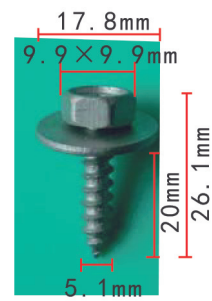


7743

Gyári számok: 90159-60496,
9015960496,C60611




 7744

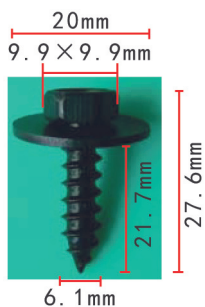


7745

 Gyári számok: 90159-60525,
9015960525,C70365

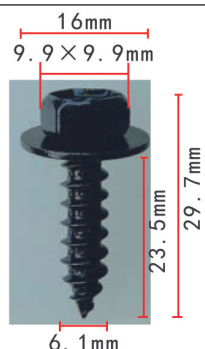

7748

 Gyári számok: 90159-60488,
9015960488,C60614

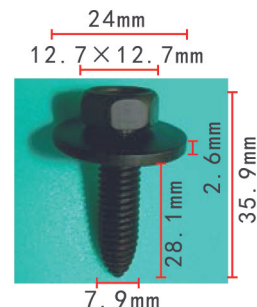

7764

Gyári számok: C60617



7775

Gyári számok: B21001,N806289-S,
N806289S



 
7783

Gyári számok: 6822.NK,6822NK,
90467-07166,90467-07201,
9046707166,9046707201,B22090,
MU000262



7784

Gyári számok: 90467-07201,
9046707201

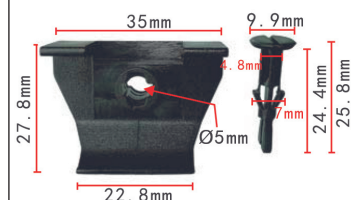

7786

Gyári számok: 53879-0R010,
53879-58010,538790R010,
5387958010



7787



7788

Gyári számok: 90467-07214,
9046707214



7789

Gyári számok: 53259-20030,
5325920030,C60549



7790

Gyári számok: 75867-06030,
7586706030

 


7791



7792

Gyári számok: 90189-05055,
9018905055,90664-S3-003,
90664S3003

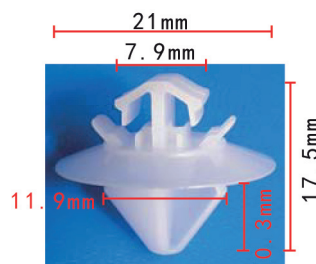

7796

Gyári számok: 71728805,856548,
856560,C40338



7837

Gyári számok: 81496-0E020,
81496-52020,814960E020,
8149652020



 
7838

Gyári számok: 76923-52021,
7692352021




7839

Gyári számok: 65487-60010,
6548760010

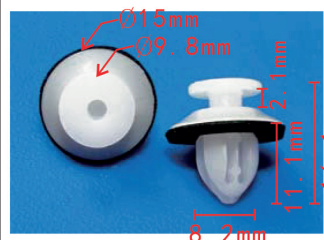


7840

 Gyári számok: 90467-A0032,
90467A0032

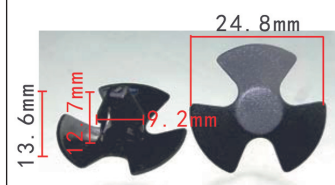


7841

 Gyári számok: 53326-08010,
5332608010

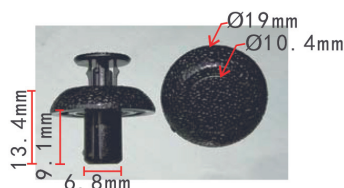


7843

 Gyári számok: 90467-07217,
9046707217,C70361

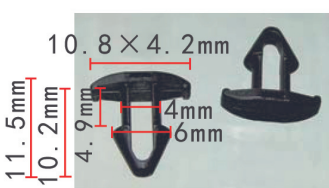

7844

 Gyári számok: 53145-60030,
5314560030,C70362

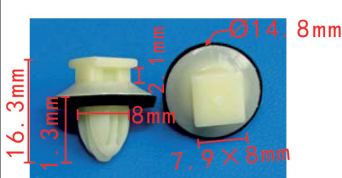

7860

Gyári számok: 62955-50010,
6295550010



7861

Gyári számok: 90118WB048,
B45A-56-146A



 
7872

Gyári számok: 51454-0E010,
51454-48010,51454-0E010,
5145448010,C60607



7888

Gyári számok: 67867-12150,
6786712150,90651-S4N-003,
90651S4N003,909120023,
909120028,MR380850,MU481283

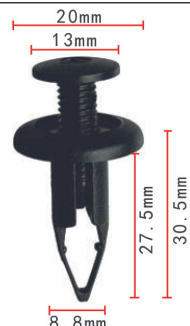


7890

Gyári számok: 90467-09127,
90467-09189,9046709127,
9046709189



7914

 Gyári számok: 52161-20010,
5216120010

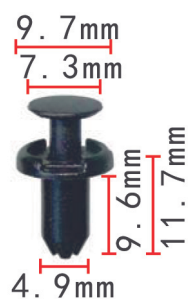


7915

Gyári számok: 90467-05170,
9046705170



7918

 Gyári számok: 52161-02020,
52161-02030, 52161-0K040,
52161-16010, 5216102030,
5216116010

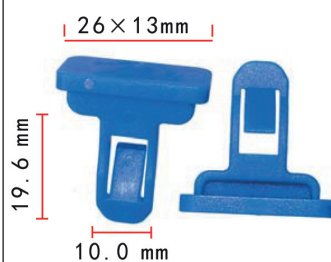

7921

Gyári számok: 75392-04010,
75392-35200, 7539204010,
7539235200



7925

Gyári számok: 76923-47010,
7692347010, C70360



7005

Gyári számok: N804448



7027

Gyári számok: 25601491



7028

Gyári számok: 385661-S,
385661S,6003349,6032363,
B22037,N989022



7030

Gyári számok: 14103461



7031

Gyári számok: 14019205,14019206,
34201621



7032

Gyári számok: 14074081



7033

Gyári számok: 20590899



7040

Gyári számok: 4042711,9927-70-901,
99277-0901,992770901



7041

Gyári számok: 3816659,8917320



7046

Gyári számok: 21095797



7047

Gyári számok: 91550-SH3-003,
91550SH3003,B22072



7048

Gyári számok: 01281-00501,
0128100501,999100402



7052

Gyári számok: 91501-S04-003,
91504-SF4-003,91512-SM4-003,
91512-SX0-003,91512SX0003,
B19239,MR220501,MU000319



7054

Gyári számok: 01553-09321,
0155309321,B22088,
MR 328954,MR328954



7061

Gyári számok: 20511451



7062

Gyári számok: W701380-SSW,
W701380SSW



7063

Gyári számok: 7642589,B22105



7064

Gyári számok: 379830-S,379830S



7070



 
7071

Gyári számok: 76882-57A00,
7688257A00,B22121



7072

Gyári számok: 01553-0034U,
015530034U,91516-SK7-013,
91516SK7013,B22123

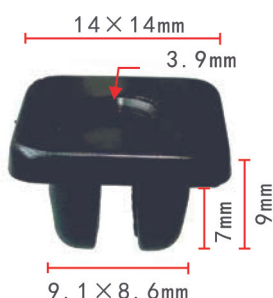


7074

Gyári számok: 82Z16-08001,
82Z1608001,90189-06018,
9018906018,B22126



7079

 Gyári számok: 09409-06319,
0940906319,10998-30880,1099830880,
5578552020,8 34 752,834752,
8942981190,90674-SA5-003,90684-SA5-003,
90684SA50030,90746-SG2-N00,
94298119,B14696,KK376-68865

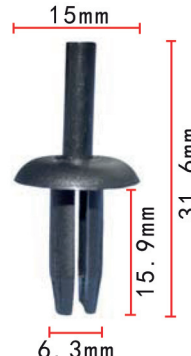

7084

Gyári számok: 387843-S,387843S



 
7087

Gyári számok: 14027471



7093

Gyári számok: 22535007

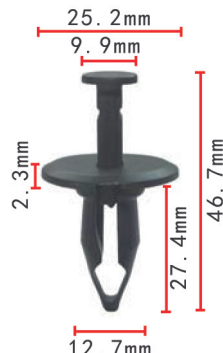

7094

Gyári számok: 10053388,
22542705



 
7095

Gyári számok: N804583-S,
N804583S



7098

Gyári számok: 15545202,15607165,
15612948,15953247

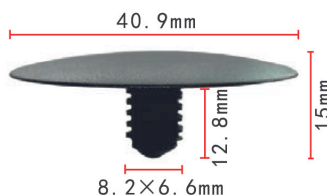

7101

Gyári számok: 21039141,B22174



 
7102

Gyári számok: 59130AA000,
90467-06017-B7,90467-06017,
90467-07072-22,90467-07072,
904670707222,90657-SA6-003,
90657SA60030,94198687,B14697,
N304-13-356A,N30413356A




7103

Gyári számok: 383142-S,
383142S,90467-06054,
9046706054

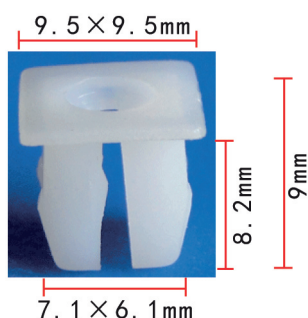

7104

 Gyári számok: 380382

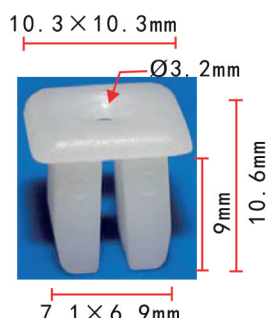

7105

Gyári számok: 6000943,
8934201263



7107

Gyári számok: 388.930-S, 388930-S,
388930S, B22186



7111

Gyári számok: 10134407, 6501925



7112

Gyári számok: 3540858



7114

Gyári számok: 10185925



7116

Gyári számok: 175 853 577 01C,
17585357701C, 20432975, 6500899,
6503800, 8048635



 
7117

Gyári számok: 10184895, 14063981,
6500911, 6501559, B13750,
N803043-S, N803043S, N803862-S



7118

Gyári számok: 14070914,
175 553 577 A, 175 853 577 A,
175553577A, 175853577A,
20433026, 4370132, B13753

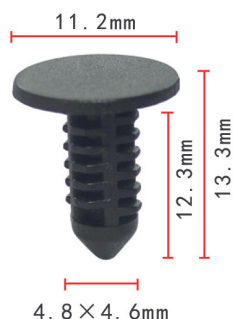

7119

Gyári számok: N803170-S,
N803170S



7120

Gyári számok: 1631564, N804379-S,
N804379S



 
7121

Gyári számok: N804349-S,
N804349S



7122

Gyári számok: 22718305,
6501067, 90467-08104,
N802734-S, N802734S

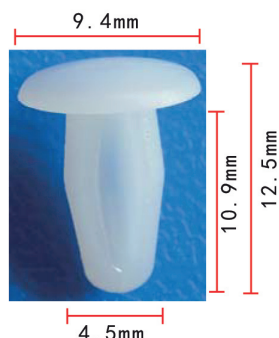

7123

Gyári számok: C1A-6220807-A,
C1A6220807A



7131

Gyári számok: 10437565



7133

Gyári számok:
001 997 42 90,
0019974290,
A 001 997 42 90,
A0019974290



 
7136

Gyári számok: 000 990 03 92,
000 990 22 92,0009900392,
167935,77 03 072 173,
7903072116,8968165,947098,
A 000 990 03 92,A 000 990 22 92



7137

Gyári számok: 25603960

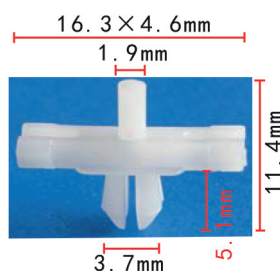

7139

Gyári számok: 591740



7141

Gyári számok: 1944537,
51 11 1 944 537,51111944537,
52 20 1 964 201



 
7158

Gyári számok: E9S-6302354-ACW,
E9S6302354ACW




7159


Gyári számok: 21094146,6501301

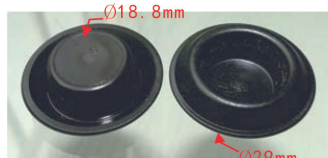


7161

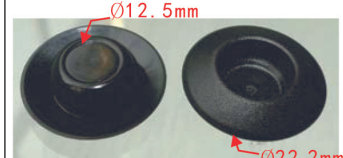 


7162

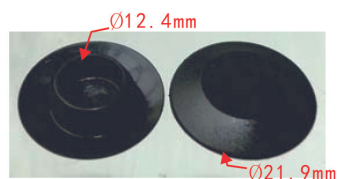 

7163

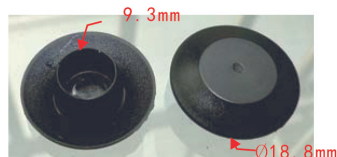 

7164

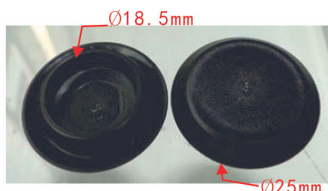 

7165



 
7167

Gyári számok: C0AB-6423240-B,
C0AB6423240B




7168

Gyári számok: 4801268

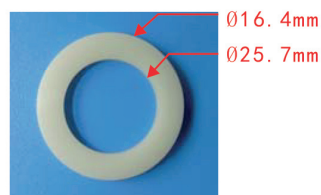

7170

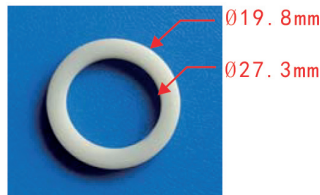 

7171



7173



7174

 


7176




7178

Gyári számok: 10262036

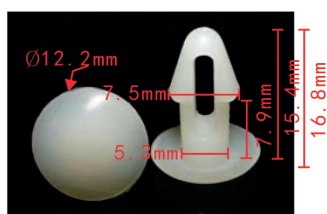


7179

 Gyári számok: 000 987 10 15,
0009871015,A 000 987 10 15,
A0009871015

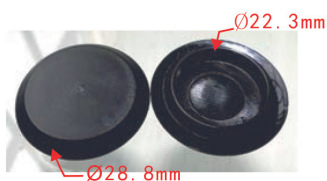


7189

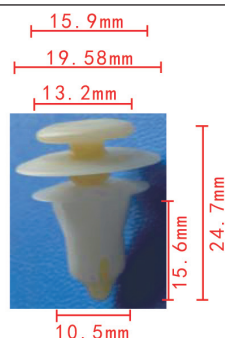 

7192

 Gyári számok: W708621-S300,
W708621S300

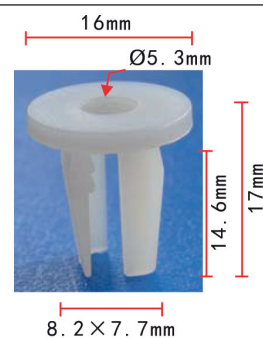


7208

Gyári számok: W700566-S300,
W700566S300




7209

 Gyári számok: 96706-H2500,
96706H2500

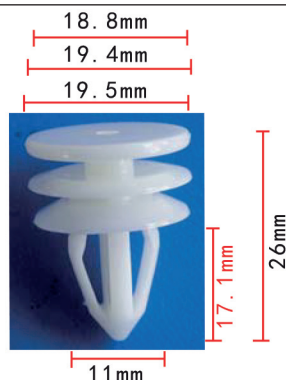

7215

 Gyári számok: 15076791

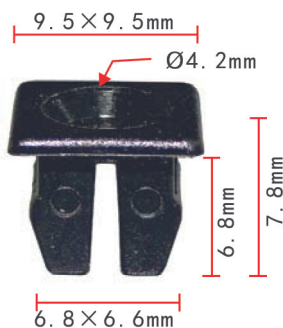

7216

Gyári számok: 175 853 674,
175853674,20475950



 
7217

Gyári számok: 2998430



7218

Gyári számok: 332364,3691590,
389358,4004569,6031321,
94530548

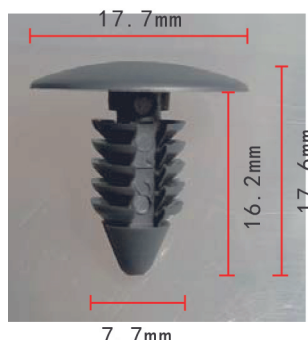


7219

Gyári számok: 480534,
6030538,6270163



7220

 Gyári számok: 8731909

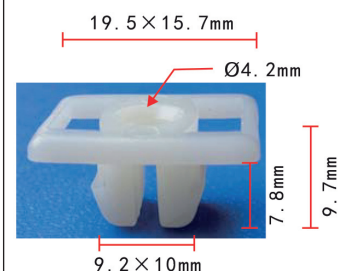

7221

Gyári számok: 380707-S,380707S



7222

Gyári számok: 20413107,388246-S,
388246S



 
7223

Gyári számok: 20413107,388246-S,
388246S




7224

Gyári számok: 387182-S,387182S

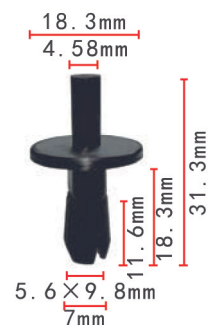

7225

 Gyári számok: 387944-S,387944S

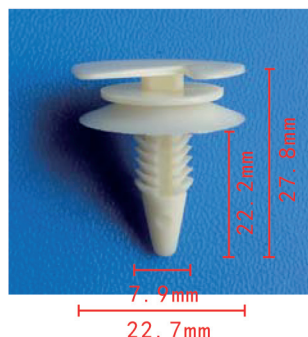

7226

Gyári számok: 3065575



7227

Gyári számok: N-800387-S,
N800387S



7228

Gyári számok: 14005089



7230

Gyári számok: 389443-S,389443S



7234

Gyári számok: 22512276



7242

Gyári számok: 14045480,6508746 AA,
6508746AA



7243

Gyári számok: 14019226,
14071289



 
7244

Gyári számok: N803716-S,
N803716S




7246

Gyári számok: 14093088,
N802781-S,N802781S,
W704340-S300,W704340S300

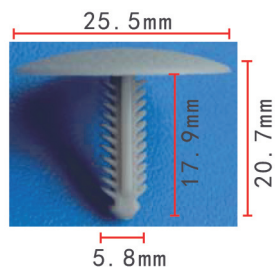


7247

 Gyári számok: N803170-S,
N803170S

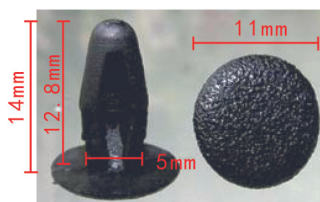


7250

 Gyári számok: 01553-00671,
01553-04083,0155304083,
66435-648-0000,664356480000,
66919-H1001,66919H1001

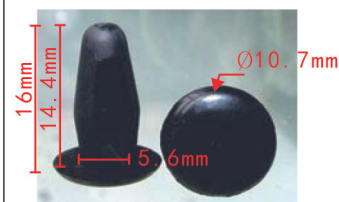


7251

 Gyári számok: 01553-00291,
0155300291,01554-00291,
992640543A,MS470073

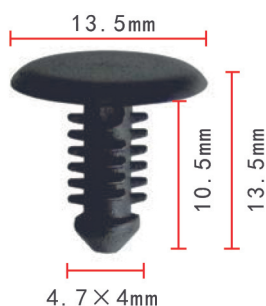

7255

 Gyári számok: 9924-90-512,
992490512

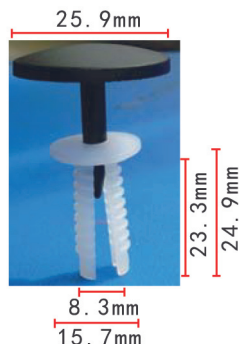

7256



 
7259

Gyári számok: N802376-S,
N802376S



7262


Gyári számok: N804837-S,
N804837S

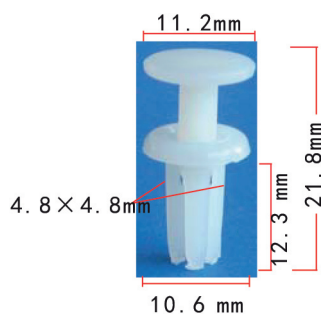

7264




 7268

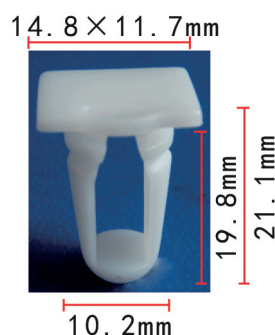

7269

 Gyári számok: 191 853 577,
191853577

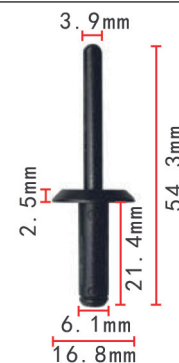


7270

Gyári számok: N804759-S,
N804759S



7271

 Gyári számok: N805231-S,
N805231S

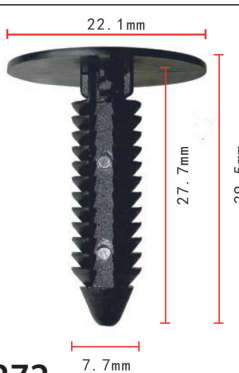

7272

Gyári számok: 22547243,3C0 863 559,
3C0863559,6501916,W706635-SSW,
W706635SSW



 
7274

Gyári számok: N804674-S,
N804674S




7275

Gyári számok: 14101262

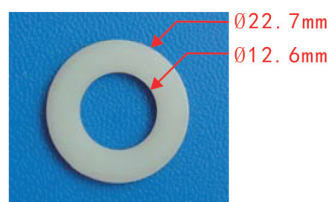

7277

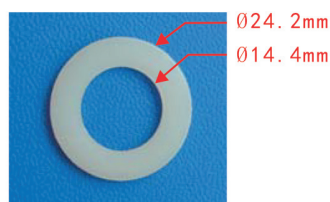 

7278



7279

Gyári számok: N808048-S,
N808048S,W705532-S300,
W705532S300



 
7282

Gyári számok: 21047094




7284

Gyári számok: N803613-S, N803613S

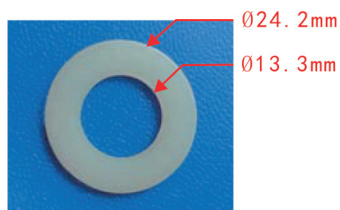

7285

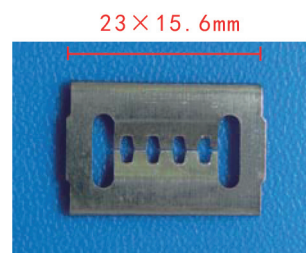 

7286

Gyári számok: F32Z-17C756-S, F32Z17C756S, GJ21-50-049, GJ2150049



7288

Gyári számok: 1160854,89414-55150,8941455150,90467-06061-1, 90467060611,90665-S2-003ZF,90665-S2-003ZQ,90665-S2-003ZR, 90665-S2-003ZU,90665-S2-003ZY,90665S2003ZF,90665S2003ZQ, 90665S2003ZR,90665S2003ZU,90665S2003ZY,94145515,M772941



7291

Gyári számok: 22566221,6501577



 
7294

Gyári számok: 01553-0192U, 015530192U,11561878, 21075686,F3LY-14570-B, F3LY-14570B,F3LY14570B



7296

Gyári számok: 01281-00441, 0128100441

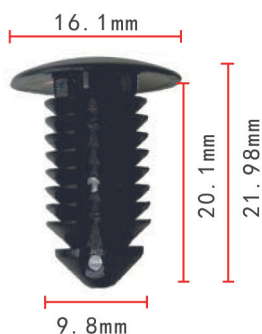

7300

Gyári számok: 6504043,N807721-S, N807721S



7303

Gyári számok: 01553-01781, 0155301781



7304

Gyári számok: 10121502,1314934, 390018S,6033082,6033840



7308

Gyári számok: 6503106



7310

Gyári számok: 6503454



 
7314

Gyári számok: 6502104



7318

Gyári számok: N807577-S, N807577S,N808331-S,N808331S

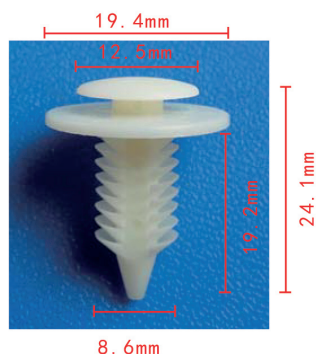


7322

Gyári számok: N805155-S,
N805155S




7329

 Gyári számok: 90505-SX0-003,
90505SX0003

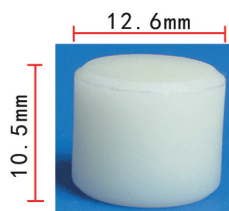

7333

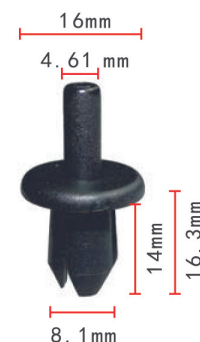 


7337

Gyári számok: 1268642,
82433417,9133417-7,91334177,
92553011803



7339

 Gyári számok: 25663903

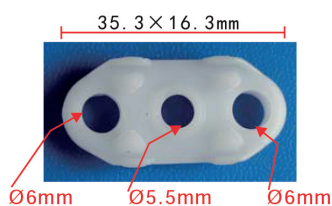

7347

Gyári számok: 1 40 640,140640,
90055545,B25694



7353



 
7354

Gyári számok: E8FZ-5802354A,
E8FZ5802354A



7355

Gyári számok: F2UZ-1602354AAA,
F2UZ1602354AAA

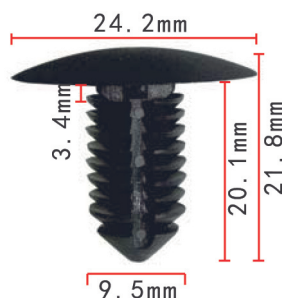

7359

Gyári számok: 22189414,
6505667AA

 


7360



7361

Gyári számok: W708035-S300,
W708035S300

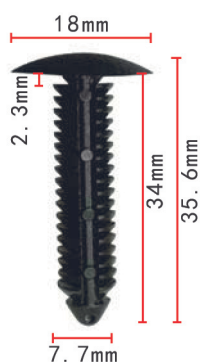

7363

Gyári számok: W709002-SAA,
W709002SAA

 


7379

Gyári számok: 14593487,
82450771



7381

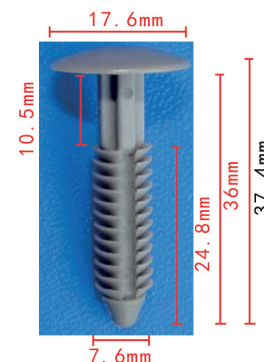

7383

Gyári számok: W705955-S300,
W705955S300

 


7387



7390

Gyári számok: 375372-S,375372S

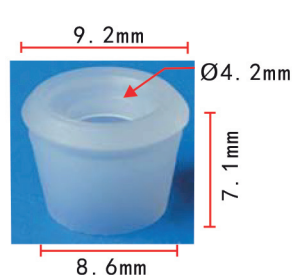


7393

Gyári számok: 000 987 10 81,
0009871081,A0009871081




7410

 Gyári számok: 0019887681,
A 001 988 76 81,A0019887681

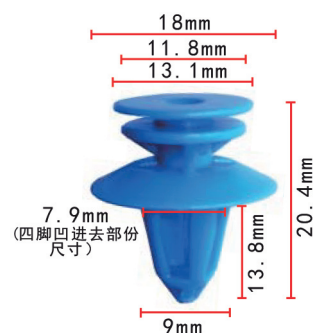


7448

 
Gyári számok: 6 099 812,6099812

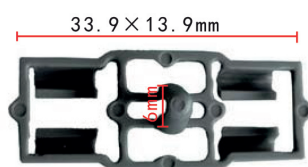

7451

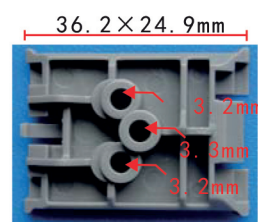 


7452

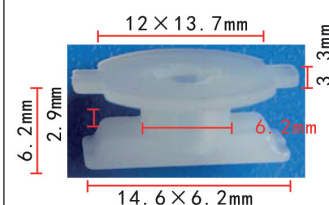 


7466

 
Gyári számok: 87719-3D000,
877193D000

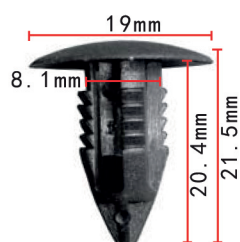

7469

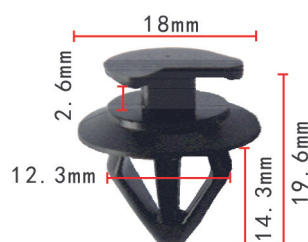 


7473

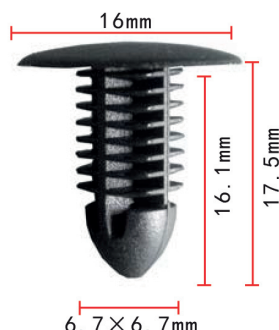 

7482

 Gyári számok: 90467-07198-C0,
90467-07198,9046707198C0,
9046707198CO

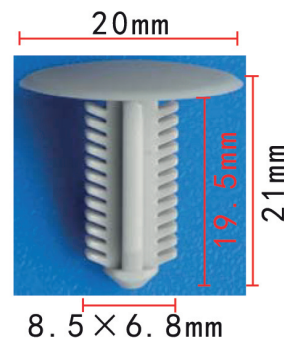

7483

Gyári számok: 63399-26050-B0,
63399-26050,6339926050,
6339926050B0



7487

Gyári számok: 62660-48600-1,
62660-48600,62660486001,
90667-671-013ZA,90667671013ZA,
MC440901



7488



7489

 


7493



7494

Gyári számok: 388904S, 438139S, 6501086

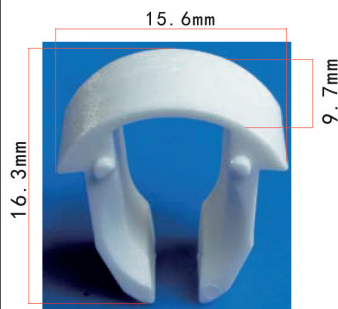

7495

Gyári számok: 4F12-9A317-AA, 4F129A317AA



 
7498



7501



7503

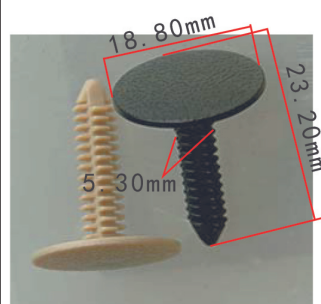

7510

 
Gyári számok: 90467-06177, 9046706177




7512




7513

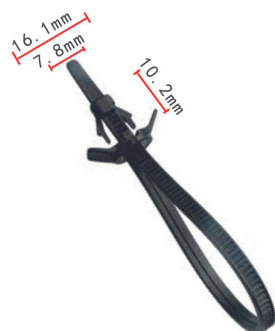

7514

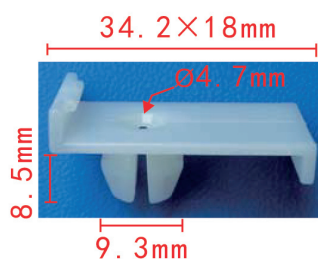 

7519

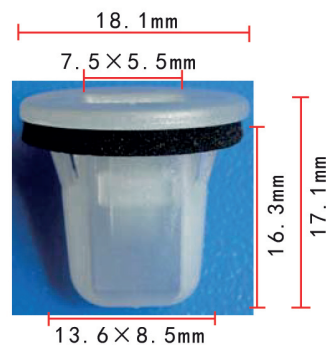 


7520



7521



 
7523

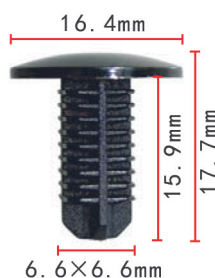

7524



 
7525

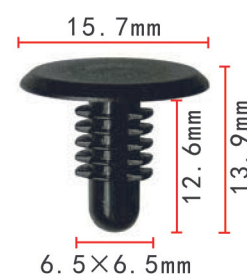


7526



 7527

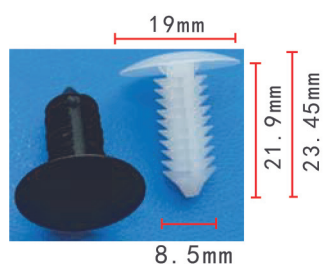

7528

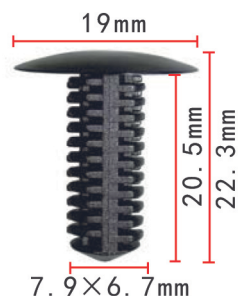 

7529

 


7533

Gyári számok: 6725950, W704218



7558

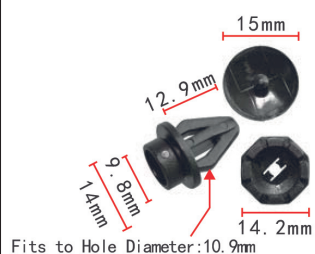

7561

 


7562

Gyári számok: 468817



7570

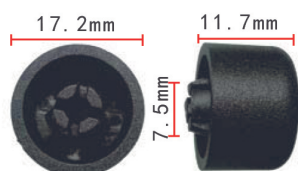

7582

Gyári számok: 014 301 485,
014301485



7585



 
7589



7590



7591

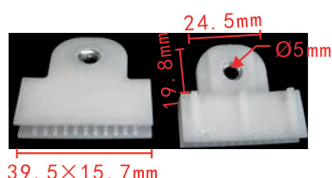

7634

 


7642




7658


Gyári számok: 4D0 807 300,
4D0807300, A81365

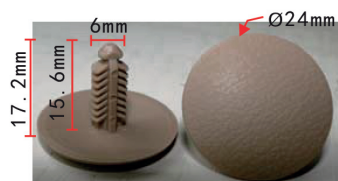

7670

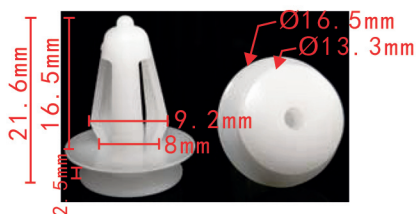 

7672

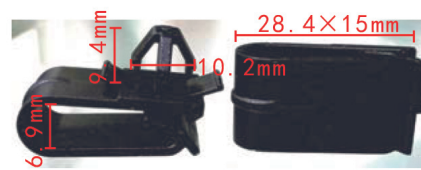 

7674

Gyári számok: 23E8.152.119, 23E8152119

 


7676



7699

Gyári számok: XP831159

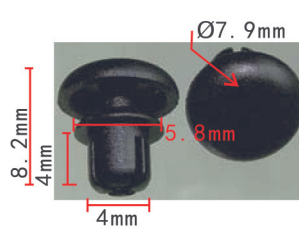


7700




7702

 Gyári számok: 00006991X7, 6991.X7, 6991X7, 999 507 497 40, A17156

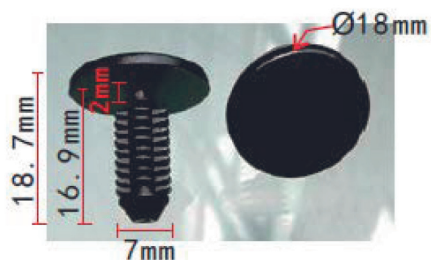


7723

 Gyári számok: 10530, 6992.95, 699295, 6999.R2

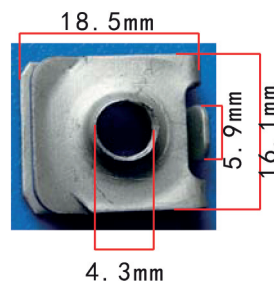

7735

 Gyári számok: 90179-06127, 9017906127

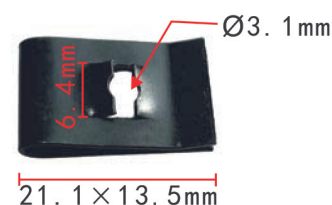


7738



7739

 Gyári számok: 90159-60477, 9015960477, C70320

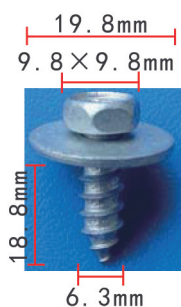

7740

Gyári számok: 90159-60383, 9015960383, C60610, N90542603



7741

Gyári számok: 90159-60498, 9015960498, C70197



7742

 


7743

Gyári számok: 90159-60496,
9015960496,C60611



7744

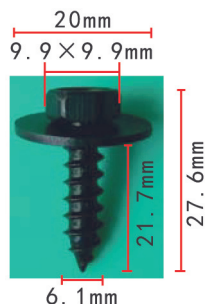


7745

Gyári számok: 90159-60525,
9015960525,C70365




 7746

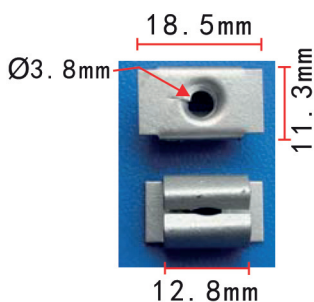

7747

 Gyári számok: 001 994 98 45,
8 50 856,850856,90270271,
A 001 994 98 45,A0019949845,
C60613

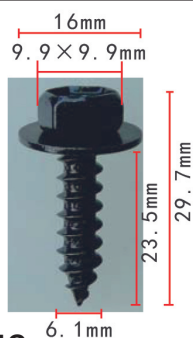


7748

Gyári számok: 90159-60488,
9015960488,C60614




7749

 Gyári számok: 15532209,C60361

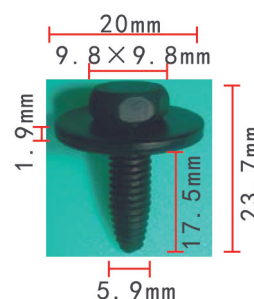


7750

 Gyári számok: 7013.AK,7013.GA,
7013AK,7013GA,C60615

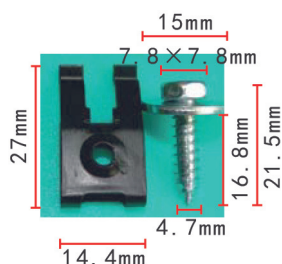


7751

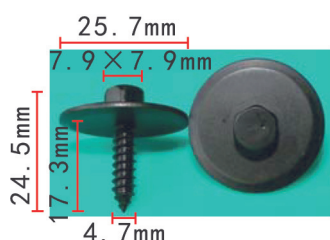 


7752

 Gyári számok: 201 990 05 36,
2019900536,A 201 990 05 36,
A2019900536,C60465

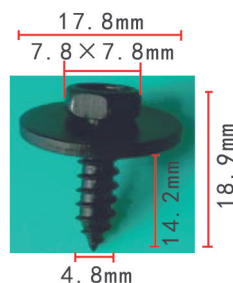


7753

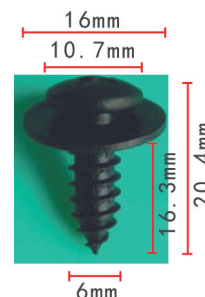 

7754




 7755

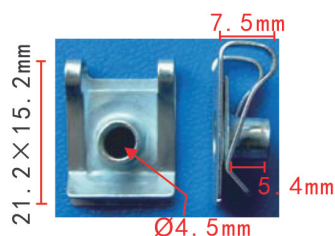


7756

 Gyári számok: 003 994 42 45,
0039944245,16100,46473571,
61 13 1 372 033,61131372033,
A 003 994 42 45,A0039944245

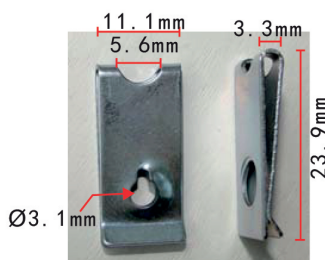


7757

 Gyári számok: 14 50 657,1450657,
16034,211837223,N 01 543 01,
N0154301

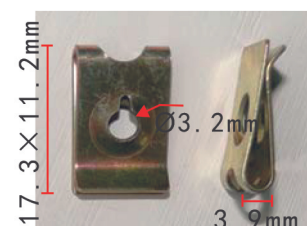


7758

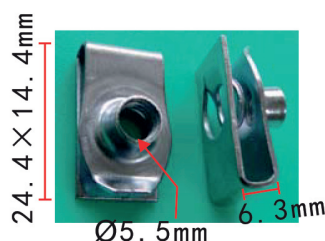 


7759

 
Gyári számok: 00152492,06100041,
06500933,06504118,11503714,
52028851AA,52028851AB,
52028851AC,C60616

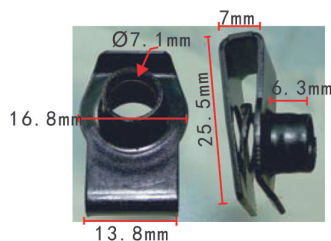


7760

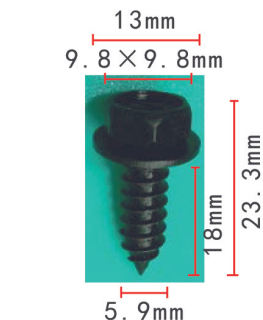 

7761

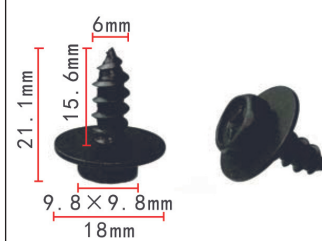 


7762

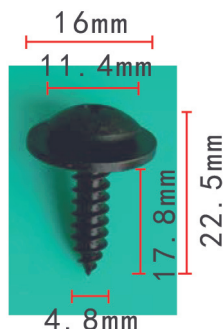 

7763

 Gyári számok: 90114-SE0-000,
90114SE0000,C60472

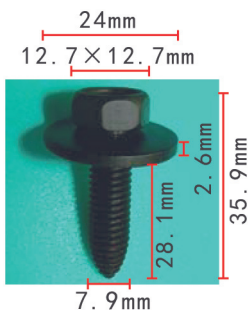


7764

Gyári számok: C60617




7765

 Gyári számok: 11093773,1388632,
1449533,2020106,C60460,
N 103 546 02,N10354602,
W700501-S303,W700501S303,
W708591-S424,W708591S424

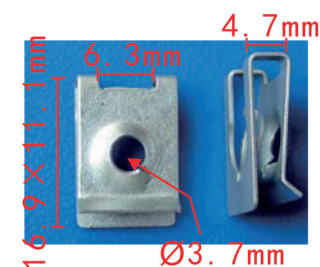


7766

 Gyári számok: 07 12 9 904 150,
07129904150,C70173,N 015 437 4,
N0154374

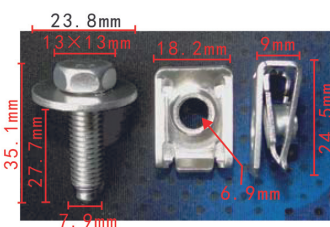

7767

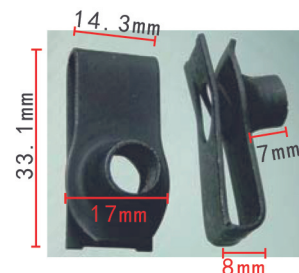 


7768




7769

 Gyári számok: 1 462 015,
1462015,C70153,W703505-S442,
W703505S442

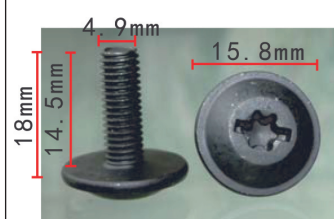


7770

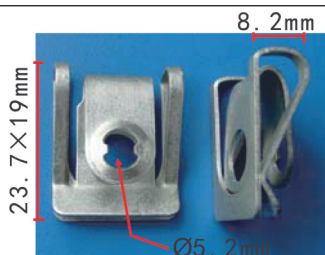 


7771

 Gyári számok: 07 14 6 981 767,
07146981767,51 71 8 212 164,
51718212164,7146981767,
8K0 805 922 A,8K0805922A,C60630

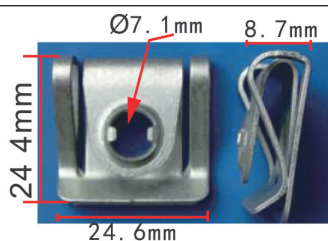

7772

 Gyári számok: 8D0 805 960,
8D0805960,C10133

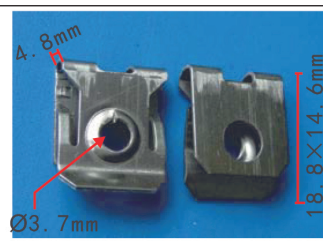

7773

Gyári számok: 1069428,
W702889-S300,W702889S300,
W715835-S300,W715835S300



7781

Gyári számok: 91508-S50-003,
91508-SM4-003,91508S50003



7783

Gyári számok: 6822.NK,6822NK,
90467-07166,90467-07201,
9046707166,9046707201,B22090,
MU000262

 


7785

Gyári számok: 11296-AG000,
11296AG000




7791

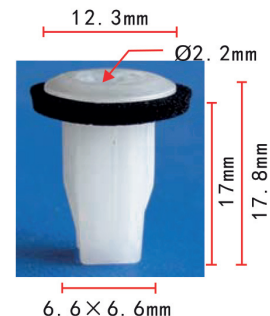

7793

 Gyári számok: 90670-SG0-003,
90670SG0003,91626-SH3-003,
91626SH3003

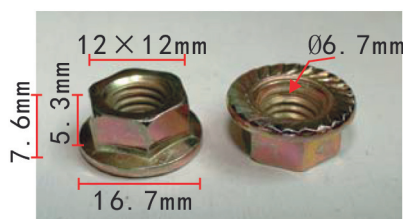

7800



7801

 


7802



7814

Gyári számok: 1239900092,A 123 990 00 92,
A1239900092

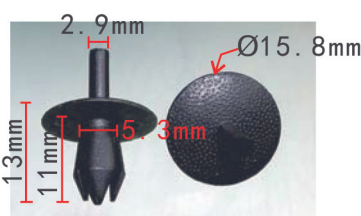


7823

Gyári számok: 0009905592,1009164,23 17 703,
2317703,3923475,500355891,90116376,
A 000 990 55 92,A0009905592,A13840,
N 102 195 01,N 102 195 02,N10219501,
N10219502,W703904-S300,W703904S300




7824

 Gyári számok: 2E1 857 784,2E1857784,
6J0 853 379,6J0853379,A 000 991 39 40,
A0009913940,C60762

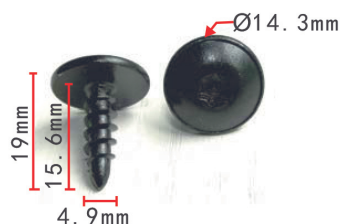


7826

 Gyári számok: N90974701

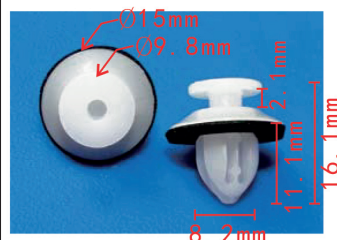


7840

 Gyári számok: 90467-A0032,
90467A0032

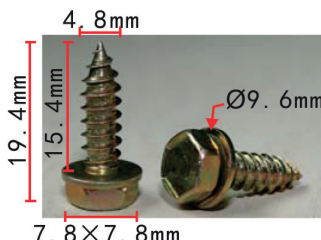

7868

 Gyári számok: 07 11 9 916 945,
07119916945,7119916945,
C70336

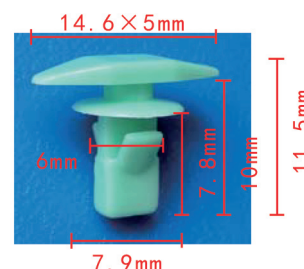

7887

Gyári számok: 91568-SR2-003,
91568SR2003,MR170639



 
7127

Gyári számok: 000 990 29 92,
1268176-3,1268176,12681763,
199 016 92 92,A 000 990 29 92



7136

Gyári számok: 000 990 03 92,
000 990 22 92,0009900392,
167935,77 03 072 173,7903072116,
8968165,947098,A 000 990 03 92,
A 000 990 22 92

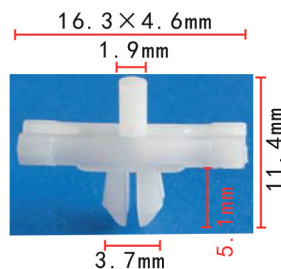

7139

Gyári számok: 591740



7147

Gyári számok: 30871878,MB020923,
MU481187



 
7323

Gyári számok: 01553-01353,01553-01503,01553-01753,01553-01763,01553-02133,
01553-03703,01553-04493,01553-06361,09409-08308-T01,0940908308T01,3533394,
57718PA020,90467-08180,90467-08182-C0,90467-08182-C0,90467-08187,9046708180,
9046708182C0,9046708182C0,9046708187,91505-SL0-003,91505-ST3-E01ZC,
91505-ST3-E01ZC,91505-ST7-003ZA,91505-ST7-003ZD,91505-ST7-003ZJ,91505SL0003,
91505ST3E01ZC,91505ST3E01ZC,91505ST7003ZA,91505ST7003ZD,91505ST7003ZJ,
M674791,M674792,M674793,MR167002,MR167003,MR167004,MR381913,MR381914,MR7204



7337

Gyári számok: 1268642,
82433417,9133417-7,
91334177,92553011803

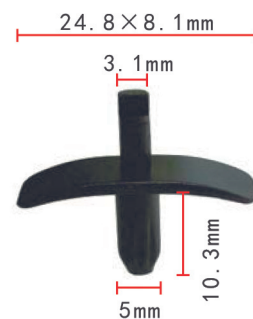

7345

Gyári számok: 1392902,9133073-8,
9133073,91330738



 
7504

Gyári számok: 30871878,MB020923,
MU481187



7530

Gyári számok: 7L6 868 243,
7L6868243,8679426,955 555 243 00,
95555524300

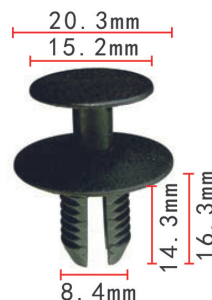

7532

Gyári számok: 201 990 02 92,
30820141,4D0 807 300 B,
4D0807300B,51 47 1 911 992,
51471911992,A 201 990 02 92,
A 201 990 02 92 90 51,M820141



 
7544

Gyári számok: 13011,1719245,
51751429,90 138 810,90138810,
94530507




7553

Gyári számok: 1 40 642,1938884,
3509416,3A0 837 461,3A0837461,
51 32 1 938 884,51321938884,
9196667,ALR1051,C10110

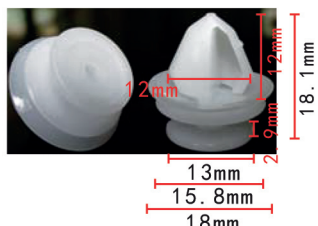


7626

 Gyári számok: 30648141,6991S6,
6991S6,6991Z1,77 01 056 846,
8337FC,8E9 867 299,C10091

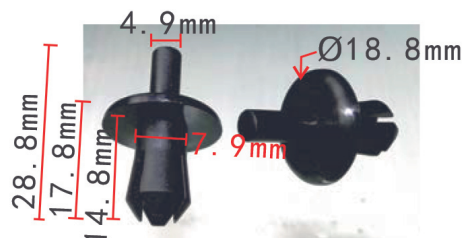

7706

 Gyári számok: 000 990 29 92,001 990 16 92,1104882,161867299,199 016 92 92,
51 47 8 170 166,51751426,90450482,9133417,94530507,A 000 990 29 92,
A 001 990 16 92,C70310

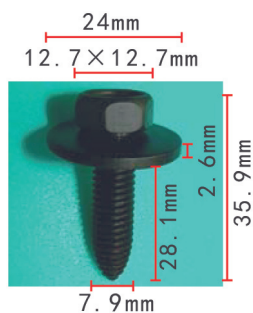


7764

Gyári számok: C60617




7797

 Gyári számok: 09409-07333-000,0940907333,3541113,
63848-01G00,63848-WA000,6384801G00,91059-FC010,
91059FC010,91545-SE0-003,91545-SE0-003W

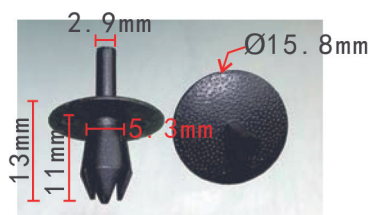


7823

 Gyári számok: 0009905592,1009164,23 17 703,2317703,
3923475,500355891,90116376,A 000 990 55 92,
A0009905592,A13840,N 102 195 01,N 102 195 02,
N10219501,N10219502,W703904-S300,W703904S300

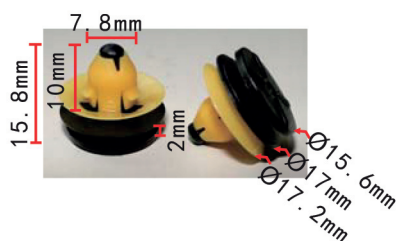


7870

 Gyári számok: 30624192,C70194

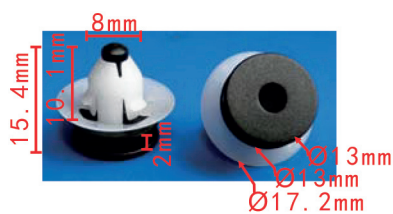


7871

 Gyári számok: 007 988 99 78,0079889978,07 13 1 503 417,
07131503417,1 232 493,1232493,30653441,8616645,
9193585,A0079889978,B23171,EYC106710,EYC500090,
EYC500120,EYC500170,EYC500280,W712417-S300,
W712417S300

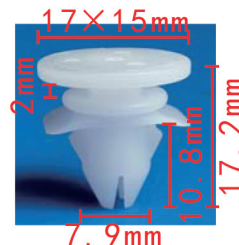

7874

 Gyári számok: 30784514,8693723,
C70118

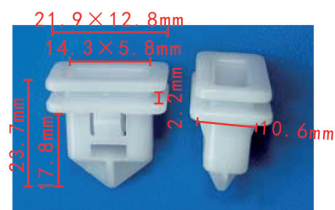

7891

Gyári számok: 31214496,8678010,
C60446



Üzletünk címe: 1117 Budapest, Hengermalom út 26.
Üzletünk nyitva tartása: hétfő-csütörtök: 8.30–17.00, péntek: 8.30–15.00
Webáruház: webshop.iharosauto.hu
Telefon: 06-1-206-2205
E-mail: info@iharosauto.hu